

BiPAC 7404V Series

**VoIP/(802.11g) ADSL2+ (VPN)
Firewall Router**

User's Manual

Table of Contents

CHAPTER 1: INTRODUCTION	4
INTRODUCTION TO YOUR ROUTER.....	4
FEATURES	4
CHAPTER 2: INSTALLING THE ROUTER	7
IMPORTANT NOTE FOR USING THIS ROUTER.....	7
PACKAGE CONTENTS.....	7
THE FRONT LEDS	8
THE REAR PORTS.....	9
CABLING	10
CHAPTER 3: BASIC INSTALLATION	11
CONNECTING YOUR ROUTER.....	12
FACTORY DEFAULT SETTINGS.....	17
<i>Web Interface (Username and Password)</i>	17
<i>Device LAN IP settings</i>	17
<i>ISP setting in WAN site</i>	17
<i>DHCP server</i>	17
<i>LAN and WAN Port Addresses</i>	17
INFORMATION FROM YOUR ISP	18
CONFIGURING WITH YOUR WEB BROWSER.....	19
CHAPTER 4: CONFIGURATION.....	20
STATUS.....	21
<i>ARP Table</i>	21
<i>Wireless Association Table (Wireless Router only)</i>	21
<i>Routing Table</i>	21
<i>DHCP Table</i>	22
<i>PPTP Status (Only the 7404VGO has VPN features)</i>	23
<i>IPSec Status (Only the 7404VGO has VPN features)</i>	23
<i>L2TP Status (Only the 7404VGO has VPN features)</i>	24
<i>Email Status</i>	24
<i>VoIP Status</i>	24
<i>VoIP Call Log</i>	25
<i>Event Log</i>	25
<i>Error Log</i>	26
<i>NAT Sessions</i>	26
<i>Diagnostic</i>	26
<i>UPnP Portmap</i>	27
QUICK START	28
CONFIGURATION.....	30
<i>LAN - Local Area Network</i>	30
Bridge Interface	30
Ethernet.....	31
IP Alias.....	31
Ethernet Client Filter	32
Wireless (Wireless Router only).....	33
Wireless Security (Wireless Router only)	35
Wireless Client / MAC Address Filter (Wireless Router only)	37

Port Setting	38
DHCP Server	39
<i>WAN - Wide Area Network</i>	<i>40</i>
ISP	40
DNS	50
ADSL	51
<i>System</i>	<i>53</i>
Time Zone	53
Remote Access	54
Firmware Upgrade	55
Backup / Restore	56
Restart Router	57
User Management	58
<i>Firewall and Access Control</i>	<i>59</i>
General Settings	60
Packet Filter	61
Intrusion Detection	68
URL Filter	70
IM / P2P Blocking	72
Firewall Log	73
<i>VPN - Virtual Private Networks (BiPAC 7404VGO Only)</i>	<i>74</i>
PPTP (Point-to-Point Tunneling Protocol)	74
IPSec (IP Security Protocol)	82
L2TP (Layer Two Tunneling Protocol)	92
<i>VoIP - Voice over Internet Protocol</i>	<i>104</i>
Wizard	105
General Settings	108
ONHOOK Setting	111
Phone Port	112
PSTN Dial Plan (Router with LINE port only)	114
VoIP Dial Plan	117
Call Features	122
Ring & Tone	123
Special Dial Codes	124
<i>QoS - Quality of Service</i>	<i>125</i>
Prioritization	125
Outbound IP Throttling (LAN to WAN)	127
Inbound IP Throttling (WAN to LAN)	128
<i>Virtual Server (also known as Port Forwarding)</i>	<i>132</i>
Add Virtual Server	133
Edit DMZ Host	134
Edit DMZ Host	135
Edit One-to-One NAT (Network Address Translation)	136
<i>Time Schedule</i>	<i>139</i>
Configuration of Time Schedule	140
<i>Advanced</i>	<i>141</i>
Static Route	141
Dynamic DNS	142
Check Email	143
Device Management	144
IGMP	147
VLAN Bridge	147
SAVE CONFIGURATION TO FLASH	151
LOGOUT	151

CHAPTER 5: TROUBLESHOOTING	152
PROBLEMS STARTING UP THE ROUTER	152
PROBLEMS WITH THE WAN INTERFACE	152
PROBLEMS WITH THE LAN INTERFACE	152
APPENDIX A: PRODUCT SUPPORT AND CONTACT INFORMATION.....	153

Copyright 2007 Billion Electric Co. Ltd.

Chapter 1: Introduction

Introduction to your Router

Welcome to the BiPAC 7404 VoIP/(802.11g) ADSL2+ (VPN) Firewall Router. The router is an “all-in-one” VoIP ADSL router, combining an ADSL modem, ADSL router, Ethernet network switch and 2 ports for Voice over IP facilities, providing everything you need to get the machines on your network connected to the Internet over your ADSL broadband connection. With features such as an ADSL Quick-Start wizard and DHCP Server, you can be online in no time at all and with a minimum of fuss and configuration, catering for first-time users to the guru requiring advanced features and control over their Internet connection and network.

Features

- Voice over IP Compliance with SIP Standard**

The router supports cost-effective, toll-quality voice calls over the Internet. It complies with the SIP Standard protocol to ensure interoperability with SIP devices and major VoIP Gateways. The VoIP ADSL router supports call waiting, silence suppression, voice activity detection (VAD), comfort noise generation (CNG), line echo cancellation, caller ID (Bell 202, V3) and so on.
- Fixed-Line Support (Router with LINE port only)**

The router integrates an RJ-11 FXO port for inbound and outbound calls transmitted through PSTN. Users can receive phone calls from PSTN while enjoying VoIP call services at the same time. In addition, the device automatically fallbacks to lifeline POTS to enable making normal phone calls when there is power outage, or when the Internet connection is down.
- Express Internet Access**

The router complies with ADSL worldwide standards. It supports downstream rate up to 12/24 Mbps with ADSL2/2+, 8Mbps with ADSL. Users can enjoy not only high-speed ADSL services but also broadband multimedia applications such as interactive gaming, video streaming and real-time audio much easier and faster than ever. It is compliant with Multi-Mode standard (ANSI T1.413, Issue 2; G.dmt (ITU G.992.1); G.lite (ITU G.992.2); G.hs (ITU G.994.1); G.dmt.bis (ITU G.992.3); G.dmt.bis.plus (ITU G.992.5)).
- Virtual Private Network (VPN) (BiPAC 7404VGO Only)**

The router allows a user to set up a VPN tunnel with a remote site directly to secure the data transmission among the connection. Users can use embedded PPTP and L2TP client/server, IKE and IPSec which are supported by this router to make a VPN connection. Or users can run the PPTP client in a PC with the router providing IPSec and PPTP pass through functions to establish a VPN connection if the user prefers to run the PPTP client in his local computer.
- 802.11g Wireless AP with WPA Support (Wireless Router only)**

With integrated 802.11g Wireless Access Point in the router, the device offers quick and easy access among wired network, wireless network and broadband connection (ADSL) with single device simplicity, and as a result, mobility to the users. In addition to 54 Mbps 802.11g data rate, it also interoperates with existing 802.11b equipment. The Wireless Protected Access (WPA1 and WPA2) and Wireless Encryption Protocol (WEP) supported features enhance the security level of data protection and access control via Wireless LAN.
- Fast Ethernet Switch**

A 4-port 10/100Mbps fast Ethernet switch is built in with automatic switching between MDI and MDI-X for 10Base-T and 100Base-TX ports. An Ethernet straight or crossover cable can be used directly for auto detection.

● **Multi-Protocol to Establish a Connection**

The router supports PPPoA (RFC 2364 - PPP over ATM Adaptation Layer 5), RFC 1483 encapsulation over ATM (bridged or routed), PPP over Ethernet (RFC 2516), and IPoA (RFC1577) to establish a connection with the ISP. The product also supports VC-based and LLC-based multiplexing.

● **Quick Installation Wizard**

A WEB GUI page is provided to set up the device quickly. With this wizard, end users can easily enter the information which they get from their ISP, then surf the Internet immediately.

● **Universal Plug and Play (UPnP) and UPnP NAT Traversal**

This protocol is used to enable simple and robust connectivity among stand-alone devices and PCs from many different vendors. It makes networking simple and affordable for users. UPnP architecture leverages TCP/IP and the Web to enable seamless proximity networking in addition to control and data transfer among networked devices. With this feature enabled, users can now connect to Net meeting or MSN Messenger seamlessly.

● **Network Address Translation (NAT)**

Allows multi-users to access outside resources such as the Internet simultaneously with one IP address/one Internet access account. Many application layer gateways (ALG) are supported, including web browser, ICQ, FTP, Telnet, E-mail, News, Net2phone, Ping, NetMeeting, IP phone and others.

● **SOHO Firewall Security with DoS and SPI**

Along with the built-in NAT natural firewall feature, the router also provides advanced hacker pattern-filtering protection. It can automatically detect and block Denial of Service (DoS) attacks. The router is built with Stateful Packet Inspection (SPI) to determine if a data packet is allowed through the firewall to the private LAN.

● **Domain Name System (DNS) Relay**

Provides an easy way to map the domain name (a friendly name for users such as www.yahoo.com) and IP address. When a local machine sets its DNS server with this router's IP address, every DNS conversion request packet from the PC to this router will be forwarded to the real DNS in the outside network.

● **Dynamic Domain Name System (DDNS)**

The Dynamic DNS service allows you to alias a dynamic IP address to a static hostname. This dynamic IP address is the WAN IP address. For example, to use the service, you must first apply for an account from a DDNS service like <http://www.dyndns.org/>. More than 5 DDNS servers are supported.

● **Quality of Service (QoS)**

QoS gives you full control over which types of outgoing data traffic should be given priority by the router, ensuring important data like gaming packets, customer information, or management information move through the router quickly, even under heavy load. The QoS features are configurable by source IP address, destination IP address, protocol, and port. You can throttle the speed at which different types of outgoing data pass through the router, to ensure P2P users don't saturate upload bandwidth, or office browsing doesn't bring client web serving to a halt. In addition, you can simply change the priority of different types of upload data and let the router sort out the actual speeds.

- **Virtual Server (“port forwarding”)**

Users can specify some services to be visible from outside users. The router can detect incoming service requests and forward either a single port or a range of ports to the specific local computer to handle it. For example, a user can assign a PC in the LAN acting as a WEB server inside and expose it to the outside network. Outside users can browse inside web servers directly while it is protected by NAT. A DMZ host setting is also provided to a local computer exposed to the outside network, Internet.
- **Rich Packet Filtering**

Not only filters the packet based on IP address, but also based on Port numbers. It will filter packets from and to the Internet, and also provides a higher level of security control.
- **Dynamic Host Configuration Protocol (DHCP) Client and Server**

In the WAN site, the DHCP client can get an IP address from the Internet Service Provider (ISP) automatically. In the LAN site, the DHCP server can allocate a range of client IP addresses and distribute them, including IP address, subnet mask as well as DNS IP address to local computers. It provides an easy way to manage the local IP network.
- **Static and RIP1/2 Routing**

Provides has routing capability and supports easy static routing table or RIP1/2 routing protocol.
- **Simple Network Management Protocol (SNMP)**

Provides an easy way to remotely manage the router via SNMP.
- **Web based GUI**

A web based GUI is provided for configuration and management. It is user-friendly and comes with on-line help. It also supports remote management capability for remote users to configure and manage this product.
- **Firmware Upgradeable**

Device can be upgraded to the latest firmware through the WEB based GUI.
- **Rich Management Interfaces**

The device supports flexible management interfaces with local console port, LAN port, and WAN port. Users can use terminal applications through the console port to configure and manage the device, or Telnet, WEB GUI, and SNMP through LAN or WAN ports to configure and manage the device.

Chapter 2: Installing the Router

Important note for using this router



Warning

- ✓ Do not use this router in high humidity or high temperatures.
- ✓ Do not use the same power source for this router as other equipment.
- ✓ Do not open or repair the case yourself. If this router overheats, turn off the power immediately and have it repaired at a qualified service center.
- ✓ Avoid using this product and all accessories outdoors.




Attention

- ✓ Place this router on a stable surface.
- ✓ Only use the power adaptor that comes with the package. Using a different voltage rating power adaptor may damage this router.

Package Contents


- VoIP/(802.11g) ADSL2+ (VPN) Firewall Router
- CD-ROM containing the online manual
- RJ-11 ADSL/telephone Cable
- Ethernet (CAT-5 LAN) Cable
- Console tool kit
- AC-DC power adapter (12VDC, 1.2A)
- A detachable antenna
- Quick Start Guide

The Front LEDs

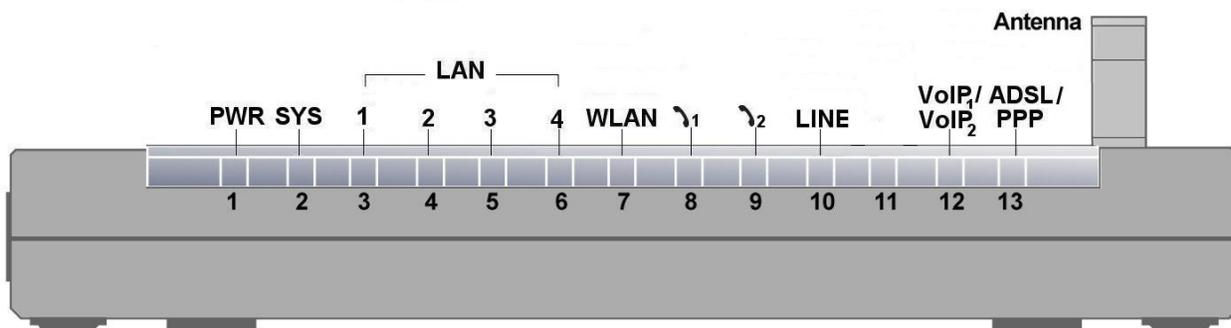

LED		Meaning
1	PWR	Lit when power is ON.
2	SYS	Lit when the system is ready.
3 – 6	LAN Port 1X — 4X (RJ-45 connector)	Lit when connected to an Ethernet device. Green for 100Mbps; Orange for 10Mbps. Blinking when data is Transmitted / Received.
7	WLAN <i>(Wireless Router only)</i>	Lit green when the wireless connection is established. Flashes when sending/receiving data.
8 – 9	Phone 1X — 2X (RJ-11 connector)	Lit green when the phone is off-hook.
10	LINE <i>(Router with LINE port only)</i>	Lit when the inbound and outbound calls transmitted through PSTN.
12	VoIP Port 1X — 2X (RJ-11 connector)	Lit when the SIP Registration is OK. Green for Phone 1; Orange for Phone 2. <i>Note: Orange also referring to when both Phone 1 and 2 are registered OK at the same time.</i>
13	ADSL/PPP	Lit Green when successfully connected to an ADSL DSLAM, (“line synch”). Lit Orange when there is a PPPoA / PPPoE connection.

The Rear Ports

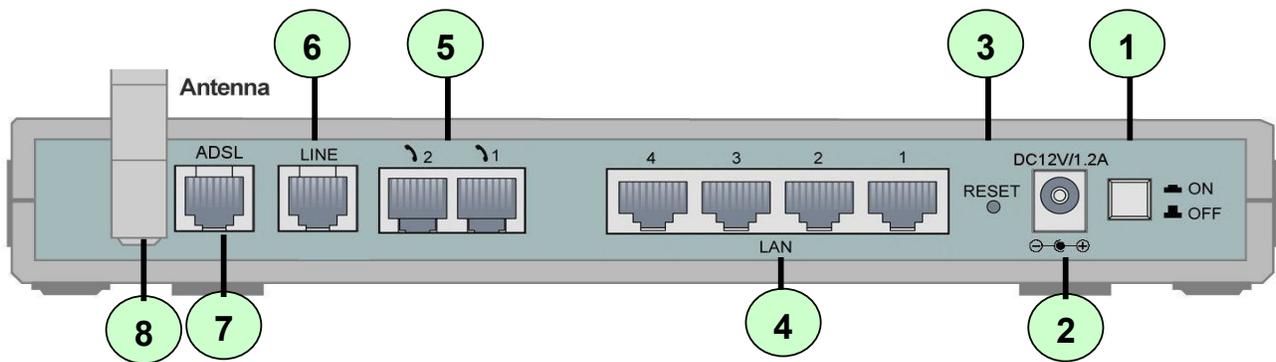

NOTE:


The Ethernet Port # 4 can be used as a console port. You need a special console tool which already includes in the package to connect with LAN port 4 and PC's RS-232 port (9-pin serial port).

Port		Meaning
1	Power Switch	Power ON/OFF switch
2	PWR	Connect the supplied power adapter to this jack.
3	RESET	To be sure the device is being turned on → press RESET button for: 1-3 seconds: quick reset the device. 6 seconds above, and power off, power on the device: restore to factory default settings. (Cannot login to the router or forgot your Username/Password. Press the button for more than 6 seconds). Caution: After pressing the RESET button for more than 6 seconds, to be sure you power cycle the device again.
4	LAN 1X — 4X (RJ-45 connector)	Connect a UTP Ethernet cable (Cat-5 or Cat-5e) to one of the LAN ports when connecting to a PC or an office/home network of 10Mbps or 100Mbps. Caution: Port 4 can be either a LAN or Console port at a time but not both.
4	Console Port (as LAN port 4) (RJ-45 connector)	Connect a UTP Ethernet cable (Cat-5 or Cat-5e) to one of the LAN ports when connecting to a PC or an office/home network of 10Mbps or 100Mbps. Caution: Port 4 can be either a LAN or Console port at a time but not both.
5	Phone 1X — 2X (RJ-11 connector)	Connect RJ-11 cable to this port when connecting to an analog phone set.
6	LINE (Router with LINE port only)	Connect RJ-11 cable to this port when connecting to the telephone wall jack.

7	ADSL	Connect the supplied RJ-11 (“telephone”) cable to this port when connecting to the ADSL/telephone network.
8	Antenna (Wireless Router only)	Connect the detachable antenna to this port.

Cabling

One of the most common causes of problems is bad cabling or ADSL line(s). Make sure that all connected devices are turned on. On the front of the product is a bank of LEDs. Verify that the LAN Link and ADSL line LEDs are lit. If they are not, verify that you are using the proper cables.

Ensure that all other devices connected to the same telephone line as your router (e.g. telephones, fax machines, analogue modems) have a line filter connected between them and the wall socket (unless you are using a Central Splitter or Central Filter installed by a qualified and licensed electrician), and ensure that all line filters are correctly installed and the right way around. Missing line filters or line filters installed the wrong way around can cause problems with your ADSL connection, including causing frequent disconnections.

Chapter 3: Basic Installation

The router can be configured with your web browser. A web browser is included as a standard application in the following operating systems: Linux, Mac OS, Windows 98/NT/2000/XP/Me, etc. The product provides an easy and user-friendly interface for configuration.

Please check your PC's network components. The TCP/IP protocol stack and Ethernet network adapter must be installed. If not, please refer to your Windows-related or other operating system manuals.

There are ways to connect with the router, either through an external repeater hub to the router or directly connecting with PCs. However, be sure your PCs have an Ethernet interface installed properly prior to connecting to the router device. You ought to configure your PCs to obtain an IP address through a DHCP server or a fixed IP address that must be in the same subnet as the router. The default IP address of the router is **192.168.1.254** and the subnet mask is **255.255.255.0** (i.e. any attached PC must be in the same subnet, and have an IP address in the range of 192.168.1.1 to 192.168.1.253). The best and easiest way is to configure the PC to get an IP address automatically from the router using DHCP. If you encounter any problem accessing the router's web interface it may also be advisable to **uninstall** any kind of software firewall on your PCs, as they can cause problems accessing the 192.168.1.254 IP address of the router. Users should make their own decisions on how to best protect their network.


Please follow the steps below for your PC's network environment installation.



Any TCP/IP capable workstation can be used to communicate with or through the router. To configure other types of workstations, please consult the manufacturer's documentation.

Connecting Your Router

1. Connect this router to a **LAN** (Local Area Network) and the ADSL/telephone (**ADSL**) network.
2. Power on the device.
3. Make sure the **PWR** and **SYS** LEDs are lit steadily and that the **LAN** LED is lit.
4. Connect an RJ11 cable to VoIP port when connecting to an analog phone set.
5. Connect RJ-11 cable to LINE Port when connecting to the telephone wall jack.

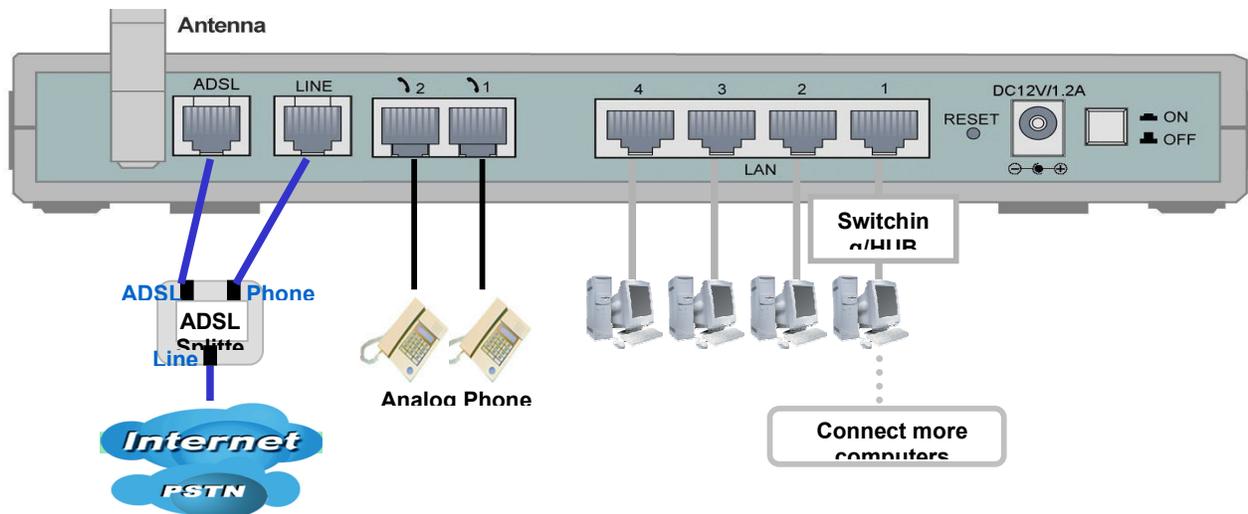

Configuring PCs in Windows in Window XP

1. Go to **Start / Control Panel** (in Classic View). In the Control Panel, double-click **Network Connections**.
2. Double-click **Local Area Connection**. (See Figure 3.1)



Figure 3.1: LAN Area Connection

3. In the **LAN Area Connection Status** window, click **Properties**. (See Figure 3.2)

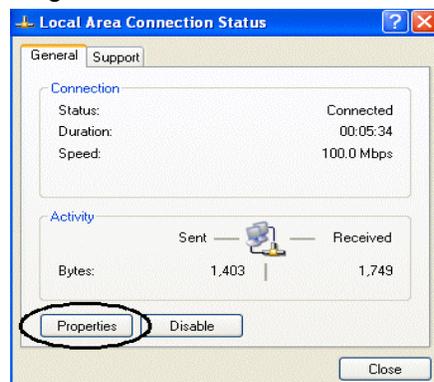


Figure 3.2: LAN Connection Status

4. Select **Internet Protocol (TCP/IP)** and click **Properties**. (See Figure 3.3)

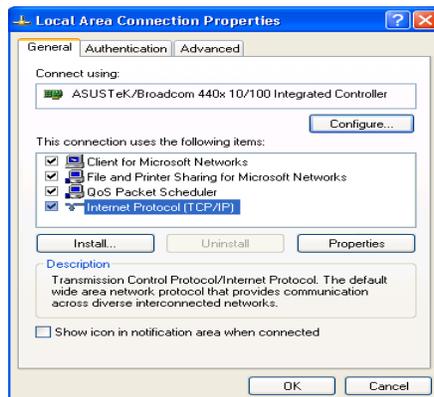


Figure 3.3: TCP / IP

5. Select the **Obtain an IP address automatically** and **Obtain DNS server address automatically** radio buttons. (See Figure 3.4)
6. Click **OK** to finish the configuration.

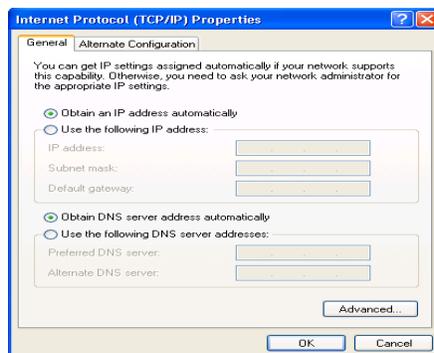


Figure 3.4: IP Address & DNS Configuration

Configuring PCs in Windows 2000

1. Go to **Start / Settings / Control Panel**. In the Control Panel, double-click **Network and Dial-up Connections**.
2. Double-click **Local Area ("LAN") Connection**. (See Figure 3.5)
3. In the **LAN Area Connection Status** window, click **Properties**. (See Figure 3.6)
4. Select **Internet Protocol (TCP/IP)** and click **Properties**. (See Figure 3.7)
5. Select the **Obtain an IP address automatically** and **Obtain DNS server address automatically** radio buttons. (See Figure 3.8)
6. Click **OK** to finish the configuration.

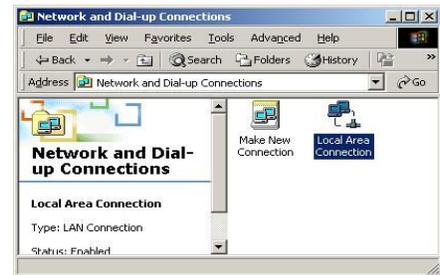


Figure 3.5: LAN Area Connection

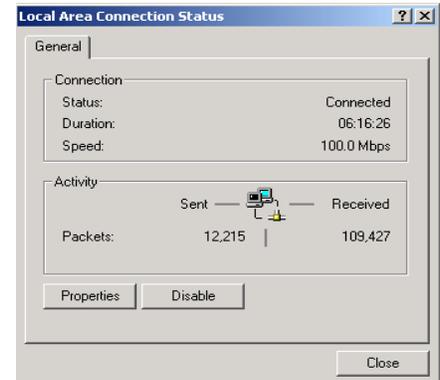


Figure 3.6: LAN Connection Status

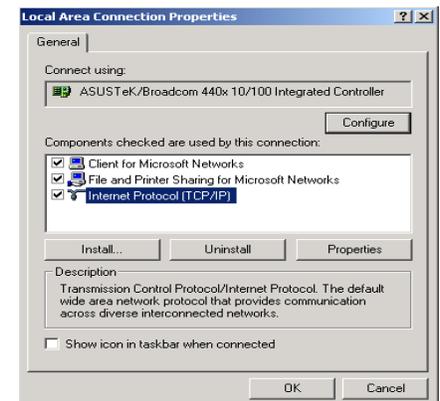


Figure 3.7: TCP / IP

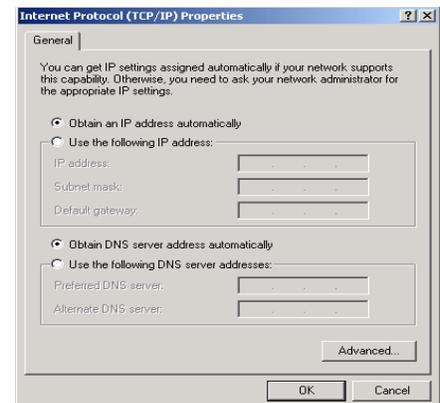


Figure 3.8: IP Address & DNS Configuration

Configuring PC in Windows 95/98/ME

1. Go to **Start / Settings / Control Panel**. In the Control Panel, double-click **Network** and choose the **Configuration** tab.
2. Select **TCP / IP -> NE2000 Compatible**, or the name of any Network Interface Card (NIC) in your PC. (See Figure 3.9)
3. Click **Properties**.

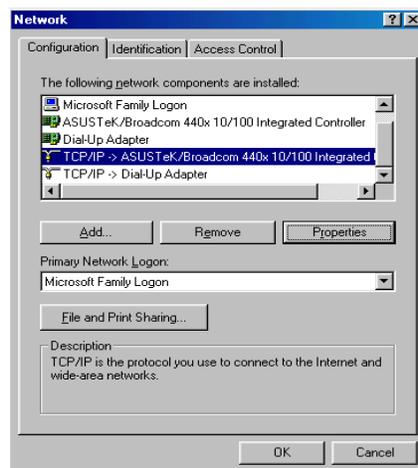


Figure 3.9: TCP / IP

4. Select the **IP Address** tab. In this page, click the Obtain an IP address automatically radio button. (See Figure 3.10)

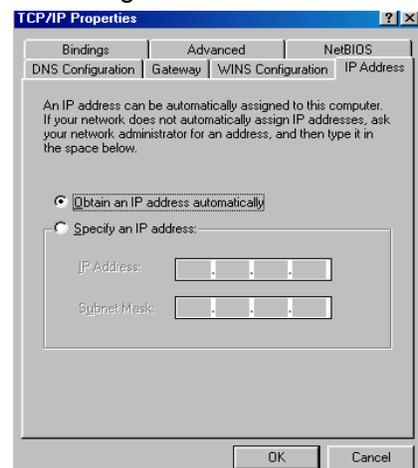


Figure 3.10: IP Address

5. Then select the **DNS Configuration** tab. (See Figure 3.11)
6. Select the **Disable DNS** radio button and click **OK** to finish the configuration.

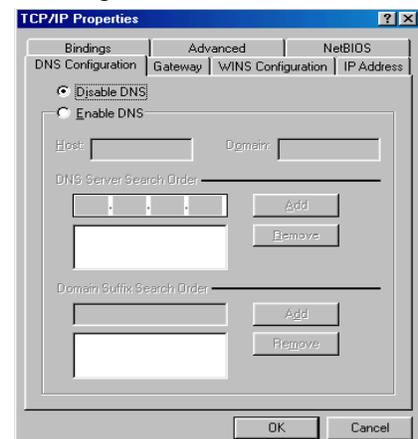


Figure 3.11: DNS Configuration

Configuring PC in Windows NT4.0

1. Go to **Start / Settings / Control Panel**. In the Control Panel, double-click **Network** and choose the **Protocols** tab.
2. Select **TCP/IP Protocol** and click **Properties**. (See Figure 3.12)

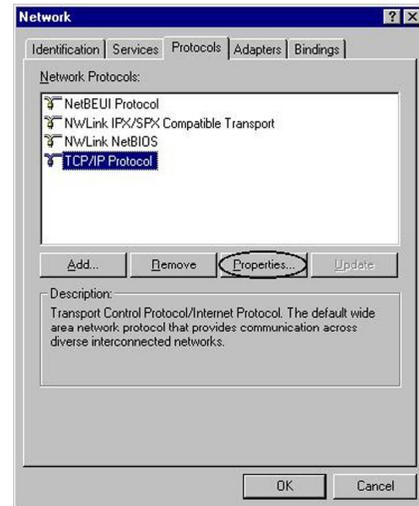


Figure 3.12: TCP / IP

3. Select the **Obtain an IP address from a DHCP server** radio button and click **OK**. (See Figure 3.13)

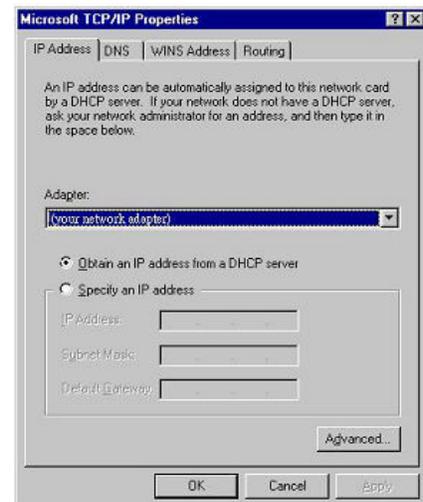


Figure 3.13: IP Address

Factory Default Settings

Before configuring your, you need to know the following default settings.

Web Interface (Username and Password)

- ▶ Username: admin
- ▶ Password: admin

The default username and password are “admin” and “admin” respectively.



If you ever forget the username/password to login to the router, you may press the RESET button up to 6 seconds to restore the factory default settings.

Caution: After pressing the RESET button for more than 6 seconds, to be sure you power cycle the device again.

Attention

Device LAN IP settings

- ▶ IP Address: 192.168.1.254
- ▶ Subnet Mask: 255.255.255.0

ISP setting in WAN site

- ▶ PPPoE

DHCP server

- ▶ DHCP server is enabled.
- ▶ Start IP Address: 192.168.1.100
- ▶ IP pool counts: 100

LAN and WAN Port Addresses

The parameters of LAN and WAN ports are pre-set in the factory. The default values are shown below.

LAN Port		WAN Port
IP address	192.168.1.254	The PPPoE function is <i>enabled</i> to automatically get the WAN port configuration from the ISP.
Subnet Mask	255.255.255.0	
DHCP server function	Enabled	
IP addresses for distribution to PCs	100 IP addresses continuing from 192.168.1.100 through 192.168.1.199	

Information from your ISP

Before configuring this device, you have to check with your ISP (Internet Service Provider) to find out what kind of service is provided such as DHCP (Obtain an IP Address Automatically, Static IP (Fixed IP Address) and PPPoE.

Gather the information as illustrated in the following table and keep it for reference.

PPPoE	VPI/VCI, VC / LLC-based multiplexing, Username, Password, Service Name, and Domain Name System (DNS) IP address (it ca be automatically assigned by your ISP when you connect or be set manually).
PPPoE / PPPoE with Pass-through	VPI/VCI, VC / LLC-based multiplexing, Username, Password, Service Name, and Domain Name System (DNS) IP address (it ca be automatically assigned by your ISP when you connect or be set manually). In addition, additional WAN address can be assigned using PPPoE dialer.
PPPoA	VPI/VCI, VC / LLC-based multiplexing, Username, Password and Domain Name System (DNS) IP address (it ca be automatically assigned by your ISP when you connect or be set manually).
RFC 1483 Bridged	VPI/VCI, VC / LLC-based multiplexing to use Bridged Mode.
RFC 1483 Routed	VPI/VCI, VC / LLC-based multiplexing, IP address, Subnet mask, Gateway address, and Domain Name System (DNS) IP address (it is a fixed IP address).
IPoA Routed (IP over ATM)	VPI/VCI, VC / LLC-based multiplexing, IP address, Subnet mask, Gateway address, and Domain Name System (DNS) IP address (it is a fixed IP address).

Configuring with your Web Browser

Open your web browser, enter the IP address of your router, which by default is **192.168.1.254**, and click **Go**, a user name and password window prompt will appear. **The default username and password are “admin” and “admin” respectively. (See Figure 3.14)**



Figure 3.14: User name & Password Prompt Window

Congratulation! You are now successfully logged on to the VoIP/(802.11g) ADSL Router!

Chapter 4: Configuration

At the configuration homepage, the left navigation pane where bookmarks are provided links you directly to the desired setup page, including:

- **Status**
 - [ARP Table](#)
 - [Wireless Association](#)
 - [Routing Table](#)
 - [DHCP Table](#)
 - [PPTP Status](#)
 - [IPSec Status](#)
 - [L2TP Status](#)
 - [Email Status](#)
 - [VoIP Status](#)
 - [VoIP Call Log](#)
 - [Event Log](#)
 - [Error Log](#)
 - [NAT Sessions](#)
 - [Diagnostic](#)
 - [UPnP Portmap](#)
- **[Quick Start](#)**
- **Configuration**
 - [LAN](#)
 - [WAN](#)
 - [System](#)
 - [Firewall](#)
 - [VPN](#)
 - [VoIP](#)
 - [QoS](#)
 - [Virtual Server](#)
 - [Time Schedule](#)
 - [Advanced](#)
- **[Save Config to FLASH](#)**
- **Language** (provides user interface in English and French languages)
- **[Logout](#)**

Please click the links to see the relevant sections of this manual for detailed instructions on how to configure the VoIP Router.

Status

ARP Table

This section displays the router's ARP (Address Resolution Protocol) Table, which shows the mapping of Internet (IP) addresses to Ethernet (MAC) addresses. This is useful as a quick way of determining the MAC address of the network interface of your PCs to use with the router's **Firewall – MAC Address Filter** function. See the Firewall section of this manual for more information on this feature.

ARP Table			
IP <> MAC List			
IP Address	MAC Address	Interface	Static
192.168.1.187	00:0c:6e:bd:11:6d	iplan	no

IP Address: A list of IP addresses of devices on your LAN (Local Area Network).

MAC Address: The MAC (Media Access Control) addresses for each device on your LAN.

Interface: The interface name (on the router) that this IP Address connects to.

Static: Static status of the ARP table entry:

- ☉ “no” for dynamically-generated ARP table entries.
- ☉ “yes” for static ARP table entries added by the user.

Wireless Association Table (Wireless Router only)

Wireless Association Table	
Wireless client's MAC address and the corresponding IP address	
IP Address	MAC
192.168.1.100	00:04:23:73:9a:86

IP Address: It is IP address of wireless client that joins this network.

MAC: The MAC address of wireless client.

Routing Table

Routing Table				
Routing Table				
Valid	Destination	Netmask	Gateway/Interface	Cost
✓	0.0.0.0	0.0.0.0	192.168.21.1	1

RIP Routing Table			
Destination	Netmask	Gateway	Cost

Routing Table

Valid: It indicates a successful routing status.

Destination: The IP address of the destination network.

Netmask: The destination Netmask address.

Gateway/Interface: The IP address of the gateway or existing interface that this route will use.

Cost: The number of hops counted as the cost of the route.

RIP Routing Table

Destination: The IP address of the destination network.

Netmask: The destination Netmask address.

Gateway: The IP address of the gateway that this route will use.

Cost: The number of hops counted as the cost of the route.

DHCP Table

DHCP Table		
Type		
Leased ▶	Expired ▶	Permanent ▶

Leased: The DHCP assigned IP addresses information.

IP Address: A list of IP addresses of devices on your LAN (Local Area Network).

Expired: The expired IP addresses information.

Permanent: The fixed host mapping information

Leased Table

Leased Table			
IP Address	MAC Address	Client Host Name	Expiry

IP Address: The IP address that assigned to client.

MAC Address: The MAC address of client.

Client Host Name: The Host Name (Computer Name) of client.

Expiry: The current lease time of client.

Expired Table

Expired Table			
IP Address	MAC Address	Client Host Name	Expiry

Please refer the **Leased Table**.

Permanent Table

Permanent Table			
Name	IP Address	MAC Address	Maximum Lease Time

Name: The name you assigned to the Permanent configuration.

IP Address: The fixed IP address for the specify client.

MAC Address: The MAC Address that you want to assign the fixed IP address.

Maximum Lease Time: The maximum lease time interval you allow to clients.

PPTP Status (Only the 7404VGO has VPN features)

This shows details of your configured PPTP VPN Connections.

PPTP Status

VPN/PPTP for Remote Access Application

Name	Type	Enable	Active	Tunnel Connected	Call Connected	Encryption
------	------	--------	--------	------------------	----------------	------------

VPN/PPTP for LAN-to-LAN Application

Name	Type	Enable	Active	Tunnel Connected	Call Connected	Encryption
------	------	--------	--------	------------------	----------------	------------

Name: The name you assigned to the particular PPTP connection in your VPN configuration.

Type: The type of connection (dial-in/dial-out).

Enable: Whether the connection is currently enabled.

Active: Whether the connection is currently active.

Tunnel Connected: Whether the VPN Tunnel is currently connected.

Call Connected: If the Call for this VPN entry is currently connected.

Encryption: The encryption type used for this VPN connection.

IPSec Status (Only the 7404VGO has VPN features)

This shows details of your configured IPSec VPN Connections.

IPSec Status

VPN Tunnels

Name	Active	Connection State	Statistics	Local Subnet	Remote Subnet	Remote Gateway	SA
------	--------	------------------	------------	--------------	---------------	----------------	----

Name: The name you assigned to the particular VPN entry.

Active: Whether the VPN Connection is currently Active.

Connection State: Whether the VPN is Connected or Disconnected.

Statistics: Statistics for this VPN Connection.

Local Subnet: The local IP Address or Subnet used.

Remote Subnet: The Subnet of the remote site.

Remote Gateway: The Remote Gateway IP address.

SA: The Security Association for this VPN entry.

L2TP Status (Only the 7404VGO has VPN features)

This shows details of your configured L2TP VPN Connections.

L2TP Status						
VPN/L2TP for Remote Access Application						
Name	Type	Enable	Active	Tunnel Connected	Call Connected	Encryption
VPN/L2TP for LAN-to-LAN Application						
Name	Type	Enable	Active	Tunnel Connected	Call Connected	Encryption

Name: The name you assigned to the particular L2TP connection in your VPN configuration.

Type: The type of connection (dial-in/dial-out).

Enable: Whether the connection is currently enabled.

Active: Whether the connection is currently active.

Tunnel Connected: Whether the VPN Tunnel is currently connected.

Call Connected: If the Call for this VPN entry is currently connected.

Encryption: The encryption type used for this VPN connection.

Email Status

Details and status for the Email Account you have configured the router to check. Please see the **Advanced** section of this manual for details on this function.

Email Status	
Email Account	
Account Name	username
POP3 Mail Server	pop3.mail.com
Email Status	No mail
<input type="button" value="Reset Status"/> <input type="button" value="Check Now"/>	

VoIP Status

Here you can check details and status of VoIP Account you have configured.

Please see the **VoIP Configuration** section for more details.

VoIP Status				
Phone Port				
Index	Phone Number	User Domain/Realm	Display Name	Registered
1				unknown
2				unknown
<input type="button" value="Refresh"/>				

VoIP Call Log

This page displays the detailed log of each call. The maximum number of record is 30 entries for each phone port. (Dialed Calls List: 10, Received Calls List: 10, Missed Calls List: 10).

VoIP Call Log

Phone Port 1  Phone Port 2 

Phone Port 1

Dialed Calls List

Index	Date & Time	Phone Number	Start Time	End Time	Duration
-------	-------------	--------------	------------	----------	----------

Received Calls List

Index	Date & Time	Phone Number	Start Time	End Time	Duration
-------	-------------	--------------	------------	----------	----------

Missed Calls List

Index	Date & Time	Phone Number	Start Time	End Time	Duration
-------	-------------	--------------	------------	----------	----------

Event Log

This page displays the router's Event Log entries. Major events are logged to this window, such as when the router's ADSL connection is disconnected, as well as Firewall events when you have enabled Intrusion or Blocking Logging in the **Configuration – Firewall** section of the interface. Please see the **Firewall** section of this manual for more details on how to enable Firewall logging.

Event Log

```

----- system log buffer head -----
Jan 01 00:00:11 home.gateway:im:none: Changed iplan IP address to 192.168.1.254
Jan 01 22:00:20 home.gateway:im:none: Reset SNMP community to factory default
settings
----- system log buffer tail -----

```

Error Log

Any errors encountered by the router (e.g. invalid names given to entries) are logged to this window.

Error Log

Error Log (*times are in seconds since last reboot*)

When	Process	Error Log
------	---------	-----------

NAT Sessions

This section lists all current NAT sessions between interface of types external (WAN) and internal (LAN).

NAT Sessions

Active NAT sessions between interface of types external and internal:

Prot	Local IP: Port	local/public	Remote IP: Port	Idle (sec.)
TCP	192.168. 1.201:	1110/ 1110	64. 94.110. 12: 80	29
TCP	192.168. 1. 99:	1982/ 1982	210.184.108.126: 80	729
TCP	192.168. 1. 99:	1979/ 1979	207. 68.178.239: 80	542
TCP	192.168. 1.202:	2011/ 2011	207. 46.107. 27: 1863	21
TCP	192.168. 1.100:	1166/ 1166	207. 46.106. 90: 1863	18
TCP	192.168. 1. 99:	1969/ 1969	207. 46.107. 22: 1863	673
ICMP	192.168. 1.201:	512/ 512	168. 95. 4.211: 512	0

TCP : 6 sessions
 UDP : 0 sessions
 Others : 1 sessions
 Total : 7 sessions

Refresh

Diagnostic

Tests the connection to computers that are connected to LAN ports and also the WAN Internet connection. If **PING www.google.com** shows **FAIL** and the other tests show **PASS**, you should check that the DNS setting is correct.

Diagnostic

LAN Connection

Testing Ethernet LAN connection	PASS
Testing Wireless LAN connection	PASS

WAN Connection

Testing ADSL Synchronization	FAIL
Testing WAN connection	FAIL
Ping Primary Domain Name Server	FAIL
PING www.google.com	FAIL

Refresh

UPnP Portmap

The section lists all port-mapping established using UPnP (Universal Plug and Play). See **Advanced** section of this manual for more details on UPnP and the router's UPnP configuration options.

UPnP Portmap

UPnP Portmap Table

Name	Protocol	External Port	Redirect Port	IP Address
emwebigd1024	udp	35324 ~ 35324	15852 ~ 15852	192.168.1.205
emwebigd1025	tcp	48888 ~ 48888	14811 ~ 14811	192.168.1.205
emwebigd1063	udp	9210 ~ 9210	15169 ~ 15169	192.168.1.202
emwebigd1064	tcp	50937 ~ 50937	14500 ~ 14500	192.168.1.202

Quick Start

Quick Start	
Connection	
Encapsulation	PPPoE <input type="button" value="Auto Scan"/>
VPI	0
VCI	33
NAT	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Optional Settings	
IP Address	0.0.0.0 (*0.0.0.0* means *Obtain an IP address automatically*)
SubNetmask	0.0.0.0
Default Gateway	0.0.0.0
DNS	
Obtain DNS automatically	<input type="checkbox"/> Enable
Primary DNS	
Secondary DNS	
PPP	
Username	
Password	
<input type="button" value="Apply"/> <input type="button" value="Cancel"/>	


For detailed instructions on configuring your WAN settings, please see the **WAN** section of this manual.

Usually, the only details you will need for the Quick Start wizard to get you online are your login (often in the form of *username@ispname*), your password and the encapsulation type. In addition, you have the option to provide a specific DNS if required, or check the **Enable** box to get the DNS automatically from your ISP.

Your ISP will usually supply all the details you need, however if you have deleted the current WAN Connection in the **WAN – ISP** section of the interface, you can use the router's PVC Scan feature to attempt to determine the Encapsulation types offered by your ISP.

Auto Scan	
Before you scan the PVCs, please DELETE all the WAN interfaces.	
IP Address	<input type="text"/> if provided by ISP
Gateway	<input type="text"/> if provided by ISP
<input type="button" value="Start"/>	

Click **Start** to begin scanning for encapsulation types offered by your ISP. If the scan is successful you will then be presented with a list of supported options:

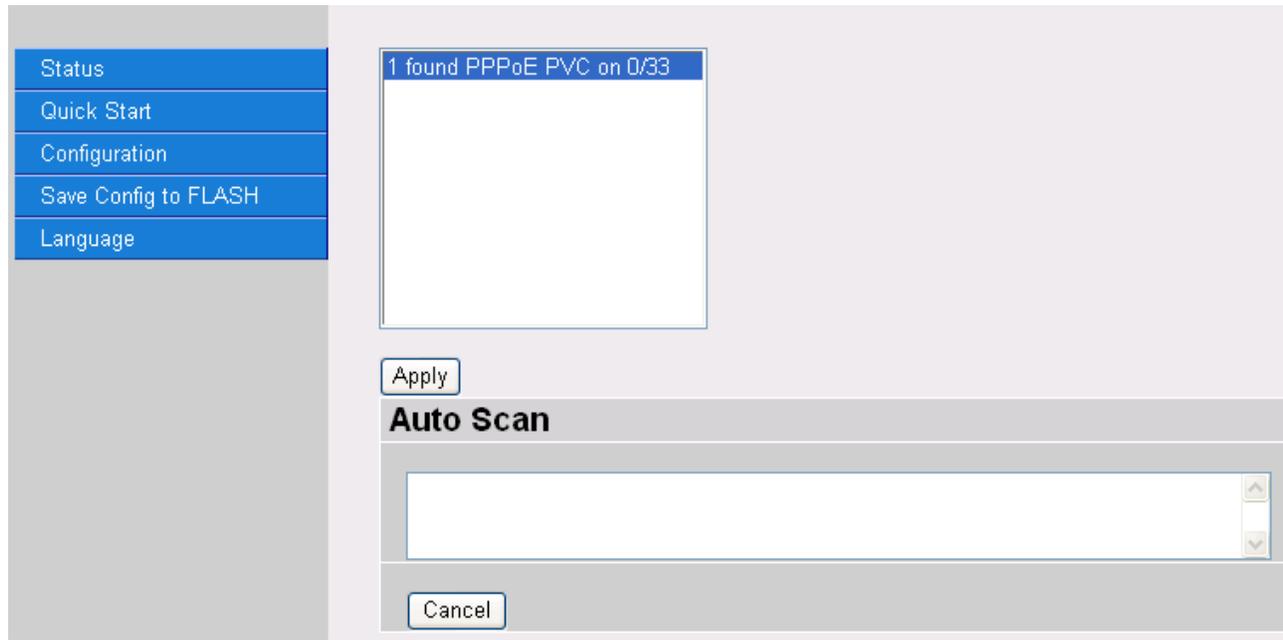

Select the desired option from the list and click **Apply** to return to the Quick Start interface to continue configuring your ISP connection. Please note that the contents of this list will vary, depending on what is supported by your ISP.

Configuration

When you click this item, you get following sub-items to configure the ADSL router.

- LAN, Wan, System, Firewall, VPN, VoIP, QoS, Virtual Server, Time Schedule and Advanced

These functions are described below in the following sections.

LAN - Local Area Network

Here are the items within the LAN section: [Bridge Interface](#), [Ethernet](#), [IP Alias](#), [Ethernet Client Filter](#), [Wireless](#), [Wireless Security](#), [Wireless Client Filter](#), [Port Setting](#) and [DHCP Server](#).

Bridge Interface

Bridge Interface	
Parameters	
Bridge Interface	VLAN Port
ethernet 	<input checked="" type="checkbox"/> P1 <input checked="" type="checkbox"/> P2 <input checked="" type="checkbox"/> P3 <input checked="" type="checkbox"/> P4
ethernet1	<input type="checkbox"/> P1 <input type="checkbox"/> P2 <input type="checkbox"/> P3 <input type="checkbox"/> P4
ethernet2	<input type="checkbox"/> P1 <input type="checkbox"/> P2 <input type="checkbox"/> P3 <input type="checkbox"/> P4
ethernet3	<input type="checkbox"/> P1 <input type="checkbox"/> P2 <input type="checkbox"/> P3 <input type="checkbox"/> P4
Device Management	
Management Interface	<input checked="" type="radio"/> ethernet
<input type="button" value="Apply"/>	

You can setup member ports for each VLAN group under Bridge Interface section. From the example, two VLAN groups need to be created.

Ethernet: P1 (Port 1)

Ethernet1: P2, P3 and P4 (Port 2, 3, 4). Uncheck P2, P3, P4 from Ethernet VLAN port first.

Note: You should setup each VLAN group with caution. Each Bridge Interface is arranged in this order.

Bridge Interface	VLAN Port (Always starts with)
ethernet	P1 / P2 / P3 / P4
ethernet1	P2 / P3 / P4
ethernet2	P3 / P4
ethernet3	P4

Management Interface: To specify which VLAN group has possibility to do device management, like doing web management.

Note: NAT/NAPT can be applied to management interface only.

Ethernet

Ethernet				
Primary IP Address				
IP Address	192	168	1	254
Subnet Mask	255	255	255	0
RIP	<input type="checkbox"/> RIP v1 <input type="checkbox"/> RIP v2 <input type="checkbox"/> RIP v2 Multicast			
<input type="button" value="Apply"/>				

Primary IP Address

IP Address: The default IP on this router.

Subnet Mask: The default subnet mask on this router.

RIP: RIP v1, RIP v2, and RIP v2 Multicast. Check to enable RIP function.

IP Alias

This function supports creation of multiple virtual IP interfaces on this router. It helps to connect two or more local networks to the ISP or remote node. In this case, an internal router is not required.

Ethernet				
IP Alias				
IP Address	Subnet Mask	Security Interface		
<input type="button" value="Add"/>				

IP Alias				
Parameters				
IP Address				
SubNetmask				
Security Interface	<input checked="" type="radio"/> Internal <input type="radio"/> External <input type="radio"/> DMZ			
<input type="button" value="Apply"/> <input type="button" value="Cancel"/>				

IP Address: Specify an IP address on this virtual interface.

SubNetmask: Specify a subnet mask on this virtual interface.

Security Interface: Specify the firewall setting on this virtual interface.

Internal: The network is behind NAT. All traffic will do network address translation when sending out to Internet if NAT is enabled.

External: There is no NAT on this IP interface and connected to the Internet directly. Mostly it will be used when providing multiple public IP addresses by ISP. In this case, you can use public IP address in local network which gateway IP address point to the IP address on this interface.

DMZ: Specify this network to DMZ area. There is no NAT on this interface.

The **Active PC in LAN** screen displays a list of individual Ethernet device IP Address & MAC Address that are currently connected to the router.

Select individual devices to be blocked or allowed, by checking the box next to the IP address. Then, **Add** to insert to the Ethernet Client Filter table. The maximum number of Ethernet clients is 16.

Wireless (Wireless Router only)

Wireless	
Parameters	
WLAN Service	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Mode	802.11b + g <input type="button" value="v"/>
ESSID	wlan-ap <input type="text"/>
ESSID Broadcast	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Regulation Domain	N.America <input type="button" value="v"/>
Channel ID	Channel 1 (2.412 GHz) <input type="button" value="v"/> Scan Channel Usage
Tx PowerLevel	180 <input type="text"/> (0 ~ 255)
Connected	true
AP MAC address	00:13:d3:78:14:25
AP Firmware Version	1.0.6.0
Wireless Distribution System (WDS)	
WDS Service	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
1. Peer WDS MAC address	00:00:00:00:00:00 <input type="text"/>
2. Peer WDS MAC address	00:00:00:00:00:00 <input type="text"/>
3. Peer WDS MAC address	00:00:00:00:00:00 <input type="text"/>
4. Peer WDS MAC address	00:00:00:00:00:00 <input type="text"/>
** WDS depends on the settings of main security encryption type. **	
<input type="button" value="Apply"/> <input type="button" value="Cancel"/>	

Parameters

WLAN Service: Default setting is set to **Enable**. If you do not have any wireless, both 802.11g and 802.11b, device in your network, select **Disable**.

Mode: The default setting is **802.11b+g** (Mixed mode). If you do not know or have both 11g and 11b devices in your network, then keep the default in **mixed mode**. From the drop-down manual, you can select **802.11g** if you have only 11g card. If you have only 11b card, then select **802.11b**.

ESSID: The ESSID is the unique name of a wireless access point (AP) to be distinguished from another. For security propose, change the default **wlan-ap** to a unique ID name to the AP which is already built-in to the router's wireless interface. It is case sensitive and must not excess 32 characters. Make sure your wireless clients have exactly the ESSID as the device, in order to get connected to your network.

Note: It is case sensitive and must not excess 32 characters.

ESSID Broadcast: It is function in which transmits its ESSID to the air so that when wireless client searches for a network, router can then be discovered and recognized. Default setting is **Enabled**.

Disable: If you do not want broadcast your ESSID. Any client using the "Any" wireless setting cannot discover the Access Point (AP) of your router.

Enable: Any client using the "Any" setting can discover the Access Point (AP) in this mode.

Regulation Domain: There are seven Regulation Domains for you to choose from, including North

America (N.America), Europe, France, etc. The Channel ID will be different based on this setting.

Channel ID: Select the wireless connection ID channel that you would like to use. Use the *Scan Channel Usage* to help to select non-occupied wireless channel.

Scan Channel Usage: Wireless channel scan takes up to 14 seconds to survey the channel ID in the network area. The result will show all channels being occupied or not occupied.

Note: Wireless performance may degrade if select ID channel is already being occupied by other AP(s).

TX PowerLevel: This function sets the wireless transmitting signal strength. User may adjust this power level from minimum 0 up to maximum 255.

Note: The Power Level maybe different in each access network user premises environment. Choose the most suitable level for your network.

Connected: Shows **true** or **false**. This is the connection status between the system and the build-in wireless card.

AP MAC Address: This is the unique hardware address of the Access Point.

AP Firmware Version: The Access Point firmware version.

Wireless Distribution System (WDS)

The device provides a WDS wireless access point mode that enables wireless link and communication with other access points. It is installed by simply defining the MAC addresses of the other connected APs. WDS may be used to extend an existing wired or wireless infrastructure network to create a larger network. It can connect up to four additional wireless APs in the WDS network.

WDS security is available in WEP mode only. The WEP key encryption must be the same for all access points in the WDS network. Selecting WPA wireless security will disable the WDS fields on the screen.

WDS Service: The default setting is **Disabled**. Check **Enable** radio button to activate this function.

1. Peer WDS MAC Address: The first associated AP MAC Address. It is important that your peer APs must include your MAC address in order to acknowledge and communicate with each other.

2. Peer WDS MAC Address: The second associated AP MAC Address.

3. Peer WDS MAC Address: The third associated AP MAC Address.

4. Peer WDS MAC Address: The fourth associated AP MAC Address.

Note: For MAC Addresses, the colon (:) must be included between character pairs.

To set up a WDS network, observe the following points:

1. All devices must be set to the same Wireless Channel.
2. All devices must be set to the same Wireless Security setting, either None, or WEP
3. All devices must list the MAC addresses of the other devices in their WDS table.
4. It is usual practice to set all devices to the same ESSID name.

Wireless Security (Wireless Router only)

Wireless Security may be Disabled or Enabled with WEP or WPA (1,2) for protecting your wireless network. The default mode of wireless security is **Disabled**.

It is strongly suggested that you **Enable** wireless security with at least WEP. WPA will provide stronger security if your client devices can support it.

Wireless Security	
Parameters	
Security Mode	Disable <input type="button" value="v"/>
<input type="button" value="Apply"/> <input type="button" value="Cancel"/>	

WPA-PSK (TKIP) / WPA-PSK (AES) Pre-Shared Key

Wireless Security	
Parameters	
Security Mode	WPA1 Pre-Shared Key <input type="button" value="v"/> or WPA2 Pre-Shared Key <input type="button" value="v"/>
WPA Algorithms	TKIP or AES
WPA Shared Key	<input type="text"/>
Group Key Renewal	3600 seconds
Idle Timeout	3600 seconds (120~65535)
<input type="button" value="Apply"/> <input type="button" value="Cancel"/>	

Security Mode: Select WPA1-PSK or WPA2-PSK as required

WPA Algorithms: There are two types of WPA-Pre-Shared Key, WPA1 and WPA2. WPA1 adapts the TKIP (Temporal Key Integrity Protocol) encrypted algorithm, which incorporates Message Integrity Code (MIC) to provide protection against hackers. WPA2 adapts CCMP (Cipher Block Chaining Message Authentication Code Protocol) of the AES (Advanced Encryption Security) algorithms.

Note that older client devices may not support either or both WPA1 or WPA2 in which case you may need to use basic WEP security.

It is recommended to use the highest level of security that your network devices can support.

WPA Shared Key: The key for network authentication. The input format is in character style and key size should be in the range between 8 and 63 characters.

Group Key Renewal: The period of renewal time for changing the security key automatically between wireless client and Access Point (AP). Default value is **3600** seconds.

Idle Timeout: The default idle timeout is **3600** seconds. The Timeout value is based on the case of no data traffic is sent or received by a client device. If the Router detects no traffic in the wireless network, it will start timing the clock and drop the session when it reaches the defined timeout value. A new session will be re-established as required after the old session has timed out.

WEP

Wireless Security	
Parameters	
Security Mode	WEP
WEP Authentication	Open System
WEP Encryption	<input checked="" type="radio"/> WEP64 <input type="radio"/> WEP128 Hex
Passphrase	<input type="text"/> <input type="button" value="Generate"/>
Default Used WEP Key	1 (1~4)
Key 1	<input type="text" value="0000000000"/>
Key 2	<input type="text" value="0000000000"/>
Key 3	<input type="text" value="0000000000"/>
Key 4	<input type="text" value="0000000000"/>
(WEP 64 - Hex): 5 Hex code, (1~9, a~z, A~Z). EX: 11aa22cc33.	
<input type="button" value="Apply"/> <input type="button" value="Cancel"/>	

Security Mode: To prevent unauthorized wireless stations from accessing data transmitted over the network, the router offers basic data encryption, known as WEP.

WEP Authentication: Select Open or Shared as required. Note that client devices need the same setting.

WEP Encryption: There are two alternatives to select from for the key length: **WEP 64** and **WEP 128**. WEP 128 will offer increased security over WEP 64.

Passphrase: This is used to generate WEP keys automatically based upon the input string and a pre-defined algorithm in WEP64 or WEP128.

Default Used WEP Key: Select the encryption key ID; please refer to **Key (1~4)** below.

Key (1-4): Enter the key to encrypt wireless data. To allow encrypted data transmission, the WEP Encryption Key values on all wireless stations must be the same as the router. There are four keys for your selection. The input format is in HEX style, 5 and 13 HEX codes are required for WEP64 and WEP128 respectively.

The **Generate** button will create hex keys from a specified Passphrase.

Port Setting

This section allows you to configure the settings for the router's Ethernet ports to solve some compatibility problems that may be encountered while connecting to the Internet, as well allowing users to tweak the performance of their network.

Port Setting	
Parameters	
Port1 Connection Type	Auto
Port2 Connection Type	Auto
Port3 Connection Type	Auto
Port4 Connection Type	Auto
IPv4 TOS Priority Control	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Set High Priority TOS	
<input type="checkbox"/> 63 <input type="checkbox"/> 62 <input type="checkbox"/> 61 <input type="checkbox"/> 60 <input type="checkbox"/> 59 <input type="checkbox"/> 58 <input type="checkbox"/> 57 <input type="checkbox"/> 56 <input type="checkbox"/> 55 <input type="checkbox"/> 54 <input type="checkbox"/> 53 <input type="checkbox"/> 52 <input type="checkbox"/> 51 <input type="checkbox"/> 50 <input type="checkbox"/> 49 <input type="checkbox"/> 48	
<input type="checkbox"/> 47 <input type="checkbox"/> 46 <input type="checkbox"/> 45 <input type="checkbox"/> 44 <input type="checkbox"/> 43 <input type="checkbox"/> 42 <input type="checkbox"/> 41 <input type="checkbox"/> 40 <input type="checkbox"/> 39 <input type="checkbox"/> 38 <input type="checkbox"/> 37 <input type="checkbox"/> 36 <input type="checkbox"/> 35 <input type="checkbox"/> 34 <input type="checkbox"/> 33 <input type="checkbox"/> 32	
<input type="checkbox"/> 31 <input type="checkbox"/> 30 <input type="checkbox"/> 29 <input type="checkbox"/> 28 <input type="checkbox"/> 27 <input type="checkbox"/> 26 <input type="checkbox"/> 25 <input type="checkbox"/> 24 <input type="checkbox"/> 23 <input type="checkbox"/> 22 <input type="checkbox"/> 21 <input type="checkbox"/> 20 <input type="checkbox"/> 19 <input type="checkbox"/> 18 <input type="checkbox"/> 17 <input type="checkbox"/> 16	
<input type="checkbox"/> 15 <input type="checkbox"/> 14 <input type="checkbox"/> 13 <input type="checkbox"/> 12 <input type="checkbox"/> 11 <input type="checkbox"/> 10 <input type="checkbox"/> 9 <input type="checkbox"/> 8 <input type="checkbox"/> 7 <input type="checkbox"/> 6 <input type="checkbox"/> 5 <input type="checkbox"/> 4 <input type="checkbox"/> 3 <input type="checkbox"/> 2 <input type="checkbox"/> 1 <input type="checkbox"/> 0	
<input type="button" value="Apply"/>	

Port # Connection Type: There are six options to choose from: Auto, disable, 10M half-duplex, 10M full-duplex, 100M half-duplex, 100M full-duplex and Disable.

Sometimes, there are Ethernet compatibility problems with legacy Ethernet devices, and you can configure different types to solve compatibility issues. The default is **Auto**, which users should keep unless there are specific problems with PCs not being able to access your LAN.

IPv4 TOS priority Control (Advanced users): TOS, Type of Services, is the 2nd octet of an IP packet. Bits 6-7 of this octet are reserved and bit 0-5 are used to specify the priority of the packet.

This feature uses bits 0-5 to classify the packet's priority. If the packet is high priority, it will flow first and will not be constrained by the Rate Limit. Therefore, when this feature is enabled, the router's Ethernet switch will check the 2nd octet of each IP packet. If the value in the TOS field matches the checked values in the table (0 to 63), this packet will be treated as high priority.

DHCP Server

DHCP (Dynamic Host Configuration Protocol) allows your router to dynamically assign IP addresses to PCs on your network if they are configured to obtain IP addresses automatically. You can enable or disable the router's DHCP server, or enable the router's DHCP relay functions in this screen.

DHCP Server	
Configuration	
DHCP Server Mode	<input type="radio"/> Disable <input checked="" type="radio"/> DHCP Server <input type="radio"/> DHCP Relay Agent
<input type="button" value="Next"/>	

DHCP Server Status	
Allow Bootp	true
Allow Unknown Clients	true
Enable	true
Subnet Definitions	
Subnet Value	192.168.1.0
Subnet Mask	255.255.255.0
Maximum Lease Time	86400 seconds
Default Lease Time	43200 seconds
Use local host address as DNS server	true
Use local host address as default gateway	true
Get subnet from IP interface	iplan
IP Range 192.168.1.100- 192.168.1.199	
Option <i>domain-name-servers</i> = 0.0.0.0	

To change the DHCP operation of the router, select the required mode from the **DHCP Server Mode** section and click **Next**

1. To disable the router's DHCP Server, check **Disabled** and click **Next**, then click **Apply**. When the DHCP Server is disabled you will need to manually assign a fixed IP address to each PCs on your network, and set the default gateway for each PC to the IP address of the router (by default this is 192.168.1.254).

2. To configure the router's DHCP Server, check **DHCP Server** and click **Next**. You can then configure parameters of the DHCP Server including the IP pool (starting IP address and ending IP address to be allocated to PCs on your network), lease time for each assigned IP address (the period of time the IP address assigned will be valid), DNS IP address and the gateway IP address. These details are sent to the DHCP client (i.e. your PC) when it requests an IP address from the DHCP server. Click **Apply** to enable this function.

If you check "**Use Router as a DNS Server**", the ADSL Router will perform the domain name lookup, find the IP address from the outside network automatically and forward it back to the requesting PC in the Local Area Network.

3. If you check **DHCP Relay Agent** and click **Next**, then you will have to enter the IP address of the DHCP server which will assign an IP address back to the DHCP client in the LAN. Use this function only if advised to do so by your network administrator or ISP.

Click **Apply** to enable this function.

WAN - Wide Area Network

WAN refers to your Wide Area Network connection, i.e. your router's connection to your ISP and the Internet. The items within the **WAN** section: [ISP](#), [DNS](#) and [ADSL](#).

ISP

WAN Connection						
WAN Services Table						
Name	Description	Creator	VPI	VCI		
wanlink	PPPoE WAN Link	Factory Defaults	8	35	Edit ▶	Change ▶
Create ▶						

The factory default is PPPoE. If your ISP uses this access protocol, click **Edit** to input other parameters as below. If your ISP does not use PPPoE, you can change the default WAN connection entry by clicking **Change**.

Some ISPs may provide more services via different WAN connections. In this case, you can create more connections by clicking **Create**. The device can support a maximum of up to eight WAN connections.

Note: The application of multiple WAN connections is dependent on your Service Provider.

Note: A simpler alternative for initial setup of the router is to select **Quick Start** from the main menu on the left. Please see the **Quick Start** section of the manual for more information.

RFC 1483 Routed Connections

WAN Connection	
RFC 1483 Routed	
Description	<input type="text" value="RFC 1483 routed mode"/>
VPI	<input type="text" value="8"/>
VCI	<input type="text" value="35"/>
ATM Class	<input type="text" value="UBR"/>
NAT	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Encapsulation Method	<input type="text" value="LLC Bridged"/>
IP Assignment	<input checked="" type="radio"/> Obtain an IP address automatically via DHCP client
	<input type="radio"/> Use the following IP address
	IP Address <input type="text"/>
	Netmask <input type="text"/>
	Gateway <input type="text"/>
RIP	<input type="checkbox"/> RIP v1 <input type="checkbox"/> RIP v2 <input type="checkbox"/> RIP v2 Multicast
MTU	<input type="text" value="1500"/>
TCP MSS Clamp	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
MAC Address Spoofing	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
	<input type="text" value="00"/> : <input type="text" value="00"/>
<input type="button" value="Apply"/>	

Description: User-definable name for the connection.

VPI and VCI: Enter the information provided by your ISP.

ATM Class: The Quality of Service for the ATM layer.

NAT: The NAT (Network Address Translation) feature allows multiple users to access the Internet through a single IP account, sharing the single IP address. If users on your LAN have public IP addresses and can access the Internet directly, the NAT function can be disabled.

Encapsulation method: Selects the encapsulation format, the default is LLC Bridged. Select the one provided by your ISP.

IP Assignment

Obtain an IP address automatically via DHCP client: specify if the Router can get an IP address from the ISP (Internet Service Provider) automatically.

Use the following IP Address: Specify the IP address manually; the static IP address should be given to you by your ISP.

RIP: RIP v1, RIP v2, and RIP v2 Multicast. Check to enable RIP function.

MTU: Maximum Transmission Unit. The size of the largest datagram (excluding media-specific headers) that IP will attempt to send through the interface. Default is 1500.

TCP MSS Clamp: This option helps to discover the optimal MTU size automatically. Default is enabled.

MAC Address Spoofing: This option is required by some service providers. You must fill in the MAC address specified by the service provider when it is required. Default is disabled.

RFC 1483 Bridged Connections

WAN Connection	
RFC 1483 Bridged	
Description	<input type="text" value="RFC 1483 bridged mode"/>
VPI	<input type="text" value="0"/>
VCI	<input type="text" value="33"/>
ATM Class	<input type="text" value="UBR"/>
Encapsulation Method	<input type="text" value="LLC Bridged"/>
Acceptable Frame Type	<input type="text" value="acceptall"/>
Filter Type	<input type="text" value="All"/>
PVID for Untagged Frames	<input type="text" value="1"/>
<input type="button" value="Apply"/>	

Description: User-definable name for the connection.

VPI and VCI: Enter the information provided by your ISP.

ATM Class: The Quality of Service for the ATM layer.

Encapsulation method: Select the encapsulation format, this is provided by your ISP.

Acceptable Frame Type: Specify what kind of traffic can pass through this connection, options are all traffic, or only VLAN tagged.

Filter Type: Specify the type of ethernet filtering performed by the named bridge interface.

All	Allows all types of ethernet packets through the port.
Ip	Allows only IP/ARP types of ethernet packets through the port.
Pppoe	Allows only PPPoE types of ethernet packets through the port.

PVID for Untagged Frames: PVID stands for Port VLAN Identifier. When an untagged packet is received by input port(s), this packet will be tagged with the specified PVID. The valid value range for PVID is 1~4094.

PPPoA Routed Connections

WAN Connection	
PPPoA Routed	
Description	PPPoA Routed
VPI	8
VCI	35
ATM Class	UBR <input type="button" value="v"/>
NAT	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Username	<input type="text"/>
Password	<input type="text"/>
IP Address	0.0.0.0 (0.0.0.0' means 'Obtain an IP address automatically')
Authentication Protocol	Chap(Auto) <input type="button" value="v"/>
Connection	Always On <input type="button" value="v"/>
Idle Timeout	0 minutes Details <input type="button" value="▶"/>
RIP	<input type="checkbox"/> RIP v1 <input type="checkbox"/> RIP v2 <input type="checkbox"/> RIP v2 Multicast
MTU	1500
TCP MSS Clamp	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
<input type="button" value="Apply"/> Advanced Options <input type="button" value="▶"/>	

Description: User-definable name for the connection.

VPI/VCI: Enter the information provided by your ISP.

ATM Class: The Quality of Service for the ATM layer.

NAT: The NAT (Network Address Translation) feature allows multiple users to access the Internet through a single IP account, sharing a single IP address. If users on your LAN have public IP addresses and can access the Internet directly, the NAT function can be disabled.

Username: Enter the username provided by your ISP. You can input up to **128** alphanumeric characters (case sensitive). This will usually be in the format of "username@ispname" instead of simply "username".

Password: Enter the password provided by your ISP. You can input up to **128** alphanumeric characters (case sensitive).

IP Address: Specify an IP address from which a user can logon and access the router's web server.

Note: IP 0.0.0.0 indicates all users who are connected to this router are allowed to logon the device and modify data.

Authentication Protocol Type: Default is Chap (Auto). Your ISP will advise you whether to use Chap or Pap.

Connection:

Always on: If you want the router to establish a PPPoA session when starting up and to automatically re-establish the PPPoA session when disconnected by the ISP.

Connect on Demand: If you want to establish a PPPoA session only when there is a packet requesting access to the Internet (i.e. when a program on your computer attempts to access the Internet).

Idle Timeout: Auto-disconnect the broadband firewall gateway when there is no activity on the line for a predetermined period of time.

⊙ **Detail:** You can define the destination port and packet type (TCP/UDP). This allows you to set which outgoing traffic will not trigger and reset the idle timer.

RIP: RIP v1, RIP v2, and RIP v2 Multicast. Check to enable RIP function.

MTU: Maximum Transmission Unit. The size of the largest datagram (excluding media-specific headers) that IP will attempt to send through the interface. Default is 1500.

TCP MSS Clamp: This option helps to discover the optimal MTU size automatically. Default is enabled.

Advanced Options (PPPoA)

LLC Header: Selects encapsulation mode, true for using LLC or false for using VC-Mux.

Create Route: This setting specifies whether a route is added to the system after IPCP (Internet Protocol Control Protocol) negotiation is completed. If set to *enabled*, a route will be created which directs packets to the remote end of the PPP link.

Specific Route: Specifies whether the route created when a PPP link comes up is a specific or default route. If set to *enabled*, the route created will only apply to packets for the subnet at the remote end of the PPP link. The address of this subnet is obtained during IPCP negotiation.

Subnet Mask: sets the subnet mask used for the local IP interface connected to the PPP transport. If the value *0.0.0.0* is supplied, the netmask will be calculated from the class of the IP address obtained during IPCP negotiation.

Route Mask: Sets the subnet mask used by the route that is created when a PPP link comes up. If it is set to *0.0.0.0*, the subnet mask is determined by the IP address of the remote end of the link. The class of the IP address is obtained during IPCP (Internet Protocol Control Protocol) negotiation.

MRU: Maximum Receive Unit. This is negotiated during the LCP protocol stage.

IPoA Routed Connections

WAN Connection		
IPoA Routed		
Description	IPoA routed	
VPI	8	
VCI	35	
ATM Class	UBR	
NAT	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	
IP Assignment	<input checked="" type="radio"/> Obtain an IP address automatically via DHCP client	
	<input type="radio"/> Use the following IP address	
	IP Address	<input type="text"/>
	Netmask	<input type="text"/>
	Gateway	<input type="text"/>
RIP	<input type="checkbox"/> RIP v1 <input type="checkbox"/> RIP v2 <input type="checkbox"/> RIP v2 Multicast	
MTU	1500	
TCP MSS Clamp	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	
<input type="button" value="Apply"/>		

Description: User-definable name for the connection.

VPI/VCI: Enter the information provided by your ISP.

ATM Class: The Quality of Service for the ATM layer.

NAT: The NAT (Network Address Translation) feature allows multiple users to access the Internet through a single IP account, sharing a single IP address. If users on your LAN have public IP addresses and can access the Internet directly, the NAT function can be disabled.

IP Assignment

Obtain an IP address automatically via DHCP client: specify if the Router can get an IP address from the ISP (Internet Service Provider) automatically.

Use the following IP Address: Specify the IP address manually; the static IP address should be given to you by your ISP.

RIP: RIP v1, RIP v2, and RIP v2 Multicast. Check to enable RIP function.

MTU: Maximum Transmission Unit. The size of the largest datagram (excluding media-specific headers) that IP will attempt to send through the interface. Default is 1500.

TCP MSS Clamp: This option helps to discover the optimal MTU size automatically. Default is enabled.

PPPoE Connections

WAN Connection	
PPPoE Routed	
Description	PPPoE Routed
VPI	8
VCI	35
ATM Class	UBR <input type="button" value="v"/>
NAT	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Username	<input type="text"/>
Password	<input type="text"/>
Service Name	<input type="text"/>
IP Address	<input type="text"/> (0.0.0.0' means 'Obtain an IP address automatically')
Authentication Protocol	Chap(Auto) <input type="button" value="v"/>
Connection	Always On <input type="button" value="v"/>
Idle Timeout	<input type="text" value="0"/> minutes Details <input type="button" value="▶"/>
RIP	<input type="checkbox"/> RIP v1 <input type="checkbox"/> RIP v2 <input type="checkbox"/> RIP v2 Multicast
MTU	<input type="text" value="1492"/>
TCP MSS Clamp	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
MAC Address Spoofing	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
	<input type="text" value="00"/> : <input type="text" value="00"/>
<input type="button" value="Apply"/> Advanced Options <input type="button" value="▶"/>	

Description: User-definable name for this connection.

VPI/VCI: Enter the information provided by your ISP.

ATM Class: The Quality of Service for ATM layer.

NAT: The NAT (Network Address Translation) feature allows multiple users to access the Internet through a single ISP account, sharing a single IP address. If users on your LAN have public IP addresses and can access the Internet directly, the NAT function can be disabled.

Username: Enter the username provided by your ISP. You can input up to **128** alphanumeric characters (case sensitive). This will usually be in the format of "username@ispname" instead of simply "username".

Password: Enter the password provided by your ISP. You can input up to **128** alphanumeric characters (case sensitive).

Service Name: This item is for identification purposes. If it is required, your ISP will provide you the information. Maximum input is **20** alphanumeric characters.

IP Address: Specify if the Router can get an IP address from the Internet Server Provider (ISP) automatically or not.

Click *Obtain an IP address automatically via DHCP client* to enable the DHCP client function.

Click *Specify an IP address* to disable the DHCP client function, and specify the IP address manually.

The setting of this item is specified by your ISP.

Authentication Protocol: Default is Chap (Auto). Your ISP will advise you whether to use Chap or Pap.

Connection

Always on: If you want the router to establish a PPPoE session when starting up and to automatically re-establish the PPPoE session when disconnected by the ISP.

Connect on Demand: If you want to establish a PPPoE session only when there is a packet

requesting access to the Internet (i.e. when a program on your computer attempts to access the Internet).

Idle Timeout: Auto-disconnect the broadband firewall gateway when there is no activity on the line for a predetermined period of time.

⊙ **Detail:** You can define the destination port and packet type (TCP/UDP). This allows you to set which outgoing traffic will not trigger and reset the idle timer.

RIP: RIP v1, RIP v2, and RIP v2 Multicast. Check to enable RIP function.

MTU: Maximum Transmission Unit. The size of the largest datagram (excluding media-specific headers) that IP will attempt to send through the interface. Default is 1500.

TCP MSS Clamp: This option helps to discover the optimal MTU size automatically. Default is enabled.

MAC Address Spoofing: This option is required by some service providers. You must fill in the MAC address specified by service provider if it is required. Default is disabled.

Advanced Options (PPPoE)

LLC Header: Selects encapsulation mode, true for using LLC or false for using VC-Mux.

Create Route: This setting specifies whether a route is added to the system after IPCP (Internet Protocol Control Protocol) negotiation is completed. If set to *enabled*, a route will be created which directs packets to the remote end of the PPP link.

Specific Route: Specifies whether the route created when a PPP link comes up is a specific or default route. If set to *enabled*, the route created will only apply to packets for the subnet at the remote end of the PPP link. The address of this subnet is obtained during IPCP negotiation.

Subnet Mask: sets the subnet mask used for the local IP interface connected to the PPP transport. If the value *0.0.0.0* is supplied, the netmask will be calculated from the class of the IP address obtained during IPCP negotiation.

Route Mask: Sets the subnet mask used by the route that is created when a PPP link comes up. If it is set to *0.0.0.0*, the subnet mask is determined by the IP address of the remote end of the link. The class of the IP address is obtained during IPCP (Internet Protocol Control Protocol) negotiation.

MRU: Maximum Receive Unit. This is negotiated during the LCP protocol stage.

PPPoE with Pass-through Connections

PPPoE with pass-through adapts the following method: PPPoE Routed mode + 1483 Bridge Mode. With pure PPPoE connection, the router can get one WAN address to the router. With the PPPoE and PPPoE pass-through, concurrently, it allows user to have a WAN address assigned to the router but also able to get another WAN IP from ISP using PPPoE dialer (e.g WinPoE or Windows XP PPPoE Dialer) at the same time.

WAN Connection	
PPPoE Routed	
Description	PPPoE with Pass-through
VPI	8
VCI	35
ATM Class	UBR <input type="button" value="v"/>
NAT	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Username	<input type="text"/>
Password	<input type="text"/>
Service Name	<input type="text"/>
IP Address	0.0.0.0 (0.0.0.0' means 'Obtain an IP address automatically')
Authentication Protocol	Chap(Auto) <input type="button" value="v"/>
Connection	Always On <input type="button" value="v"/>
Idle Timeout	0 minutes Details <input type="button" value="▶"/>
RIP	<input type="checkbox"/> RIP v1 <input type="checkbox"/> RIP v2 <input type="checkbox"/> RIP v2 Multicast
MTU	1492
TCP MSS Clamp	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
<input type="button" value="Apply"/> Advanced Options <input type="button" value="▶"/>	

Description: User-definable name for this connection.

VPI/VCI: Enter the information provided by your ISP.

ATM Class: The Quality of Service for ATM layer.

NAT: The NAT (Network Address Translation) feature allows multiple users to access the Internet through a single ISP account, sharing a single IP address. If users on your LAN have public IP addresses and can access the Internet directly, the NAT function can be disabled.

Username: Enter the username provided by your ISP. You can input up to **128** alphanumeric characters (case sensitive). This will usually be in the format of "username@ispname" instead of simply "username".

Password: Enter the password provided by your ISP. You can input up to **128** alphanumeric characters (case sensitive).

Service Name: This item is for identification purposes. If it is required, your ISP will provide you the information. Maximum input is **20** alphanumeric characters.

IP Address: Specify if the Router can get an IP address from the Internet Server Provider (ISP) automatically or not.

Click *Obtain an IP address automatically via DHCP client* to enable the DHCP client function.

Click *Specify an IP address* to disable the DHCP client function, and specify the IP address manually.

The setting of this item is specified by your ISP.

Authentication Protocol: Default is Chap (Auto). Your ISP will advise you whether to use Chap or Pap.

Connection:

- ⊙ **Always on:** If you want the router to establish a PPPoE session when starting up and to automatically re-establish the PPPoE session when disconnected by the ISP.
- ⊙ **Connect on Demand:** If you want to establish a PPPoE session only when there is a packet requesting access to the Internet (i.e. when a program on your computer attempts to access the Internet).

Idle Timeout: Auto-disconnect the broadband firewall gateway when there is no activity on the line for a predetermined period of time.

- ⊙ **Detail:** You can define the destination port and packet type (TCP/UDP). This allows you to set which outgoing traffic will not trigger and reset the idle timer.

RIP: RIP v1, RIP v2, and RIP v2 Multicast. Check to enable RIP function.

MTU: Maximum Transmission Unit. The size of the largest datagram (excluding media-specific headers) that IP will attempt to send through the interface. Default is 1500.

TCP MSS Clamp: This option helps to discover the optimal MTU size automatically. Default is enabled.

Advanced Options (PPPoE)

LLC Header: Selects encapsulation mode, true for using LLC or false for using VC-Mux.

Create Route: This setting specifies whether a route is added to the system after IPCP (Internet Protocol Control Protocol) negotiation is completed. If set to *enabled*, a route will be created which directs packets to the remote end of the PPP link.

Specific Route: Specifies whether the route created when a PPP link comes up is a specific or default route. If set to *enabled*, the route created will only apply to packets for the subnet at the remote end of the PPP link. The address of this subnet is obtained during IPCP negotiation.

Subnet Mask: sets the subnet mask used for the local IP interface connected to the PPP transport. If the value *0.0.0.0* is supplied, the netmask will be calculated from the class of the IP address obtained during IPCP negotiation.

Route Mask: Sets the subnet mask used by the route that is created when a PPP link comes up. If it is set to *0.0.0.0*, the subnet mask is determined by the IP address of the remote end of the link. The class of the IP address is obtained during IPCP (Internet Protocol Control Protocol) negotiation.

MRU: Maximum Receive Unit. This is negotiated during the LCP protocol stage.

DNS

DNS	
Parameters	
Obtain DNS automatically	<input checked="" type="checkbox"/> Enable
Primary DNS	<input type="text"/>
Secondary DNS	<input type="text"/>
<input type="button" value="Apply"/> <input type="button" value="Cancel"/>	

A Domain Name System (DNS) contains a mapping table for domain name and IP addresses. On the Internet, every host has a unique and user-friendly name (domain name) such as `www.helloworld.com` and an IP address. An IP address takes the form of `xxx.xxx.xxx.xxx`, for example `192.168.1.254`. You can think of an IP address as a telephone number for devices on the Internet, and the DNS will allow you to find the telephone number for any particular domain name. As an IP Address is hard to remember, the DNS converts the user-friendly name into its equivalent IP Address.

To obtain a Domain Name System (DNS) IP address automatically if your ISP has provided it when you logon, check the **Enable** box. Usually when you choose PPPoE or PPPoA as your WAN - ISP protocol, the ISP will provide the DNS IP address automatically. You may leave the configuration field blank.

Alternatively, your ISP may provide you with an IP address of their DNS. If this is the case, you must enter the DNS IP address manually.

If you choose one of the other three protocols – RFC1483 Routed/Bridged and IPoA, check with your ISP - they may provide you with an IP address for their DNS server. You must enter the DNS IP address if you set the DNS of your PC to be the LAN IP address of this router.

ADSL

ADSL	
Parameters	
Connect Mode	ADSL2+, auto-fallback
Modulation	G.Dmt.BisPlusAuto
Profile Type	MAIN
Activate Line	true
Coding Gain	auto
Tx Attenuation	Bis_0DB
DSP Firmware Version	E.38.2.12
Connected	false
Operational Mode	Inactive
Annex Type	ADSL2
Upstream	0
Downstream	0
CO Vendor	
Elapsed Time	

[Advanced Options](#)

Connect Mode: This mode will automatically detect your ADSL line code, ADSL2+, ADSL2, G.dmt, G.lite, T1.413, AnnexM2 and AnnexM2+. In some areas, multimode cannot detect the ADSL line code well. If this is the case, please adjust the ADSL line code to G.dmt or T1.413 first. If it still fails, please try the other values such as ALCTL, ADI, etc. If you still have trouble with the line, please check with your ISP for line connect information.

Note: If you have subscribed to an ADSL1 T1.413 mode line, you may go to the [Advanced Options](#) for more connection module combinations.

Activate Line: Used to De-activate (false) your ADSL line and Activate (true) it again for applying settings from **Connect Mode**.

Coding Gain: Reduces router's transmit power which will effect to router's downstream performance. Higher gain will increase the downstream rate but it sometimes causes an unstable ADSL line. The configurable ADSL coding gain is from 0 dB to 7dB, or automatic.

Tx Attenuation: The ADSL transmission power that the modem is using. The lower the power the better performance in router's upstream. Configurable value is between 0~12.

DSP Firmware Version: Current ADSL line code firmware version.

Connected: Display current ADSL line sync status.

Operational Mode: Display the current ADSL mode standard (Operational Mode) your Router is using when ADSL line has sync.

Annex Type: ADSL Annex A or M works over a standard telephone line. Annex B, works over an ISDN line.

Upstream: Display current upstream rate of your ADSL line.

Downstream: Display current downstream rate of your ADSL line.

Advanced Options

ADSL Parameters help to interpret your ADSL line statistics.

ADSL		
Parameters		
	Downstream	Upstream
SNR Margin	0.0 dB	0 dB
Line Attenuation	0.0 dB	0.0 dB
CRC Errors	0	0
Latency		

Refresh [Return](#)

SNR Margin: Signal to Noise Ratio Margin. It is the DSL signal strength to Noise ratio. This margin is measured in decibels (dB).

The **higher** the dB figure, the better the DSL signal strength and better chance to get faster speeds.

Line Attenuation: Measures the signal loss in decibel (dB) between the CO DSLAM and the router. The **lower** the attenuation dB figures, the better the DSL strength/speed.

CRC Errors: Cyclic Redundancy Check Errors. CRC is a checksum used to detect transmission errors. The **less** errors the better.

Latency: Displays the channel type used by your ISP - Fast or Interleaved.

ADSL Advanced setting**Parameters**

Capability	BIS+/BIS/A/MULTIMODE
s=1/2 Mode	<input type="radio"/> Enable <input checked="" type="radio"/> Disable

Apply Cancel

Capability: Sets the combination of ADSL modulation modes to be selected.


- GDMT:** ADSL connection will be limited to ADSL1 (G.DMT / G.Lite) only.
- BIS+:** ADSL connection will be limited to ADSL2+ only. (If you are ADSL1 subscriber DO NOT select this option).
- BIS+/T1413:** ADSL connection will be limited to ADSL2+ and ADSL1 T1.413 only.
- BIS+/BIS:** ADSL connection will be limited to ADSL2+ and ADSL2 only.
- BIS+/BIS/GDMT/T1413:** ADSL connection will be limited to ADSL2+, ADSL2 and ADSL1 G.DMT & G.Lite & T1.413.
- BIS+/BIS/T1413:** ADSL connection will be limited to ADSL2+, ADSL2 and T1.413.
- BIS+/BIS/GDMT:** ADSL connection will be limited to ADSL2+, ADSL2 and ADS1 (G.DMT/G.Lite) only.
- DISABLE:** This disable function will disconnect your ADSL synch. Select it with cautious.

S=1/2 Mode: An ADSL1 protocol that can increase the downstream speed up to 12Mpb. Please check further with your ISP about this option being enabled or not.

System

Items in the **System** menu include: [Time Zone](#), [Remote Access](#), [Firmware Upgrade](#), [Backup/Restore](#), [Restart](#) and [User Management](#).

Time Zone

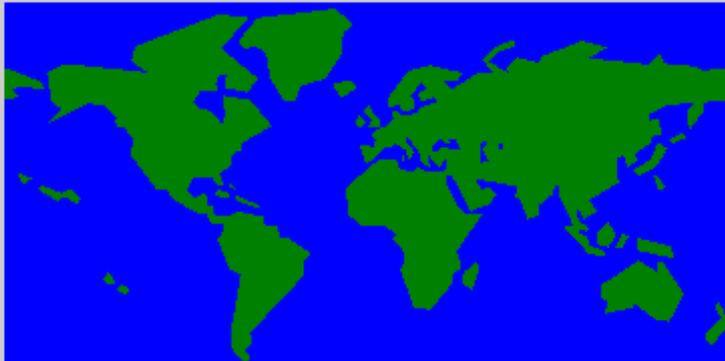Time Zone	
Parameters	
Time Zone	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Time Zone List	<input checked="" type="radio"/> By City <input type="radio"/> By Time Difference
Local Time Zone (+-GMT Time)	(GMT)Greenwich Mean Time ▼
SNTP Server IP Address	1. <input type="text" value="carl.css.gov"/> 2. <input type="text" value="india.colorado.edu"/>
	3. <input type="text" value="time.nist.gov"/> 4. <input type="text" value="time-b.nist.gov"/>
Daylight Saving	<input checked="" type="checkbox"/> Automatic
Resync Period	<input type="text" value="1440"/> minutes
	
<input type="button" value="Apply"/> <input type="button" value="Cancel"/>	

The router does not have a real time clock on board; instead, it uses the Simple Network Time Protocol (SNTP) to get the current time from an SNTP server outside your network. Choose your local time zone, click **Enable** and click the **Apply** button. After a successful connection to the Internet, the router will retrieve the correct local time from the SNTP server you have specified. If you prefer to specify an SNTP server other than those in the list, simply enter its IP address as shown above. Your ISP may provide an SNTP server for you to use.

Daylight Saving is also known as **Summer Time Period**. Many places in the world adopt it during summer time to move one hour of daylight from morning to the evening in local standard time. Check **Automatic** box to auto set your local time if you have daylight saving in your area.

Resync Period (in minutes) is the periodic interval the router will wait before it re-synchronizes the router's time with that of the specified SNTP server. In order to avoid unnecessarily increasing the load on your specified SNTP server you should keep the poll interval as high as possible – at the absolute minimum every few hours or even days.

Remote Access

Remote Access

You may temporarily permit remote administration of this network device

Allow Access for minutes.

To temporarily permit remote administration of the router (i.e. from outside your LAN), select a time period the router will permit remote access for and click **Enable**. You may change other configuration options for the web administration interface using **Device Management** options in the **Advanced** section of the GUI.

If you wish to permanently enable remote access, choose a time period of **0** minutes.

Firmware Upgrade

Firmware Upgrade

You may upgrade the system software on your network device

New Firmware Image

Browse...

Upgrade

Your router's "firmware" is the software that allows it to operate and provides all its functionality. Think of your router as a dedicated computer, and the firmware as the software it runs. Over time this software may be improved and modified, and your router allows you to upgrade the software it runs to take advantage of these changes.

Clicking on **Browse** will allow you to select the new firmware image file you have downloaded to your PC. Once the correct file is selected, click Upgrade to update the firmware in your router.

It is recommended that firmware upgrade should only be undertaken using a wired LAN connection, preferably with the PC directly connected to a Router LAN port. Software firewalls on the PC should be disabled while upgrading to prevent any interruption to the process. Disruption of the process may render the Router unusable.



DO NOT power down the router or interrupt the firmware upgrading while it is still in process. Improper operation could damage the router.

Backup / Restore

Backup/Restore

Allows you to backup the configuration settings to your computer, or restore configuration from your computer.

Backup Configuration

Backup configuration to your computer.

Restore Configuration

Configuration File

"Restore" will overwrite the current configuration and restart the device. If you want to keep the current configuration, please use "Backup" first to save current configuration.

These functions allow you to save and backup your router's current settings to a file on your PC, or to restore a previously saved backup. This is useful if you wish to experiment with different settings, knowing that you have a backup handy in the case of any mistakes. It is advisable to backup your router's settings before making any significant changes to your router's configuration.

Press **Backup** to select where on your local PC to save the settings file using your browser's download function. You may change the name of the file when saving if you wish to keep multiple backups.

Press **Browse** to select a file from your PC to restore. You should only restore settings files that have been generated by the Backup function, and that were created when using the **current version** of the router's firmware. **Settings files saved to your PC should not be manually edited in any way.**

After selecting the settings file you wish to use, pressing **Restore** will load those settings into the router.

Restart Router

Click **Restart** with option **Current Settings** to reboot your router (and restore your last saved configuration).

Restart Router

After restarting, please wait for a few seconds for system to come up. If you would like to reset all configuration to factory default settings, please select the "Factory Default Settings" option.

Restart Router with

Current Settings

Factory Default Settings

Restart

If you wish to restart the router using the factory default settings (for example, after a firmware upgrade or if you have saved an incorrect configuration), select **Factory Default Settings** to reset to factory default settings.

You may also reset your router to factory settings by holding the small Reset pinhole button on the rear panel of the router for more than six seconds.

Caution: After pressing the RESET button for more than 6 seconds, to be sure you power cycle the device.

User Management

User Management				
Current Defined Users				
Valid	User	Comment		
true	admin	Default admin user	Edit 	
Create 				

In order to prevent unauthorized access to your router's configuration interface, it is required that all users login with a password. You can set up multiple user accounts, each with their own password.

You are able to **Edit** existing users and **Create** new users who are able to access the device's configuration interface. Once you have clicked on **Edit**, you are shown the following options:

User Management	
Edit	
Username	admin
Password	<input type="password" value="*****"/>
Confirm Password	<input type="password" value="*****"/>
Valid	true 
Comment	<input type="text" value="Default admin user"/>
<input type="button" value="Apply"/> <input type="button" value="Reset"/>	

You can change the user's **password**, whether the account is active (**valid**), and add a comment to each user account.


These options are the same when creating a user account, with the exception that once created you cannot change the username.

You cannot delete the default admin account; however, you can delete any other created accounts by clicking **Delete** when editing the user.

You are strongly advised to change the password on the default "**admin**" account when you receive your router, and any time you reset your configuration to Factory Defaults.

Firewall and Access Control

Your router includes a full SPI (Stateful Packet Inspection) firewall for controlling Internet access from your LAN, as well as helping to prevent attacks from hackers. In addition to this, when using NAT, the router acts as a “natural” Internet firewall, as all PCs on your LAN will use private IP addresses that cannot be directly accessed from the Internet.

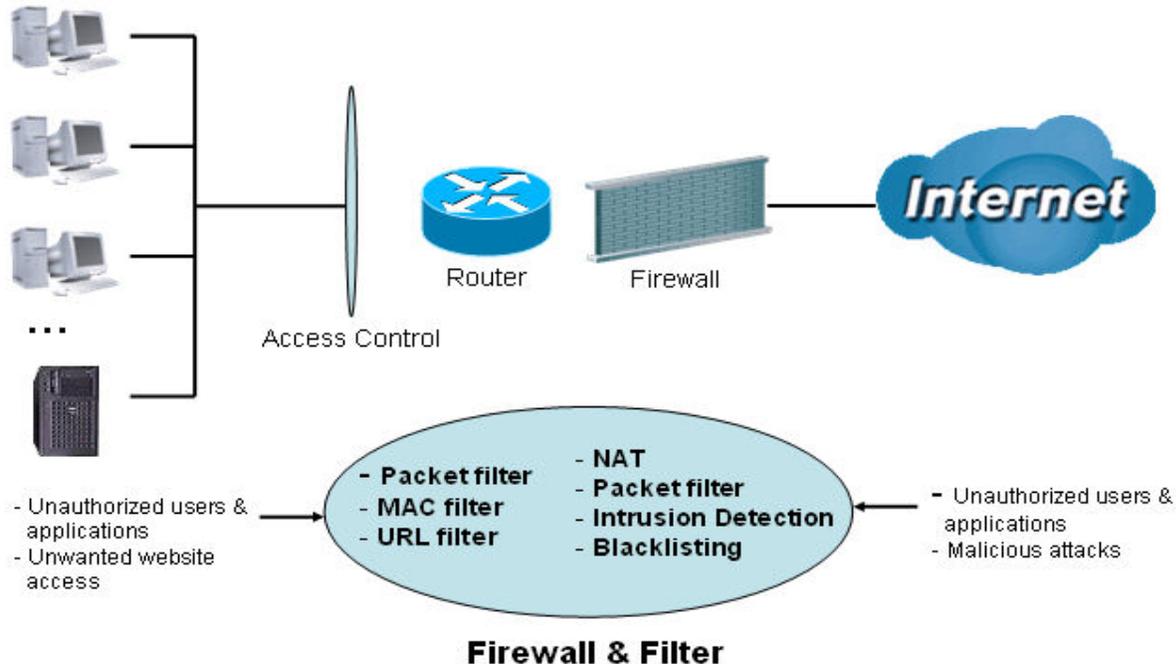

Firewall: Prevents access from outside your network. The router provides three levels of security support:

NAT natural firewall: This masks LAN users’ IP addresses which is invisible to outside users on the Internet, making it much more difficult for a hacker to target a machine on your network. This natural firewall is on when NAT function is enabled.



When using Virtual Servers your PCs will be exposed to the degree specified in your Virtual Server settings provided the ports specified are opened in your firewall packet filter settings.

Firewall Security and Policy (General Settings): Inbound direction of Packet Filter rules to prevent unauthorized computers or applications accessing your local network from the Internet.

Intrusion Detection: Enable Intrusion Detection to detect, prevent and log malicious attacks.

Access Control: Prevents access from PCs on your local network:

Firewall Security and Policy (General Settings): Outbound direction of Packet Filter rules to prevent unauthorized computers or applications accessing the Internet.

URL Filter: To block PCs on your local network from unwanted websites.

Items within the **Firewall** section include: [General Settings](#), [Packet Filter](#), [Intrusion Detection](#), [URL Filter](#), [IM/P2P Blocking](#) and [Firewall Log](#).

General Settings

You can choose not to enable Firewall and still be able to access the URL Filter and IM/P2P Blocking, or you may choose to enable the Firewall using preset filter rules and modify the port filter rules as required. The Packet Filter is used to filter packets based-on Applications (Port) or IP addresses.

There are four options when you enable the Firewall as follows:

- Ⓐ **All blocked/User-defined:** no pre-defined port or address filter rules by default, meaning that all inbound (Internet to LAN) and outbound (LAN to Internet) packets will be blocked. Users have to add their own filter rules for further access to the Internet.
- Ⓑ **High/Medium/Low security level:** the predefined port filter rules for High, Medium and Low security are displayed in Port Filters of Packet Filter.

Select either **High, Medium** or **Low security level** to enable the Firewall. The only difference between these three security levels is the preset port filter rules in the Packet Filter. Firewall functionality is the same for all levels; it is only the list of preset port filters that changes between each setting. For more detailed on level of preset port filter information, refer to **Table 1: Predefined Port Filter**.

If you choose of the preset security levels and add custom filters, this level of filter rules will be saved and you do not need to re-configure the rules again if you disable or switch to another firewall level.

The “**Block WAN Request**” is a stand-alone function and not related to whether the firewall is enabled or disabled. It is intended to prevent port scan tools probing the router from the WAN.

General Settings	
Firewall Security	
Security	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Policy	All blocked/User-defined
	High security level
	<input checked="" type="radio"/> Medium security level
	Low security level
<p>( If some applications cannot work after enabling Firewall, please check the Packet Filter especially Port Filter rules. For example, adding (TCP:443,outbound allowed) will let HTTPS data go through Firewall.)</p>	
Block WAN Request	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
<p>( Enable for preventing any ping test from Internet, such as hacker attack.)</p>	
<input type="button" value="Apply"/>	



Caution: A remote user who is attempting to perform firewall setting actions may result in blocking all access to configure and manage the device from the Internet.

Packet Filter

This function is only available when the Firewall is enabled and one of these four security levels is chosen (All Blocked, High, Medium and Low). The preset port filter rules in the Packet Filter must modify accordingly to the level of Firewall, which is selected. See **Table1: Predefined Port Filter** for more detail information.

Packet Filter							
Add TCP/UDP Filter ▶				Add Raw IP Filter ▶			
Packet Filter Rules							
Rule Name	Time Schedule	Source IP / Netmask	Protocol	Source port(s)	Inbound		
		Destination IP / Netmask		Destination port(s)	Outbound		
lei_http	Always On	0.0.0.0 / 0.0.0.0	TCP	0 ~ 65535	Block	Edit ▶	Delete ▶
		0.0.0.0 / 0.0.0.0		80 ~ 80	Allow		
lei_dns	Always On	0.0.0.0 / 0.0.0.0	UDP	0 ~ 65535	Block	Edit ▶	Delete ▶
		0.0.0.0 / 0.0.0.0		53 ~ 53	Allow		
lei_tdns	Always On	0.0.0.0 / 0.0.0.0	TCP	0 ~ 65535	Block	Edit ▶	Delete ▶
		0.0.0.0 / 0.0.0.0		53 ~ 53	Allow		
lei_ftp	Always On	0.0.0.0 / 0.0.0.0	TCP	0 ~ 65535	Block	Edit ▶	Delete ▶
		0.0.0.0 / 0.0.0.0		21 ~ 21	Allow		
lei_tnet	Always On	0.0.0.0 / 0.0.0.0	TCP	0 ~ 65535	Block	Edit ▶	Delete ▶
		0.0.0.0 / 0.0.0.0		23 ~ 23	Allow		
lei_smtp	Always On	0.0.0.0 / 0.0.0.0	TCP	0 ~ 65535	Block	Edit ▶	Delete ▶
		0.0.0.0 / 0.0.0.0		25 ~ 25	Allow		
lei_pop3	Always On	0.0.0.0 / 0.0.0.0	TCP	0 ~ 65535	Block	Edit ▶	Delete ▶
		0.0.0.0 / 0.0.0.0		110 ~ 110	Allow		

Example: Predefined Port Filters Rules

The predefined port filter rules for High, Medium and Low security levels are listed. See Table 1.

Note: Firewall – All Blocked/User-defined setting - you must define and create the port filter rules yourself. No predefined rule is pre-configured in these modes.

Table 1: Predefined Port Filter

Application	Protocol	Port Number		Firewall - Low		Firewall - Medium		Firewall – High	
		Start	End	Inbound	Outbound	Inbound	Outbound	Inbound	Outbound
HTTP(80)	TCP(6)	80	80	NO	YES	NO	YES	NO	YES
DNS (53)	UDP(17)	53	53	NO	YES	NO	YES	NO	YES
DNS (53)	TCP(6)	53	53	NO	YES	NO	YES	NO	YES
FTP(21)	TCP(6)	21	21	NO	YES	NO	YES	NO	NO
Telnet(23)	TCP(6)	23	23	NO	YES	NO	YES	NO	NO
SMTP(25)	TCP(6)	25	25	NO	YES	NO	YES	NO	YES
POP3(110)	TCP(6)	110	110	NO	YES	NO	YES	NO	YES
NEWS(NNTP) (Network News Transfer Protocol)	TCP(6)	119	119	NO	YES	NO	YES	NO	NO
RealAudio/ RealVideo (7070)	UDP(17)	7070	7070	YES	YES	YES	YES	NO	NO
PING	ICMP(1)	N/A	N/A	NO	YES	NO	YES	NO	YES
H.323(1720)	TCP(6)	1720	1720	YES	YES	NO	YES	NO	NO
T.120(1503)	TCP(6)	1503	1503	YES	YES	NO	YES	NO	NO
SSH(22)	TCP(6)	22	22	NO	YES	NO	YES	NO	NO
NTP /SNTP	UDP(17)	123	123	NO	YES	NO	YES	NO	YES
HTTP/HTTP Proxy (8080)	TCP(6)	8080	8080	NO	YES	NO	NO	NO	NO
HTTPS(443)	TCP(6)	443	443	NO	YES	NO	YES	N/A	N/A
ICQ (5190)	TCP(6)	5190	5190	YES	YES	N/A	N/A	N/A	N/A
MSN (1863)	TCP(6)	1863	1863	YES	YES	N/A	N/A	N/A	N/A

MSN (7001)	UDP(17)	7001	7001	YES	YES	N/A	N/A	N/A	N/A
MSN VEDIO (9000)	TCP(6)	9000	9000	NO	YES	N/A	N/A	N/A	N/A

Inbound: Internet to LAN ; **Outbound:** LAN to Internet.
YES: Allowed ; **NO:** Blocked ; **N/A:** Not Applicable

Packet Filter – Add TCP/UDP Filter

Packet Filter

Add TCP/UDP Filter

Rule Name Helper	<input style="width: 100%;" type="text"/>		
Time Schedule	<input type="text" value="Always On"/>		
Source IP Address(es)	<input style="width: 100%;" type="text" value="0.0.0.0"/>	Netmask	<input style="width: 100%;" type="text" value="0.0.0.0"/>
Destination IP Address(es)	<input style="width: 100%;" type="text" value="0.0.0.0"/>	Netmask	<input style="width: 100%;" type="text" value="0.0.0.0"/>
Type	<input type="text" value="TCP"/>		
Source Port	<input style="width: 50%;" type="text" value="0"/>	-	<input style="width: 50%;" type="text" value="65535"/>
Destination Port	<input style="width: 50%;" type="text" value="0"/>	-	<input style="width: 50%;" type="text" value="65535"/>
Inbound	<input type="text" value="Allow"/>		
Outbound	<input type="text" value="Allow"/>		

[Return](#)

Rule Name: User-defined description to identify this entry or click [Helper](#) to select existing predefined rules. The maximum name length is 32 characters.

Time Schedule: You may specify a time schedule for your prioritization policy. For setup and detail, refer to **Time Schedule** section

Source IP Address(es) / Destination IP Address(es): This is the Address-Filter used to allow or block traffic to/from particular IP address(es). Selecting the **Subnet Mask** of the IP address range you wish to allow/block the traffic to or from; set IP address and Subnet Mask to **0.0.0.0** to inactivate the Address-Filter rule.

Tip: To block access, to/from a single IP address, enter that IP address as the **Host IP Address** and use a **Host Subnet Mask** of "255.255.255.255".

Type: The packet protocol type used by the application, select **TCP**, **UDP** or both **TCP/UDP**.

Source Port: This Port or Port Range defines the port allowed to be used by the Remote/WAN to connect to the application. Default is set from range **0 ~ 65535**. It is recommended that this option be configured by an advanced user.

Destination Port: This is the Port or Port Range that defines the application.

Inbound / Outbound: Select **Allow** or **Block** the access to the Internet ("Outbound") or from the Internet ("Inbound").

Click **Apply** button to apply your changes.

Packet Filter – Add Raw IP Filter

Packet Filter	
Add Raw IP Filter	
Rule Name Helper ▶	<input type="text"/>
Time Schedule	Always On ▼
Protocol Number	<input type="text"/>
Inbound	Allow ▼
Outbound	Allow ▼
<input type="button" value="Apply"/> Return ▶	

Rule Name: User-defined description to identify this entry or click [Helper](#) ▶ to select existing predefined rules.

Time Schedule: You may specify a time schedule for your prioritization policy. For setup and detail, refer to **Time Schedule** section

Protocol Number: Insert the port number, i.e. GRE 47.

Inbound / Outbound: Select **Allow** or **Block** the access to the Internet (“**Outbound**”) or from the Internet (“**Inbound**”).

Click **Apply** button to apply your changes.

Example: Configuring your firewall to allow for a publicly accessible web server on your LAN

The predefined port filter rule for HTTP (TCP port 80) is the same no matter whether the firewall is set to a high, medium or low security level. To setup a web server located on the local network when the firewall is enabled, you have to configure the Port Filters setting for HTTP.

As you can see from the diagram below, when the firewall is enabled with one of the three presets (Low/Medium/High), inbound HTTP access is not allowed which means remote access through HTTP to your router is not allowed.

Note: Inbound indicates accessing from Internet to LAN and Outbound is from LAN to the Internet.

Packet Filter Rules							
Rule Name	Time Schedule	Source IP / Netmask	Protocol	Source port(s)	Inbound	Edit 	Delete 
		Destination IP / Netmask		Destination port(s)	Outbound		
mei_http	Always On	0.0.0.0 / 0.0.0.0	TCP	0 ~ 65535	Block	Edit 	Delete 
		0.0.0.0 / 0.0.0.0		80 ~ 80	Allow		
mei_dns	Always On	0.0.0.0 / 0.0.0.0	UDP	0 ~ 65535	Block	Edit 	Delete 
		0.0.0.0 / 0.0.0.0		53 ~ 53	Allow		
mei_tdns	Always On	0.0.0.0 / 0.0.0.0	TCP	0 ~ 65535	Block	Edit 	Delete 
		0.0.0.0 / 0.0.0.0		53 ~ 53	Allow		
mei_ftp	Always On	0.0.0.0 / 0.0.0.0	TCP	0 ~ 65535	Block	Edit 	Delete 
		0.0.0.0 / 0.0.0.0		21 ~ 21	Allow		
mei_tnet	Always On	0.0.0.0 / 0.0.0.0	TCP	0 ~ 65535	Block	Edit 	Delete 
		0.0.0.0 / 0.0.0.0		23 ~ 23	Allow		
mei_smtp	Always On	0.0.0.0 / 0.0.0.0	TCP	0 ~ 65535	Block	Edit 	Delete 
		0.0.0.0 / 0.0.0.0		25 ~ 25	Allow		
mei_pop3	Always On	0.0.0.0 / 0.0.0.0	TCP	0 ~ 65535	Block	Edit 	Delete 
		0.0.0.0 / 0.0.0.0		110 ~ 110	Allow		
mei_nntp	Always On	0.0.0.0 / 0.0.0.0	TCP	0 ~ 65535	Block	Edit 	Delete 
		0.0.0.0 / 0.0.0.0		119 ~ 119	Allow		


Configuring Packet Filter:

1. Click **Port Filters**. You will then be presented with the predefined port filter rules screen (in this case for the low security level), shown below:

Note: You may click **Edit** the predefined rule instead of **Delete** it.
This is an example to show to how you add a filter on your own.

Packet Filter							
Add TCP/UDP Filter ▶				Add Raw IP Filter ▶			
Packet Filter Rules							
Rule Name	Time Schedule	Source IP / Netmask	Protocol	Source port(s)	Inbound	Edit ▶	Delete ▶
		Destination IP / Netmask		Destination port(s)	Outbound		
mei_http	Always On	0.0.0.0 / 0.0.0.0	TCP	0 ~ 65535	Block	Delete ▶	▶
		0.0.0.0 / 0.0.0.0		80 ~ 80	Allow		
mei_dns	Always On	0.0.0.0 / 0.0.0.0	UDP	0 ~ 65535	Block	Delete ▶	▶
		0.0.0.0 / 0.0.0.0		53 ~ 53	Allow		
mei_tdns	Always On	0.0.0.0 / 0.0.0.0	TCP	0 ~ 65535	Block	Delete ▶	▶
		0.0.0.0 / 0.0.0.0		53 ~ 53	Allow		
mei_ftp	Always On	0.0.0.0 / 0.0.0.0	TCP	0 ~ 65535	Block	Delete ▶	▶
		0.0.0.0 / 0.0.0.0		21 ~ 21	Allow		
mei_tnet	Always On	0.0.0.0 / 0.0.0.0	TCP	0 ~ 65535	Block	Delete ▶	▶
		0.0.0.0 / 0.0.0.0		23 ~ 23	Allow		

2. Click **Delete** to delete the existing HTTP rule.
3. Click **Add TCP/UDP Filter**.

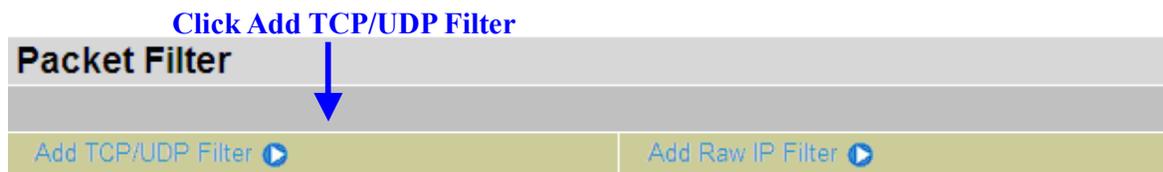

4. Input the Rule Name, Time Schedule, Source/Destination IP, Type, Source/Destination Port, Inbound and Outbound.

Example:

Application: *Cindy_HTTP*

Time Schedule: *Always On*

Source / Destination IP Address(es): *0.0.0.0* **(Do not activate the address-filter, instead use the port-filter)**

Type: *TCP* (Please refer to Table 1: Predefined Port Filter)

Source Port: *0-65535* **(Allow all ports to connect with the application)**

Redirect Port: *80-80* **(This Port defined for HTTP)**

Inbound / Outbound: *Allow*

Packet Filter

Add TCP/UDP Filter

Rule Name	Cindy_HTTP		
Time Schedule	Always On ▼		
Source IP Address(es)	0.0.0.0	Netmask	0.0.0.0
Destination IP Address(es)	0.0.0.0	Netmask	0.0.0.0
Type	TCP ▼		
Source Port	0 - 65535		
Destination Port	80 - 80		
Inbound	Allow ▼		
Outbound	Allow ▼		

5. The new port filter rule for HTTP is shown below:

Cindy_HTTP	Always On	0.0.0.0 / 0.0.0.0	TCP	0 ~ 65535	Allow	Edit	Delete
		0.0.0.0 / 0.0.0.0		80 ~ 80	Allow		

6. Configure your Virtual Server (“port forwarding”) settings so that incoming HTTP requests on port 80 will be forwarded to the PC running your web server:

Note: For details on how to configure the HTTP in Virtual Server, go to [Add Virtual Server](#) in Virtual Server section.

Virtual Server (Port Forwarding)

[Add Virtual Server](#)
[Edit DMZ Host](#)
[Edit One-to-one NAT](#)

Virtual Server Table

Application	Time Schedule	Protocol	External Port	Redirect Port	IP Address		
HTTP_Server	Always On	tcp	80 - 80	80 - 80	192.168.1.254	Edit	Delete

Intrusion Detection

Intrusion Detection	
Parameters	
Intrusion Detection	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Victim Protection Block Duration	<input type="text" value="600"/> seconds
Scan Attack Block Duration	<input type="text" value="86400"/> seconds
DOS Attack Block Duration	<input type="text" value="1800"/> seconds
Maximum TCP Open Handshaking Count	<input type="text" value="100"/> per second
Maximum Ping Count	<input type="text" value="15"/> per second
Maximum ICMP Count	<input type="text" value="100"/> per second
<input type="button" value="Apply"/>	
<input type="button" value="Clear Blacklist"/>	

The router's *Intrusion Detection System (IDS)* is used to detect hacker attacks and intrusion attempts from the Internet. If the IDS function of the firewall is enabled, inbound packets are filtered and blocked depending on whether they are detected as possible hacker attacks, intrusion attempts or other connections that the router determines to be suspicious.

Blacklist: If the router detects a possible attack, the source IP or destination IP address will be added to the Blacklist. Any further attempts using this IP address will be blocked for the time period specified as the **Block Duration**. The default setting for this function is false (disabled). Some attack types are denied immediately without using the Blacklist function, such as *Land attack* and *Echo/CharGen scan*.

Intrusion Detection: If enabled, IDS will block *Smurf* attack attempts. Default is false.

Block Duration:

Victim Protection Block Duration: This is the duration for blocking *Smurf* attacks. Default value is 600 seconds.

Scan Attack Block Duration: This is the duration for blocking hosts that attempt a possible Scan attack. Scan attack types include *X'mas scan*, *IMAP SYN/FIN scan* and similar attempts. Default value is 86400 seconds.

DoS Attack Block Duration: This is the duration for blocking hosts that attempt a possible Denial of Service (DoS) attack. Possible DoS attacks this attempts to block include *Ascend Kill* and *WinNuke*. Default value is 1800 seconds.

Max TCP Open Handshaking Count: This is a threshold value to decide whether a *SYN Flood* attempt is occurring or not. Default value is 100 TCP SYN per seconds.

Max PING Count: This is a threshold value to decide whether an *ICMP Echo Storm* is occurring or not. Default value is 15 ICMP Echo Requests (PING) per second.

Max ICMP Count: This is a threshold to decide whether an *ICMP flood* is occurring or not. Default value is 100 ICMP packets per seconds except ICMP Echo Requests (PING).

For *SYN Flood*, *ICMP Echo Storm* and *ICMP flood*, IDS will just warn the user in the Event Log. It cannot protect against such attacks.

Table 2: Hacker attack types recognized by the IDS

Intrusion Name	Detect Parameter	Blacklist	Type of Block Duration	Drop Packet	Show Log
Ascend Kill	Ascend Kill data	Src IP	DoS	Yes	Yes
WinNuke	TCP Port 135, 137~139, Flag: URG	Src IP	DoS	Yes	Yes
Smurf	ICMP type 8 Des IP is broadcast	Dst IP	Victim Protection	Yes	Yes
Land attack	SrcIP = DstIP			Yes	Yes
Echo/CharGen Scan	UDP Echo Port and CharGen Port			Yes	Yes
Echo Scan	UDP Dst Port = Echo(7)	Src IP	Scan	Yes	Yes
CharGen Scan	UDP Dst Port = CharGen(19)	Src IP	Scan	Yes	Yes
X'mas Tree Scan	TCP Flag: X'mas	Src IP	Scan	Yes	Yes
IMAP SYN/FIN Scan	TCP Flag: SYN/FIN DstPort: IMAP(143) SrcPort: 0 or 65535	Src IP	Scan	Yes	Yes
SYN/FIN/RST/ACK Scan	TCP, No Existing session And Scan Hosts more than five.	Src IP	Scan	Yes	Yes
Net Bus Scan	TCP No Existing session DstPort = Net Bus 12345,12346, 3456	SrcIP	Scan	Yes	Yes
Back Orifice Scan	UDP, DstPort = Orifice Port (31337)	SrcIP	Scan	Yes	Yes
SYN Flood	Max TCP Open Handshaking Count (Default 100 c/sec)				Yes
ICMP Flood	Max ICMP Count (Default 100 c/sec)				Yes
ICMP Echo	Max PING Count (Default 15 c/sec)				Yes

Src IP: Source IP**Src Port:** Source Port**Dst Port:** Destination Port**Dst IP:** Destination IP

URL Filter

URL (Uniform Resource Locator – e.g. an address in the form of <http://www.abcde.com> or <http://www.example.com>) filter rules allow you to prevent users on your network from accessing particular websites by their URL. There are no pre-defined URL filter rules; you can add filter rules to meet your requirements.

URL Filter	
Configuration	
URL Filtering	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Block Mode	Always On ▾
Keywords Filtering	<input type="checkbox"/> Enable Details ▶
Domains Filtering	<input type="checkbox"/> Enable Details ▶
	<input type="checkbox"/> Disable all WEB traffic except for Trusted Domains
Restrict URL Features	<input type="checkbox"/> Block Java Applet
	<input type="checkbox"/> Block surfing by IP address
<input type="button" value="Apply"/> <input type="button" value="Cancel"/>	
Exception List	
Name	IP Address
<input type="button" value="Add"/>	

Enable/Disable: To enable or disable URL Filter feature.

Block Mode: A list of the modes that you can choose to check the URL filter rules. The default is set to **Always On**.

- Disabled:** No action will be performed by the Block Mode.
- Always On:** Action is enabled. URL filter rules will be monitoring and checking at all hours of the day.
- TimeSlot1 ~ TimeSlot16:** Defined time period. You may specify the time period to check the URL filter rules, i.e. during working hours. For setup and detail, refer to **Time Schedule** section.

Keywords Filtering: Allows blocking by specific keywords within a particular URL rather than having to specify a complete URL. When enabled, your specified keywords list will be checked to see if any keywords are present in URLs accessed to determine if the connection attempt should be blocked. Please note that the URL filter blocks web browser (HTTP) connection attempts using port 80 only.

Domains Filtering: This function checks the whole URL not the IP address, in URLs accessed against your list of domains to block or allow. If it is matched, the URL request will be sent (Trusted) or dropped (Forbidden). For this function to be activated, both check-boxes must be checked. Here is the checking procedure:

1. Check the domain in the URL to determine if it is in the trusted list. If yes, the connection attempt is sent to the remote web server.
2. If not, check if it is listed in the forbidden list. If yes, then the connection attempt will be dropped.
3. If the packet does not match either of the above two items, it is sent to the remote web server.
4. Please note that the URL, “www” + domain name needs to be specified.
For example to block traffic to www.google.com.au, enter “www.google” or “www.google.com”

In the example below, the URL request for www.abc.com will be sent to the remote web server because it is listed in the trusted list, whilst the URL request for [www.google](http://www.google.com) or www.google.com will be dropped, because www.google is in the forbidden list.

Domains Filtering

Domain Name

Domain Name

Type

Forbidden Domain ▾

Apply

Trusted Domain

Name

Domain

item0

www.abc

Delete ▶

Forbidden Domain

Name

Domain

item1

www.google

Delete ▶

Return ▶

Example: Andy wishes to disable all WEB traffic except for sites listed in the trusted domain, which would prevent Bobby from accessing other web sites. Andy selects both functions in the *Domain Filtering* and thinks that it will stop Bobby. But Bobby knows this function, *Domain Filtering*, ONLY disables all WEB traffic except for **Trusted Domain**, BUT not its **IP address**. If this is the situation, **Block surfing by IP address** function can be set up by Andy. Thus, Andy can prevent Bobby from accessing other sites.

Restrict URL Features: This function enhances the restriction to your URL rules.

- ⊙ **Block Java Applet:** This function can block Web content that includes Java Applets. It is to prevent someone who wants to damage your system via standard HTTP protocol.
- ⊙ **Block surfing by IP address:** Prevents someone who uses the IP address as URL for bypassing the Domains Filtering function. Activates only if Domain Filtering is enabled.

IM / P2P Blocking

IM, short for Instant Message, uses a client program that allows users to communicate by exchanging text messages with other IM users in real time over the Internet. A P2P application, known as Peer-to-Peer, is a group of computer users who share files to specific groups of people across the Internet.

Both Instant Message and Peer-to-peer applications make communication faster and easier but your network can become increasingly loaded and insecure at the same time. Billion's IM and P2P blocking helps administrators restrict LAN PCs access to the commonly used IM applications, Yahoo and MSN, and P2P applications, BitTorrent and eDonkey, over the Internet.

IM/P2P Blocking	
Configuration	
Instant Message Blocking	Disabled ▾
Yahoo Messenger	<input type="checkbox"/> Block
MSN Messenger	<input type="checkbox"/> Block
Peer to Peer Blocking	Disabled ▾
BitTorrent (BitTorrent, BitComet)	<input type="checkbox"/> Block
eDonkey (eDonkey, eMule)	<input type="checkbox"/> Block

Apply Cancel

Instant Message Blocking: The default is set to **Disabled**.

- ⊙ **Disabled:** Instant Message blocking is not triggered. No action will be performed.
- ⊙ **Always On:** Action is enabled.
- ⊙ **TimeSlot1 ~ TimeSlot16:** You may specify the time period to trigger the blocking, i.e. during working hours. For setup and detail, refer to **Time Schedule** section.

Yahoo/MSN Messenger: Check the box to block either or both Yahoo or/and MSN Messenger. Be sure you Enable the *Instant Message Blocking* first.

Peer to Peer Blocking: The default is set to **Disabled**.

- ⊙ **Disabled:** Instant Message blocking is not triggered. No action will be performed.
- ⊙ **Always On:** Action is enabled.
- ⊙ **TimeSlot1 ~ TimeSlot16:** You may specify the time period to trigger the blocking, i.e. during working hours. For setup and detail, refer to **Time Schedule** section.

BitTorrent / eDonkey: Check the box to block either or both Bit Torrent or/and eDonkey. Be sure you Enable the *Peer to Peer Blocking* first.

Firewall Log

Firewall Log	
Event will be shown in the Status - Event Log	
Filtering Log	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Intrusion Log	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
URL Blocking Log	<input type="radio"/> Enable <input checked="" type="radio"/> Disable

Firewall Log will record log information of any unexpected action with your firewall settings.

Check the **Enable** box to activate the logs.

Log information can be seen in the **Status – Event Log** after enabling.

VPN - Virtual Private Networks (BiPAC 7404VGO Only)

Virtual Private Networks provide a way to establish secure communication tunnels to an organization's network via the Internet. Your Billion router supports three main types of VPN (Virtual Private Network), **PPTP**, **IPSec** and **L2TP**.

PPTP (Point-to-Point Tunneling Protocol)

PPTP						
VPN/PPTP for Remote Access Application						
Enable	Disable	Name	Type	Status		
VPN/PPTP for LAN-to-LAN Application						
Enable	Disable	Name	Type	Status		
Create ▶						
Apply						

There are two types of PPTP VPN supported: **Remote Access** and **LAN-to-LAN** (please refer below for more information.). Click **Create** to configure a new VPN connection.

PPTP						
VPN/PPTP for Remote Access Application						
Enable	Disable	Name	Type	Status		
<input type="radio"/>	<input checked="" type="radio"/>	Testing	dialout	Inactive	Edit ▶	Delete ▶
VPN/PPTP for LAN-to-LAN Application						
Enable	Disable	Name	Type	Status		
Create ▶						
Apply						

After you have created a PPTP connection, the connection status will be displayed. (See example above).

Enable / Disable: This function activates or deactivates the PPTP connection.

Check the **Enable** or **Disable** radio button as required and click the **Apply** button.

Name: User-defined name of the connection.

Type: This refers to whether your router operates as a client or a server, **Dialout** or **Dialin** in respectively.

Status: Displays the PPTP tunnel connection condition.

PPTP Connection - Remote Access

PPTP			
Remote Access Connection			
Connection Name	<input type="text"/>		
Type	<input checked="" type="radio"/> Dial out,	Server IP Address (or Domain Name)	<input type="text"/>
	<input type="radio"/> Dial in,	Private IP Address Assigned to Dialin User	<input type="text"/>
Username	<input type="text"/>		
Password	<input type="text"/>		
Auth. Type	Chap(Auto) ▾		
Data Encryption	Auto ▾	Key Length	Auto ▾ Mode stateful ▾
Idle Timeout	0 <input type="text"/> minutes		
Active as default route	<input type="checkbox"/> Enable		
<input type="button" value="Apply"/>			

Connection Name: User-defined name for the connection (e.g. "Connection to office").

Type: Check **Dial Out** if you want your router to operate as a client (connecting to a remote VPN server, e.g. your office server); check **Dial In** to operate as a VPN server.

- When configuring your router as a Client, enter the remote **Server IP Address (or Domain Name)** you wish to connection to.
- When configuring your router as a Server, enter the **Private IP Address Assigned to Dial in User** address.

Username: If you are a Dial-Out user (client), enter the username provided by your Host.
If you are a Dial-In user (server), enter your own username.

Password: If you are a Dial-Out user (client), enter the password provided by your Host.
If you are a Dial-In user (server), enter your own password.

PPP Authentication Type: Default is **Auto** if you want the router to determine the authentication type to use. Otherwise you may manually specify CHAP (Challenge Handshake Authentication Protocol) or PAP (Password Authentication Protocol) if you know which type the server is using (when acting as a client), or the authentication type you want clients connecting to you to use (when acting as a server).

When using PAP, the password is sent unencrypted, whilst CHAP encrypts the password before sending, and also allows for challenges at different periods to ensure that an intruder has not replaced the client.

Data Encryption: Data sent over the VPN connection can be encrypted by an MPPE algorithm. Default is **Auto**, so that this setting is negotiated when establishing a connection, or else you can manually **Enable** or **Disable** encryption.

Key Length: The data can be encrypted by MPPE algorithm with 40 bits or 128 bits. Default is **Auto** – key length is negotiated when establishing a connection. 128 bit keys provide stronger encryption than 40 bit keys.

Mode: You may select **Stateful** or **Stateless** mode. The key will be changed every 256 packets when you select Stateful mode. If you select Stateless mode, the key will be changed in each packet.


Idle Time: Auto-disconnect the VPN connection when there is no activity on the connection for a predetermined period of time. 0 means this connection is always on.

Active as default route: Commonly used by the *Dial-out* connection which will route all packets through the VPN tunnel to the Internet. Thus activating this function may degrade the Internet performance.

Click **Apply** button to apply your changes.

Example: Configuring a Remote Access PPTP VPN Dial-out Connection

A company's office establishes a PPTP VPN connection with a file server located at a separate location. The router is installed in the office, connected to a several PCs and Servers.

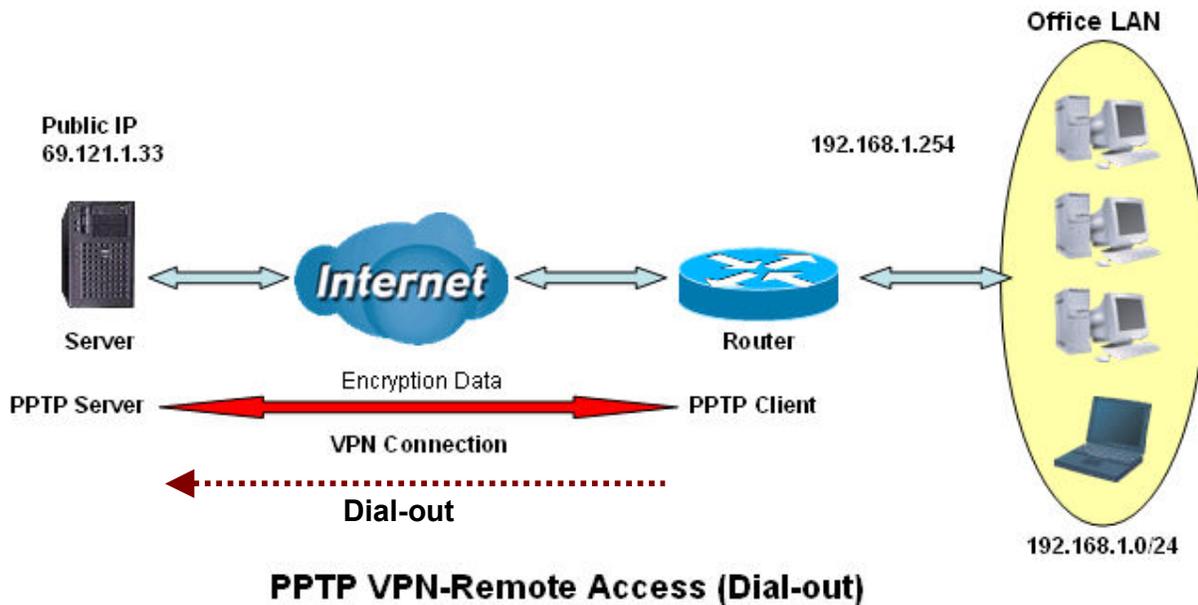

Example: Configuring a Remote Access PPTP VPN Dial-out Connection (ctd)**Configuring the PPTP VPN in the Office**

You can either input the IP address (69.1.121.33 in this case) or hostname to reach the server.

PPTP			
Remote Access Connection			
Connection Name	VPN_PPTP 1		
Type	<input checked="" type="radio"/> Dial out,	Server IP Address (or Domain Name)	69.121.1.33 2
	<input type="radio"/> Dial in,	Private IP Address Assigned to Dialin User	
Username	username 3		
Password	*****		
Auth. Type	Chap(Auto) 4		
Data Encryption	Auto 5	Key Length	Auto Mode stateful
Idle Timeout	0 minutes		
Active as default route	<input type="checkbox"/> Enable		
Apply			

Item	Function		Description
1	Connection Name	VPN_PPTP	Given name of PPTP connection
2	Dial out		Check Dial out
	Server IP Address (or Domain name)	69.121.1.33	An Dialed server IP
3	Username	username	A given username & password
	Password	123456	
4	Auth.Type	Chap(Auto)	Keep as default value in most of the cases, PPTP server & client will determine the value automatically. Refer to manual for details if you want to change the setting.
	Data Encryption	Auto	
	Key Length	Auto	
	Mode	Stateful	
5	Idle Time	0	The connection will be disconnected when there is no traffic in a predefined period of time. Idle time 0 means the connection is always on.

PPTP Connection - LAN to LAN

PPTP			
LAN to LAN			
Connection Name	<input type="text"/>		
Type	<input checked="" type="radio"/> Dial out,	Server IP Address (or Domain Name)	<input type="text"/>
	<input type="radio"/> Dial in,	Private IP Address Assigned to Dialin User	<input type="text"/>
Peer Network IP	<input type="text"/>	Netmask	<input type="text"/>
Username	<input type="text"/>		
Password	<input type="text"/>		
Auth. Type	Chap(Auto) <input type="button" value="v"/>		
Data Encryption	Auto <input type="button" value="v"/>	Key Length	Auto <input type="button" value="v"/> Mode <input type="button" value="v"/> stateful <input type="button" value="v"/>
Idle Timeout	0 <input type="text"/> minutes		
<input type="button" value="Apply"/>			

Connection Name: User-define description of the connection.

Type: Check **Dial Out** if you want your router to operate as a client (connecting to a remote VPN server, e.g. your office server), check **Dial In** to operate as a VPN server.

- When configuring your router as a Client, enter the remote **Server IP Address (or Domain name)** you wish to connection to.
- When configuring your router as a server, enter the **Private IP Address Assigned to Dial in User** address.

Peer Network IP: Enter Peer network IP address.

Netmask: Enter the subnet mask of peer network based on the Peer Network IP setting.

Username: If you are a Dial-Out user (client), enter the username provided by your Host. If you are a Dial-In user (server), enter your own username.

Password: If you are a Dial-Out user (client), enter the password provided by the your Host. If you are a Dial-In user (server), enter your own password.

PPP Authentication Type: Default is **Auto** if you want the router to determine the authentication type to use, or else manually specify CHAP (Challenge Handshake Authentication Protocol) or PAP (Password Authentication Protocol) if you know which type the server is using (when acting as a client), or else the authentication type you want clients connecting to you to use (when acting as a server).

When using PAP, the password is sent unencrypted, whilst CHAP encrypts the password before sending, and also allows for challenges at different periods to ensure that the client has not been replaced by an intruder.

Data Encryption: Data sent over the VPN connection can be encrypted by an MPPE algorithm. Default is **Auto**, so that this setting is negotiated when establishing a connection, or else you can manually **Enable** or **Disable** encryption.

Key Length: The data can be encrypted by MPPE algorithm with 40 bits or 128 bits. Default is **Auto** – key length is negotiated when establishing a connection. 128 bit keys provide stronger encryption than 40 bit keys.


Mode: You may select **Stateful** or **Stateless** mode. The key will be changed every 256 packets when you select Stateful mode. If you select Stateless mode, the key will be changed in each packet.

Idle Time: Auto-disconnect the VPN connection when there is no activity on the connection for a predetermined period of time. 0 means this connection is always on.

Click **Apply** button to apply your changes.

Example: Configuring a PPTP LAN-to-LAN VPN Connection

The branch office establishes a PPTP VPN tunnel with head office to connect two private networks over the Internet. The routers are installed in the head office and branch office accordingly.

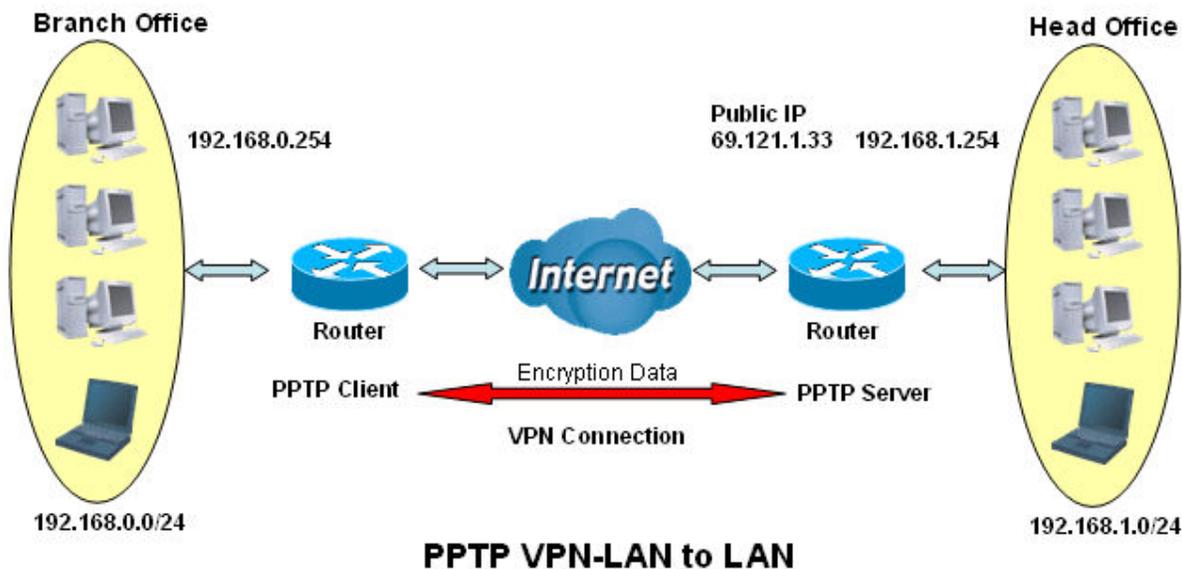

Both office LAN networks **MUST in different subnet** with LAN to LAN application.

Attention

Example: Configuring a PPTP LAN-to-LAN VPN Connection (ctd)**Configuring PPTP VPN in the Head Office**

The IP address 192.168.1.201 will be assigned to the router located in the branch office. Please make sure this IP is not used in the head office LAN.

PPTP			
LAN to LAN			
Connection Name	HeadOffice 1		
Type	<input type="radio"/> Dial out,	Server IP Address (or Domain Name)	<input type="text"/>
	<input checked="" type="radio"/> Dial in,	Private IP Address Assigned to Dialin User	192.168.1.200 2
Peer Network IP	192.168.0.0	Netmask	255.255.255.0 3
Username	username 4		
Password	*****		
Auth. Type	Chap(Auto) 4		
Data Encryption	Auto 5	Key Length	Auto 5 Mode stateful 5
Idle Timeout	0 minutes 6		
<input type="button" value="Apply"/>			

Item	Function	Description	
1	Connection Name	HeadOffice	Given a name of PPTP connection
2	Dial in		Check Dial in
	Private IP Address Assigned to Dialing User	192.168.1.200	IP address assigned to branch office network
3	Peer Network IP	192.168.0.0	Branch office network
	Netmask	255.255.255.0	
4	Username	username	Input username & password to authenticate branch office network
	Password	123456	
5	Auth.Type	Chap(Auto)	Keep as default value in most of the cases, PPTP server & client will determine the value automatically. Refer to manual for details if you want to change the setting.
	Data Encryption	Auto	
	Key Length	Auto	
	Mode	Stateful	
6	Idle Time	0	The connection will be disconnected when there is no traffic in a predefined period of time. Idle time 0 means the connection is always on.

Configuring PPTP VPN in the Branch Office

The IP address 69.1.121.30 is the **Public IP** address of the router located in head office. If you registered the DDNS (please refer to the **DDNS** section of this manual), you can also use the domain name instead of the IP address to reach the router.

PPTP					
LAN to LAN					
Connection Name	BranchOffice 1				
Type	<input checked="" type="radio"/> Dial out,	Server IP Address (or Domain Name)	69.121.1.33 2		
	<input type="radio"/> Dial in,	Private IP Address Assigned to Dialin User			
Peer Network IP	192.168.1.0	Netmask	255.255.255.0 3		
Username	username 4				
Password	*****				
Auth. Type	Chap(Auto) 5				
Data Encryption	Auto	Key Length	Auto	Mode	stateful 6
Idle Timeout	0 minutes 6				
<input type="button" value="Apply"/>					

Item	Function		Description
1	Connection Name	BranchOffice	Given a name of PPTP connection
2	Dial out		Check Dial out
	Server IP Address (or Domain name)	69.121.1.33	IP address of the head office router (in WAN side)
3	Peer Network IP	192.168.1.0	Head office network
	Netmask	255.255.255.0	
4	Username	username	Input username & password to authenticate branch office network
	Password	123456	
5	Auth.Type	Chap(Auto)	Keep as default value in most of the cases, PPTP server & client will determine the value automatically. Refer to manual for details if you want to change the setting.
	Data Encryption	Auto	
	Key Length	Auto	
	Mode	Stateful	
6	Idle Time	0	The connection will be disconnected when there is no traffic in a predefined period of time. Idle time 0 means the connection is always on.

IPSec (IP Security Protocol)

IPSec								
VPN Tunnels								
Enable	Disable	Name	Local Subnet	Remote Subnet	Remote Gateway	IPSec Proposal		
Create 								
Apply								

Click **Create** to create a new IPSec VPN connection account.

IPSec								
VPN Tunnels								
Enable	Disable	Name	Local Subnet	Remote Subnet	Remote Gateway	IPSec Proposal		
<input type="radio"/>	<input checked="" type="radio"/>	cindy	192.168.3.0 /255.255.255.0	192.168.4.0 /255.255.255.0	testing.no-ip.info	AH:none ESP:md5,3des	Edit 	Delete 
Create 								
Apply								

After you have created the IPSec connection, account information will be displayed. (See example above).

Enable / Disable: This function activates or deactivates the IPSec connection.

Check **Enable** or **Disable** radio button and click **Apply** button to activate or deactivate the connection.

Name: The user-defined name of the connection.

Local Subnet: Displays IP address and subnet of the local network.

Remote Subnet: Displays IP address and subnet of the remote network.

Remote Gateway: The IP address or Domain Name of the remote VPN device that is connected and established a VPN tunnel.

IPSec Proposal: The selected IPSec security method.

IPSec VPN Connection

IPSec					
Create					
Connection Name	<input type="text"/>				
Local					
Network	<input checked="" type="radio"/> Single Address	IP Address	<input type="text"/>		
	<input type="radio"/> Subnet	IP Address	<input type="text"/>	Netmask	<input type="text"/>
	<input type="radio"/> IP Range	IP Address	<input type="text"/>	End IP	<input type="text"/>
Remote					
Secure Gateway Address(or Hostname)	<input type="text"/>				
Network	<input checked="" type="radio"/> Single Address	IP Address	<input type="text"/>		
	<input type="radio"/> Subnet	IP Address	<input type="text"/>	Netmask	<input type="text"/>
	<input type="radio"/> IP Range	IP Address	<input type="text"/>	End IP	<input type="text"/>
Proposal					
<input checked="" type="radio"/> ESP	Authentication	MD5 <input type="text"/>			
	Encryption	3DES <input type="text"/>			
<input type="radio"/> AH	Authentication	MD5 <input type="text"/>			
Perfect Forward Secrecy	MODP 1024 (Group 2) <input type="text"/>				
Pre-shared Key	<input type="text"/>				
<input type="button" value="Apply"/>					

Connection Name: User-defined name for the connection (e.g. “connection to office”).

Local Network: Set the IP address, subnet or address range of the local network.

Single Address: The IP address of the local host.

Subnet: The subnet of the local network. For example, IP: 192.168.1.0 with netmask 255.255.255.0 specifies one class C subnet starting from 192.168.1.1 (i.e. 192.168.1.1 through to 192.168.1.254).

IP Range: The IP address range of the local network. For example, IP: 192.168.1.1, end IP: 192.168.1.10.

Remote Secure Gateway Address (or Domain Name): The IP address or hostname of the remote VPN device that is connected and establishes a VPN tunnel.

Remote Network: Set the IP address, subnet or address range of the remote network.

Proposal: Select the IPSec security method. There are two methods of checking the authentication information, AH (Authentication Header) and ESP (Encapsulating Security Payload).

Use ESP for greater security so that data will be encrypted and authenticated.

Using AH, data will be authenticated but not encrypted.

Authentication: Authentication establishes the integrity of the datagram and ensures it is not tampered with in transmission. There are three options, Message Digest 5 (**MD5**), Secure Hash Algorithm (**SHA1**) or **NONE**. SHA1 is more resistant to brute-force attacks than MD5, however it is slower.

MD5: A one-way hashing algorithm that produces a 128-bit hash.

SHA1: A one-way hashing algorithm that produces a 160-bit hash.

Encryption: Select the encryption method from the pull-down menu.

There are several options, **DES**, **3DES**, **AES (128, 192 and 256)** and **NULL**.

NULL means it is a tunnel only with no encryption.

3DES and AES are more powerful but increase latency.

- Ⓐ **DES:** Stands for Data Encryption Standard, it uses 56 bits as an encryption method.
- Ⓐ **3DES:** Stands for Triple Data Encryption Standard, it uses 168 (56*3) bits as an encryption method.
- Ⓐ **AES:** Stands for Advanced Encryption Standards, you can use 128, 192 or 256 bits as encryption method.

Perfect Forward Secrecy: Choose whether to enable PFS using Diffie-Hellman public-key cryptography to change encryption keys during the second phase of VPN negotiation. This function will provide better security, but extends the VPN negotiation time.

Diffie-Hellman is a public-key cryptography protocol that allows two parties to establish a shared secret over an unsecured communication channel (i.e. over the Internet). There are three modes, MODP 768-bit, MODP 1024-bit and MODP 1536-bit. MODP stands for Modular Exponentiation Groups.

Pre-shared Key: This is for the Internet Key Exchange (IKE) protocol, a string from 4 to 128 characters. Both sides should use the same key. IKE is used to establish a shared security policy and authenticated keys for services (such as IPSec) that require a key.

Before any IPSec traffic can be passed, each router must be able to verify the identity of its peer. This can be done by manually entering the pre-shared key into both sides (router or hosts).

Select the **Apply** button to apply your changes.

Advanced Option

This function is only available after completed creating an IPsec account. Click **Advanced Option** to change the following settings:

IPSec	
IKE Mode	Main <input type="button" value="v"/>
IKE Proposal	
Hash Function	MD5 <input type="button" value="v"/>
Encryption	3DES <input type="button" value="v"/>
Diffie-Hellman Group	MODP 1024 (Group 2) <input type="button" value="v"/>
Local ID	
Type	Default <input type="button" value="v"/>
Content	<input type="text"/>
Remote ID	
Type	Default <input type="button" value="v"/>
Identifier	<input type="text"/>
SA Lifetime	
Phase 1 (IKE)	<input type="text" value="480"/> minutes
Phase 2 (IPSec)	<input type="text" value="60"/> minutes
PING for keepalive	
PING to the IP	<input type="text" value="0.0.0.0"/> (0.0.0.0 means NEVER)
Interval	<input type="text" value="10"/> seconds (0-3600, 0 means NEVER)
Disconnection Time after no traffic	<input type="text" value="180"/> seconds (180 at least)
Reconnection Time	<input type="text" value="3"/> minutes (3 at least)
<input type="button" value="Apply"/> <input type="button" value="Reset"/>	

IKE (Internet key Exchange) Mode: Select IKE mode to Main mode or Aggressive mode. This IKE setting provides secured key generation and key management.

IKE Proposal:

Hash Function: It is a Message Digest algorithm which converts any length of a message into a unique set of bits. You may choose either MD5 (Message Digest) or SHA-1 (Secure Hash Algorithm) algorithms. SHA1 is more resistant to brute-force attacks than MD5, however it is slower.

- Ⓐ **MD5:** A one-way hashing algorithm that produces a 128-bit hash.
- Ⓐ **SHA1:** A one-way hashing algorithm that produces a 160-bit hash

Encryption: Select the encryption method from the pull-down menu.

There are several options, **DES**, **3DES** and **AES (128, 192 and 256)**.
3DES and AES are more powerful but increase latency.

- Ⓐ **DES:** Stands for Data Encryption Standard, it uses 56 bits as an encryption method.
- Ⓐ **3DES:** Stands for Triple Data Encryption Standard, it uses 168 (56*3) bits as an encryption method.

- ⊙ **AES:** Stands for Advanced Encryption Standards, you can use 128, 192 or 256 bits as encryption method.

Diffie-Hellman Group: A public-key cryptography protocol that allows two parties to establish a shared secret over an unsecured communication channel (i.e. over the Internet). There are three modes, MODP 768-bit, MODP 1024-bit and MODP 1536-bit. MODP stands for Modular Exponentiation Groups.

Local ID:

- ⊙ **Type:** Specify local ID type.
- ⊙ **Content:** Input ID's information, like domain name www.ipsectest.com.

Remote ID:

- ⊙ **Type:** Specify Remote ID type.
- ⊙ **Identifier:** Input remote ID's information, like domain name www.ipsectest.com.

SA Lifetime: Specify the number of minutes that a Security Association (SA) will stay active before new encryption and authentication key will be exchanged. There are two kinds of SAs, IKE and IPSec. IKE negotiates and establishes SA on behalf of IPSec, an IKE SA is used by IKE.

- ⊙ **Phase 1 (IKE):** To issue an initial connection request for a new VPN tunnel. The range can be from 5 to 15,000 minutes, and the default is 480 minutes.
- ⊙ **Phase 2 (IPSec):** To negotiate and establish secure authentication. The range can be from 5 to 15,000 minutes, and the default is 60 minutes.

A short SA time increases security by forcing the two parties to update the keys. However, every time the VPN tunnel re-negotiates, access through the tunnel will be temporarily disconnected.

Ping to Keep Alive:

PING to the IP: Ping the remote PC with the specified IP address and alert when the connection fails. Once alert message is received, the Router will drop this tunnel connection, requiring re-establishment. Default setting is 0.0.0.0 which disables the function.


Interval: Sets the time interval between *Pings to the IP* function to monitor the connection status. Default interval setting is 10 seconds. Time interval can be set from 0 to 3600 seconds. Setting 0 seconds disables the function.

Ping to the IP	Interval (sec)	Ping to the IP Action
0.0.0.0	0	No
0.0.0.0	2000	No
xxx.xxx.xxx.xxx (A valid IP Address)	0	No
xxx.xxx.xxx.xxx(A valid IP Address)	2000	Yes, activate it in every 2000 second.

Disconnection Time after no traffic: The *NO Response* time clock. When no traffic occurs for a time is greater than the Disconnection time set, the Router will automatically halt the tunnel connection and re-establish it based on the **Reconnection Time** set. **180 seconds** is the minimum time interval for this function.

Reconnection Time: The reconnection time interval after NO TRAFFIC is initiated. **3 minutes** is minimum time interval for this function.

Select the **Apply** button to update the settings.

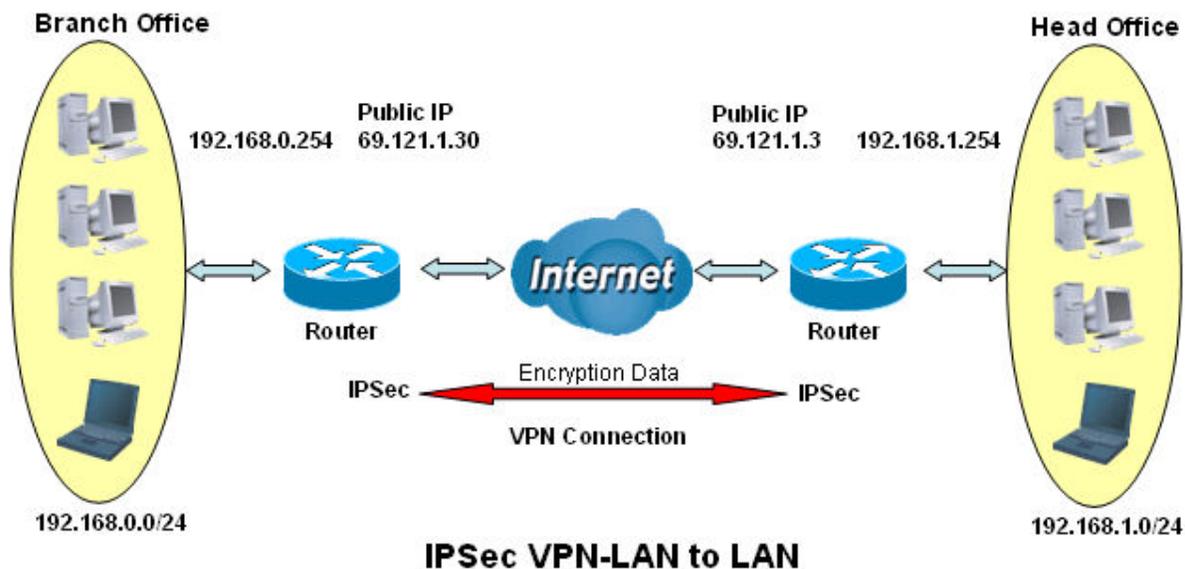Example: Configuring a IPSec LAN-to-LAN VPN Connection**Table 3: Network Configuration and Security Plan**

	Branch Office	Head Office
Local Network ID	192.168.0.0/24	192.168.1.0/24
Local Router IP	69.1.121.30	69.1.121.3
Remote Network ID	192.168.1.0/24	192.168.0.0/24
Remote Router IP	69.1.121.3	69.1.121.30
IKE Pre-shared Key	12345678	12345678
VPN Connection Type	Tunnel mode	Tunnel mode
Security Algorithm	ESP:MD5 with AES	ESP:MD5 with AES

**Attention**

Both office LAN networks **MUST** in different subnet with LAN to LAN application.

Functions of **Pre-shared Key**, **VPN Connection Type** and **Security Algorithm** **MUST BE** identically set up on both sides.

Configuring IPSec VPN in the Head Office

IPSec

Create

Connection Name: IPSec_HeadOffice 1

Local

Network: Single Address IP Address: Subnet IP Address: 192.168.1.0 Netmask: 255.255.255.0 2 IP Range IP Address: End IP:

Remote

Secure Gateway Address(or Hostname): 61.121.1.30 3

Network: Single Address IP Address: Subnet IP Address: 192.168.0.0 Netmask: 255.255.255.0 4 IP Range IP Address: End IP:

Proposal

ESP Authentication: MD5 Encryption: 3DES 5

AH Authentication: MD5

Perfect Forward Security: None

Pre-shared Key: 12345678

Item	Function		Description
1	Connection Name	IPSec_HeadOffice	Given a name of IPSec connection
	Subnet		
2	IP Address	192.168.1.0	Head office network
	Netmask	255.255.255.0	
3	Secure Gateway Address (or Hostname)	69.121.1.30	IP address of the head office router (in WAN side)
4	Subnet		Branch office network
	IP Address	192.168.0.0	
	Netmask	255.255.255.0	
5	ESP		Security plan
	Authentication	MD5	
	Encryption	3DES	
	Prefer Forward Security	None	
	Pre-shared Key	12345678	

Configuring IPSec VPN in the Branch Office

IPSec

Create

Connection Name: 1

Local

Network: Single Address IP Address: Subnet IP Address: Netmask: 2 IP Range IP Address: End IP:

Remote

Secure Gateway Address(or Hostname): 3

Network: Single Address IP Address: Subnet IP Address: Netmask: 4 IP Range IP Address: End IP:

Proposal


ESP Authentication: Encryption: 5 AH Authentication:

Perfect Forward Security:

Pre-shared Key:

Item	Function		Description
1	Connection Name	IPSec_Branch Office	Given a name of IPSec connection
2	Subnet		Check Subnet radio button
	IP Address	192.168.0.0	Branch office network
	Netmask	255.255.255.0	
3	Secure Gateway Address (or Hostname)	69.121.1.3	IP address of the head office router (in WAN side)
4	Subnet		Check Subnet radio button
	IP Address	192.168.1.0	Head office network
	Netmask	255.255.255.0	
5	ESP		Check ESP radio button
	Authentication	MD5	Security plan
	Encryption	3DES	
	Prefer Forward Security	None	
	Pre-shared Key	12345678	

Example: Configuring a IPSec Host-to-LAN VPN Connection

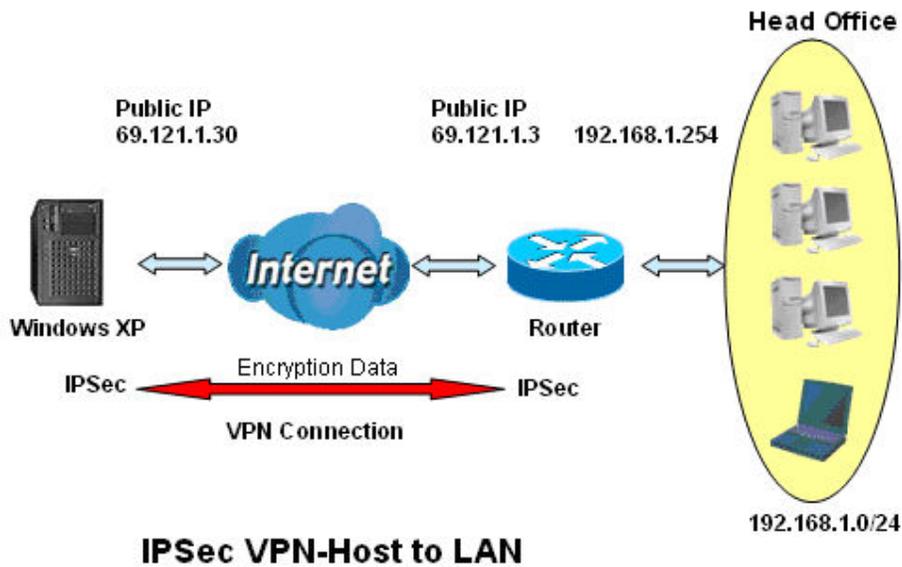

Configuring IPSec VPN in the Office

IPSec			
Create			
Connection Name	IPSec 1		
Local			
Network	<input type="radio"/> Single Address	IP Address	<input type="text"/>
	<input checked="" type="radio"/> Subnet	IP Address	192.168.1.0 2
	<input type="radio"/> IP Range	IP Address	<input type="text"/>
Remote			
Secure Gateway Address(or Hostname)	61.121.1.30 3		
Network	<input checked="" type="radio"/> Single Address	IP Address	69.121.1.30 4
	<input type="radio"/> Subnet	IP Address	<input type="text"/>
	<input type="radio"/> IP Range	IP Address	<input type="text"/>
Proposal			
<input checked="" type="radio"/> ESP	Authentication	MD5 5	
	Encryption	3DES	
<input type="radio"/> AH	Authentication	MD5	
Perfect Forward Security	None		
Pre-shared Key	12345678		
<input type="button" value="Apply"/>			

Item	Function		Description
1	Connection Name	IPSec	Given a name of IPSec connection
2	Subnet		Check Subnet radio button
	IP Address	192.168.1.0	Head office network
	Netmask	255.255.255.0	
3	Secure Gateway Address (or Hostname)	69.121.1.30	IP address of the head office router (in WAN side)
4	Single Address		Check Single Address radio button
	IP Address	69.121.1.30	Remote worker's IP address
5	ESP		Check ESP radio button
	Authentication	MD5	Security plan
	Encryption	3DES	
	Prefer Forward Security	None	
Pre-shared Key	12345678		

L2TP (Layer Two Tunneling Protocol)

L2TP						
VPN/L2TP for Remote Access Application						
Enable	Disable	Name	Type	Status		
VPN/L2TP for LAN-to-LAN Application						
Enable	Disable	Name	Type	Status		
Create ▶						
<input type="button" value="Apply"/>						

Two types of L2TP VPN are supported - **Remote Access** and **LAN-to-LAN** (please refer below for more information.). Click **Create** to create a new VPN connection account.

L2TP						
VPN/L2TP for Remote Access Application						
Enable	Disable	Name	Type	Status		
<input type="radio"/>	<input checked="" type="radio"/>	Testing	dialout	Inactive	Edit ▶	Delete ▶
VPN/L2TP for LAN-to-LAN Application						
Enable	Disable	Name	Type	Status		
Create ▶						
<input type="button" value="Apply"/>						

After you have created a L2TP connection, the status will be displayed. (See example above).

Ⓞ **Enable / Disable:** This function activates or deactivates the L2TP connection. Check the **Enable or Disable** radio button as required and click **Apply**.

Name: The user-defined name of the connection.

Type: This refers to whether your router operates as a client or a server, **Dialout** or **Dialin** in respectively.

Status: Displays the L2TP tunnel connection condition.

L2TP Connection - Remote Access

L2TP			
Remote Access Connection			
Connection Name	<input type="text"/>		
Type	<input checked="" type="radio"/> Dial out,	Server IP Address (or Domain Name)	<input type="text"/>
	<input type="radio"/> Dial in,	Private IP Address Assigned to Dialin User	<input type="text"/>
Username	<input type="text"/>		
Password	<input type="text"/>		
Auth. Type	Chap(Auto) ▼		
Idle Timeout	<input type="text" value="0"/>	minutes	
Active as default route	<input type="checkbox"/> Enable		
IPSec	<input type="checkbox"/> Enable		
Authentication	None ▼		
Encryption	NULL ▼		
Perfect Forward Secrecy	None ▼		
Pre-shared Key	<input type="text"/>		
Remote Host Name	<input type="text"/>	(Optional)	
Local Host Name	<input type="text"/>	(Optional)	
Tunnel Authentication	<input type="checkbox"/> Enable		
Secret	<input type="text"/>		
<input type="button" value="Apply"/>			

L2TP VPN Connection

Connection Name: User-defined name for the connection (e.g. "connection to office").

Type: Check **Dial Out** if you want your router to operate as a client (connecting to a remote VPN server, e.g. your office server), check **Dial In** operates as a VPN server.

- When configuring your router as a Client, enter the remote **Server IP Address (or Hostname)** you wish to connection to.
- When configuring your router as a server, enter the **Private IP Address Assigned to Dial in User** address.

Username: If you are a Dial-Out user (client), enter the username provided by your Host. If you are a Dial-In user (server), enter your own username.

Password: If you are a Dial-Out user (client), enter the password provided by your Host. If you are a Dial-In user (server), enter your own password.

PPP Authentication Type: Default is **Auto** if you want the router to determine the authentication type to use, or else manually specify CHAP (Challenge Handshake Authentication Protocol) or PAP (Password Authentication Protocol) if you know which type the server is using (when acting as a client), or else the authentication type you want clients connecting to you to use (when acting as a server).

When using PAP, the password is sent unencrypted, whilst CHAP encrypts the password before sending, and also allows for challenges at different periods to ensure that the client has not been replaced by an intruder.

Idle Time: Auto-disconnect the VPN connection when there is no activity on the connection for a pre-determined period of time. 0 means this connection is always on.

Active as default route: When used by the *Dial-out* connection all packets will route through the VPN tunnel to the Internet. Thus, activating this function may degrade the Internet performance.

Click **Apply** after changing settings.

L2TP over IPSec (L2TP/IPSec) VPN Connection

IPSec: Enable for enhancing your L2TP VPN security.

Authentication: Authentication establishes the integrity of the datagram and ensures it is not tampered with in transit. There are three options, Message Digest 5 (**MD5**), Secure Hash Algorithm (**SHA1**) or **NONE**. SHA1 is more resistant to brute-force attacks than MD5, however it is slower.

- ⊙ **MD5:** A one-way hashing algorithm that produces a 128-bit hash.
- ⊙ **SHA1:** A one-way hashing algorithm that produces a 160-bit hash.

Encryption: Select the encryption method from the pull-down menu. There are four options, **DES**, **3DES**, **AES** and **NONE**. NONE means it is a tunnel only with no encryption. 3DES and AES are more powerful but increase latency.

- ⊙ **DES:** Stands for Data Encryption Standard, it uses 56 bits as an encryption method.
- ⊙ **3DES:** Stands for Triple Data Encryption Standard, it uses 168 (56*3) bits as an encryption method.
- ⊙ **AES:** Stands for Advanced Encryption Standards, it uses 128 bits as an encryption method.

Perfect Forward Secrecy: Choose whether to enable PFS using Diffie-Hellman public-key cryptography to change encryption keys during the second phase of VPN negotiation. This function will provide better security, but extends the VPN negotiation time.

Diffie-Hellman is a public-key cryptography protocol that allows two parties to establish a shared secret over an unsecured communication channel (i.e. over the Internet). There are three modes, MODP 768-bit, MODP 1024-bit and MODP 1536-bit. MODP stands for Modular Exponentiation Groups.

Pre-shared Key: This is for the Internet Key Exchange (IKE) protocol, a string from 4 to 128 characters. Both sides should use the same key. IKE is used to establish a shared security policy and authenticated keys for services (such as IPSec) that require a key. Before any IPSec traffic can be passed, each router must be able to verify the identity of its peer. This can be done by manually entering the pre-shared key into both sides (router or hosts).

Remote Host Name (Optional): Enter hostname of remote VPN device. It is a tunnel identifier from the Remote VPN device matches with the Remote hostname provided. If remote hostname matches, tunnel will be connected; otherwise, it will be dropped.

Caution: This is only when the router performs as a VPN server. This option should be used by advanced users only.

Local Host Name (Optional): Enter hostname of Local VPN device that is connected / establishes a VPN tunnel. As default, the Router's default Hostname is **home.gateway**.


Tunnel Authentication: This enables the router to authenticate both the L2TP remote and L2TP host. This is only valid when L2TP remote supports this feature.

Secret: The secure password length should be 16 characters which may include numbers and characters.

Click **Apply** after changing settings.

Example: Configuring a L2TP VPN - Remote Access Dial-in Connection

A remote worker establishes a L2TP VPN connection with the head office using Microsoft's VPN Adapter (included with Windows XP/2000/ME, etc.). The router is installed in the head office, connected to several PCs and Servers.

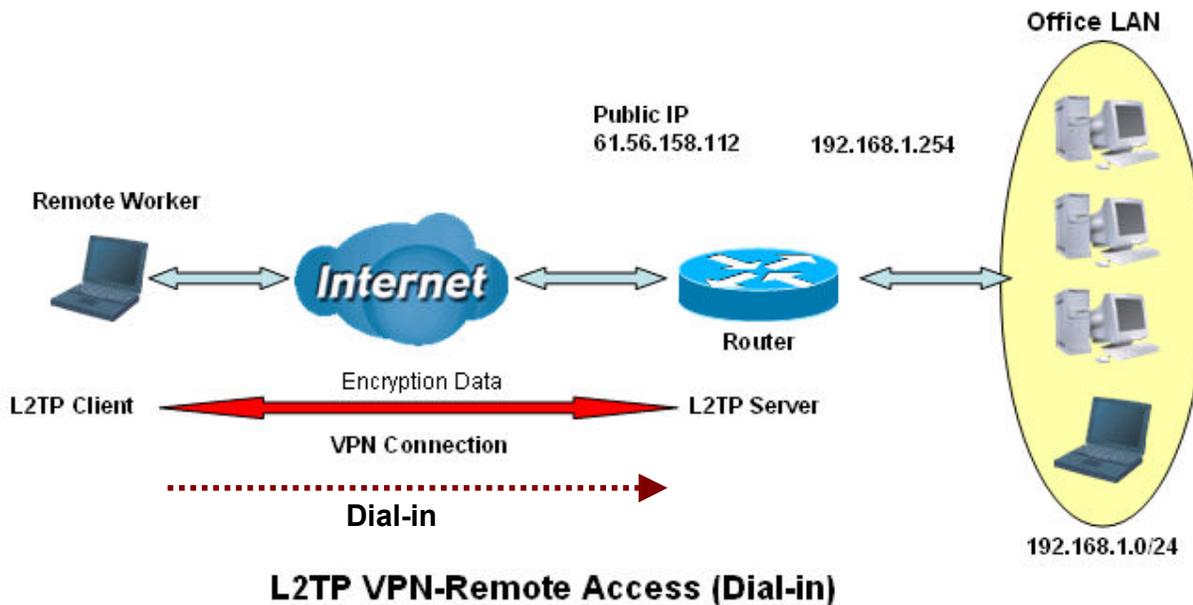

Example: Configuring a L2TP VPN - Remote Access Dial-in Connection (ctd)**Configuring L2TP VPN in the Office**


The input IP address 192.168.1.200 will be assigned to the remote worker. Ensure this IP is not used in the Office LAN.

L2TP	
Remote Access Connection	
Connection Name	VPN_L2TP 1
Type	<input type="radio"/> Dial out, Server IP Address (or Domain Name) <input checked="" type="radio"/> Dial in, Private IP Address Assigned to Dialin User 192.168.1.200 2
Username	username 3
Password	*****
Auth. Type	Chap(Auto) 4
Idle Timeout	0 minutes 5
Active as default route	<input type="checkbox"/> Enable
IPSec	<input checked="" type="checkbox"/> Enable
Authentication	MD5 6
Encryption	3DES
Perfect Forward Secrecy	None
Pre-shared Key	12345678
Remote Host Name	<input type="text"/> (optional)
Local Host Name	<input type="text"/> (optional)
Tunnel Authentication	<input type="checkbox"/> Enable
Secret	<input type="text"/>
<input type="button" value="Apply"/>	

Item	Function	Description
1	Connection Name	VPN_L2TP
	Dial in	
2	Private IP Address Assigned to Dialing User	192.168.1.200
		An assigned IP address for the remote worker
3	Username	username
	Password	123456
4	Auth.Type	Chap(Auto)
5	Idle Timeout	0
		The connection will be disconnected when there is no traffic in a predefined period of time. Idle time 0 means the connection is always on.
6	IPSec	
	Authentication	MD5
	Encryption	3DES
	Perfect Forward Secrecy	None
	Pre-shared Key	12345678
		Both sites should use the same value.

Example: Configuring a Remote Access L2TP VPN Dial-out Connection

A company's office establishes a L2TP VPN connection with a file server located at a separate location. The router is installed in the office, connected to a couple of PCs and Servers.

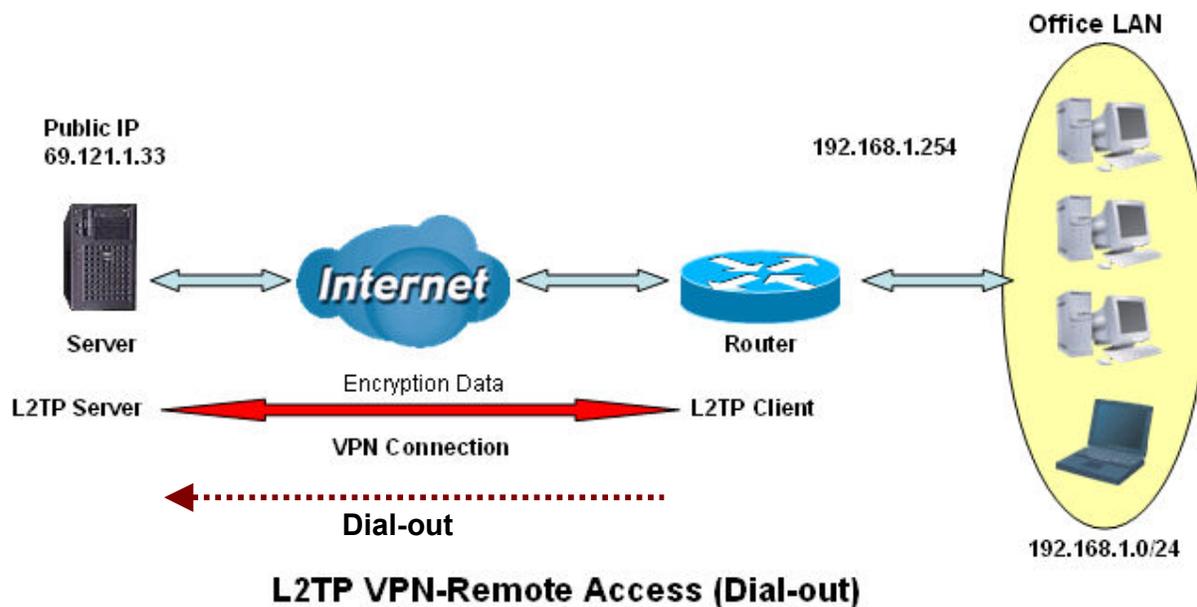

Example: Configuring a Remote Access L2TP VPN Dial-out Connection (ctd)**Configuring the L2TP VPN in the Office**

L2TP	
Remote Access Connection	
Connection Name	VPN_L2TP 1
Type	<input checked="" type="radio"/> Dial out, Server IP Address (or Domain Name) 69.121.1.33 2 <input type="radio"/> Dial in, Private IP Address Assigned to Dialin User
Username	username 3
Password	*****
Auth. Type	Chap(Auto) 4
Idle Timeout	0 minutes 5
Active as default route	<input type="checkbox"/> Enable
IPSec	<input checked="" type="checkbox"/> Enable
Authentication	MD5 6
Encryption	3DES
Perfect Forward Secrecy	None
Pre-shared Key	12345678
Remote Host Name	<input type="text"/> (optional)
Local Host Name	<input type="text"/> (optional)
Tunnel Authentication	<input type="checkbox"/> Enable
Secret	<input type="text"/>
<input type="button" value="Apply"/>	

Item	Function	Description	
1	Connection Name	VPN_L2TP	Given name of L2TP connection
2	Dial out		Check Dial out
	Server IP Address (or Hostname)	69.121.1.33	An Dialed server IP
3	Username	username	A given username & password
	Password	123456	
4	Auth.Type	Chap(Auto)	Keep as default value in most of the cases.
5	Idle Timeout	0	The connection will be disconnected when there is no traffic in a predefined period of time. Idle time 0 means the connection is always on.
6	IPSec		Enable for enhancing your L2TP VPN security.
	Authentication	MD5	Both sites should use the same value.
	Encryption	3DES	
	Perfect Forward Secrecy	None	
	Pre-shared Key	12345678	

Example: Configuring your Router to Dial-in to the Server

Currently, Microsoft Windows operation system does not support L2TP incoming service. Additional software may be required to set up your L2TP incoming service.

L2TP Connection - LAN to LAN

L2TP			
LAN to LAN			
Connection Name	<input type="text"/>		
Type	<input checked="" type="radio"/> Dial out,	Server IP Address (or Domain Name)	<input type="text"/>
	<input type="radio"/> Dial in,	Private IP Address Assigned to Dialin User	<input type="text"/>
Peer Network IP	<input type="text"/>	Netmask	<input type="text"/>
Username	<input type="text"/>		
Password	<input type="text"/>		
Auth. Type	Chap(Auto) ▾		
Idle Timeout	<input type="text" value="0"/> minutes		
IPSec	<input type="checkbox"/> Enable		
Authentication	None ▾		
Encryption	NULL ▾		
Perfect Forward Secrecy	None ▾		
Pre-shared Key	<input type="text"/>		
Remote Host Name	<input type="text"/>	(Optional)	
Local Host Name	<input type="text"/>	(Optional)	
Tunnel Authentication	<input type="checkbox"/> Enable		
Secret	<input type="text"/>		
<input type="button" value="Apply"/>			

L2TP VPN Connection

Connection Name: User-define description of the connection.

Type: Check **Dial Out** if you want your router to operate as a client (connecting to a remote VPN server, e.g. your office server), check **Dial In** operates as a VPN server.

- ⊙ When configuring your router establish the connection to a remote LAN, enter the remote **Server IP Address (or Hostname)** you wish to connection to.
- ⊙ When configuring your router as a server to accept incoming connections, enter the **Private IP Address Assigned to Dial in User** address.

Peer Network IP: Enter Peer network IP address.

Netmask: Enter the subnet mask of peer network based on the Peer Network IP setting.

Username: If you are a Dial-Out user (client), enter the username provided by your Host. If you are a Dial-In user (server), enter your own username.

Password: If you are a Dial-Out user (client), enter the password provided by your Host. If you are a Dial-In user (server), enter your own password.

PPP Authentication Type: Default is **Auto** if you want the router to determine the authentication type to use, or else manually specify CHAP (Challenge Handshake Authentication Protocol) or PAP (Password Authentication Protocol) if you know which type the server is using (when acting as a client), or else the authentication type you want clients connecting to you to use (when acting as a server). When using PAP, the password is sent unencrypted, whilst CHAP encrypts the password before sending, and also allows for challenges at different periods to ensure that the client has not been replaced by an intruder.

Idle Time: Auto-disconnect the VPN connection when there is no activity on the connection for a predetermined period of time. 0 means this connection is always on.

Click **Apply** after changing settings.

L2TP over IPSec (L2TP/IPSec) VPN Connection

IPSec: Enable for enhancing your L2TP VPN security.

Authentication: Authentication establishes the integrity of the datagram and ensures it is not tampered with in transit. There are three options, Message Digest 5 (**MD5**), Secure Hash Algorithm (**SHA1**) or **NONE**. SHA-1 is more resistant to brute-force attacks than MD5, however it is slower.

- Ⓐ **MD5:** A one-way hashing algorithm that produces a 128-bit hash.
- Ⓐ **SHA1:** A one-way hashing algorithm that produces a 160-bit hash.

Encryption: Select the encryption method from the pull-down menu. There are four options, **DES**, **3DES**, **AES** and **NONE**. NONE means it is a tunnel only with no encryption. 3DES and AES are more powerful but increase latency.

- Ⓐ **DES:** Stands for Data Encryption Standard, it uses 56 bits as an encryption method.
- Ⓐ **3DES:** Stands for Triple Data Encryption Standard, it uses 168 (56*3) bits as an encryption method.
- Ⓐ **AES:** Stands for Advanced Encryption Standards, it uses 128 bits as an encryption method.

Perfect Forward Secrecy: Choose whether to enable PFS using Diffie-Hellman public-key cryptography to change encryption keys during the second phase of VPN negotiation. This function will provide better security, but extends the VPN negotiation time.

Diffie-Hellman is a public-key cryptography protocol that allows two parties to establish a shared secret over an unsecured communication channel (i.e. over the Internet). There are three modes, MODP 768-bit, MODP 1024-bit and MODP 1536-bit. MODP stands for Modular Exponentiation Groups.

Pre-shared Key: This is for the Internet Key Exchange (IKE) protocol, a string from 4 to 128 characters. Both sides should use the same key. IKE is used to establish a shared security policy and authenticated keys for services (such as IPSec) that require a key. Before any IPSec traffic can be passed, each router must be able to verify the identity of its peer. This can be done by manually entering the pre-shared key into both sides (router or hosts).

Remote Host Name (Optional): Enter hostname of remote VPN device. It is a tunnel identifier from the Remote VPN device matches with the Remote hostname provided. If remote hostname matches, tunnel will be connected; otherwise, it will be dropped.

Caution: This is only when the router performs as a VPN server. This option should be used by advanced users only.

Local Host Name (Optional): Enter hostname of Local VPN device that is connected / establishes a VPN tunnel. As default, Router's default Hostname is **home.gateway**.


Tunnel Authentication: This enables router to authenticate both the L2TP remote and L2TP host. This is only valid when L2TP remote supports this feature.

Secret: The secure password length should be 16 characters which may include numbers and characters.

Click **Apply** after changing settings.

Example: Configuring L2TP LAN-to-LAN VPN Connection

The branch office establishes a L2TP VPN tunnel with head office to connect two private networks over the Internet. The routers are installed in the head office and branch office accordingly.

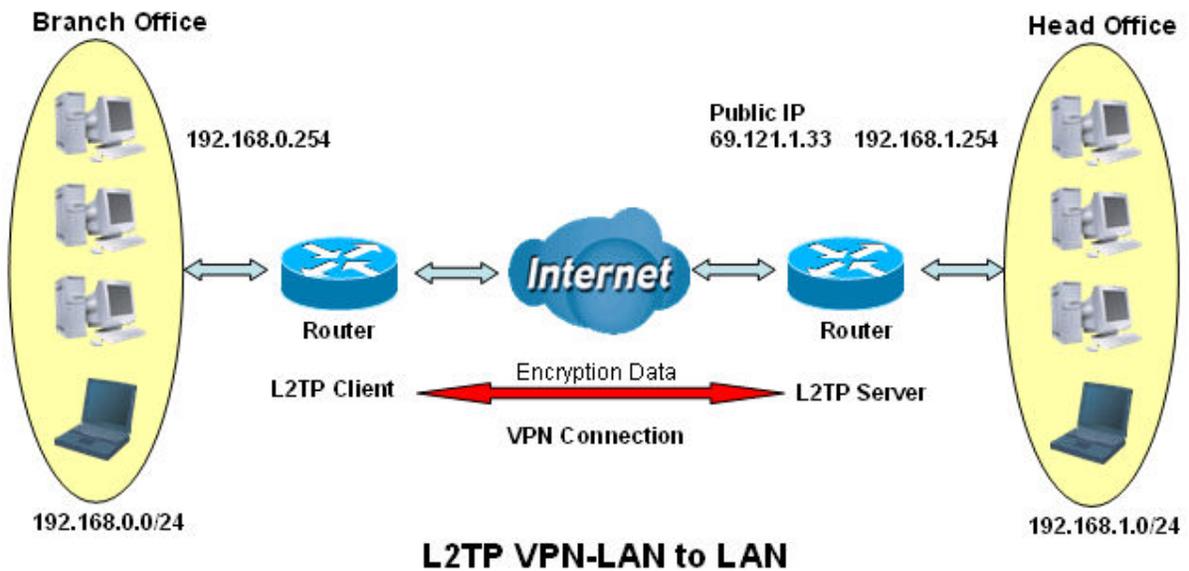**Attention**

Both office LAN networks **MUST** in different subnet with LAN to LAN application.

Functions of **Pre-shared Key, VPN Connection Type and Security Algorithm** **MUST BE** identically set up on both sides.

Example: Configuring L2TP LAN-to-LAN VPN Connection (ctd)**Configuring L2TP VPN in the Head Office**

The IP address 192.168.1.200 will be assigned to the router located in the branch office. Please make sure this IP is not used in the head office LAN.

L2TP			
LAN to LAN			
Connection Name	HeadOffice 1		
Type	<input type="radio"/> Dial out,	Server IP Address (or Domain Name)	
	<input checked="" type="radio"/> Dial in,	Private IP Address Assigned to Dialin User	192.168.1.200 2
Peer Network IP	192.168.0.0	Netmask	255.255.255.0 3
Username	username 4		
Password	*****		
Auth. Type	Chap(Auto) 5		
Idle Timeout	0 minutes 6		
IPSec	<input checked="" type="checkbox"/> Enable		
Authentication	MD5 7		
Encryption	3DES		
Perfect Forward Secrecy	None		
Pre-shared Key	12345678		
Remote Host Name		(optional)	
Local Host Name		(optional)	
Tunnel Authentication	<input type="checkbox"/> Enable		
Secret			
Apply			

Item	Function		Description
1	Connection Name	HeadOffice	Given a name of L2TP connection
	Dial in		
2	Private IP Address Assigned to Dialing User	192.168.1.200	IP address assigned to branch office network
	Peer Network IP	192.168.0.0	
3	Netmask	255.255.255.0	Branch office network
	Username	username	
4	Password	123456	Input username & password to authenticate branch office network
	Auth.Type	Chap(Auto)	
5			Keep as default value in most of the cases.
6	Idle Timeout	0	The connection will be disconnected when there is no traffic in a predefined period of time. Idle time 0 means the connection is always on.
	IPSec		
7	Authentication	MD5	Both sites should use the same value.
	Encryption	3DES	
	Perfect Forward Secrecy	None	
	Pre-shared Key	12345678	

Example: Configuring L2TP LAN-to-LAN VPN Connection

Configuring L2TP VPN in the Branch Office

The IP address 69.1.121.30 is the **Public IP** address of the router located in head office. If you registered the DDNS (please refer to the **DDNS** section of this manual), you can also use the domain name instead of the IP address to reach the router.

L2TP LAN to LAN

Connection Name	BranchOffice 1		
Type	<input checked="" type="radio"/> Dial out,	Server IP Address (or Domain Name)	69.121.1.33 2
	<input type="radio"/> Dial in,	Private IP Address Assigned to Dialin User	
Peer Network IP	192.168.1.0	Netmask	255.255.255.0 3
Username	username 4		
Password	*****		
Auth. Type	Chap(Auto) 5		
Idle Timeout	0 minutes 6		
IPSec	<input checked="" type="checkbox"/> Enable		
Authentication	MD5 7		
Encryption	3DES		
Perfect Forward Secrecy	None		
Pre-shared Key	12345678		
Remote Host Name			
Local Host Name			
Tunnel Authentication	<input type="checkbox"/> Enable		
Secret			
<input type="button" value="Apply"/>			

Item	Function		Description
1	Connection Name	BranchOffice	Given a name of L2TP connection
2	Dial out		Check Dial out
	Server IP Address (or Hostname)	69.121.1.33	IP address of the head office router (in WAN side)
3	Peer Network IP	192.168.1.0	Head office network
	Netmask	255.255.255.0	
4	Username	username	Input username & password to authenticate branch office network
	Password	123456	
5	Auth.Type	Chap(Auto)	Keep as default value in most of the cases.
6	Idle Timeout	0	The connection will be disconnected when there is no traffic in a predefined period of time. Idle time 0 means the connection is always on.
7	IPSec		Enable for enhancing your L2TP VPN security.
	Authentication	MD5	Both sites should use the same value.
	Encryption	3DES	
	Perfect Forward Secrecy	None	
	Pre-shared Key	12345678	

VoIP - Voice over Internet Protocol

VoIP enables telephone calls through existing Internet connection instead of going through the PSTN (Public Switched Telephone Network). It is cost-effective, especially for a long distance telephone charges, and can provide toll-quality voice calls over the Internet.



Attention

After completing VoIP configuration, remember to apply the changes, SAVE CONFIG and Sync or Restart to activate your VoIP.

VSP Accounts

In order to set up your VoIP service you will need to have one or more accounts with a VoIP Service Provider (VSP). The account details include:

- SIP Phone Number, Authentication UserName (usually the same as SIP Phone Number),
- Authentication Password,
- Registrar Address, Proxy Address, User Domain/Real (often these three are the same).

Please note that VSPs will usually provide a web portal to access account information such as billing. The login details for these web portals is usually different to login ID and password for the SIP service on the router. Ensure you have the correct SIP ID and password to enter in to the Router set up.

You may also have a DID phone number assigned to your VoIP account which allows calls to be made to your SIP service from normal PSTN phones. This number is not used in setting up the Router.

The router provides two independent Phone Ports and allows you to register your VoIP account details to one or both of the Phone Ports.

You may set up the two Phone Ports to register with two different VoIP accounts, or you may select to use a single account for both.

You may enter the account details directly for each Phone Port, or you may create User Defined Profiles for your VoIP accounts, and assign a Profile to each Phone Port.

You may also use these Profiles as part of your VoIP Dial Plans in order to direct various types of calls (eg local, interstate, mobile and overseas) through different VSPs.

Call Handling

The router will receive incoming SIP calls to the accounts registered on the Phone Ports, and will direct the calls to the phone connected to the appropriate Port. The Phone Ports operate independently so that you can have two simultaneous calls in progress on the phones connected to the Phone Ports.

Firmware 5.52G and later also has the facility to register accounts set up as User defined Profiles to the Phone Ports.

In addition, incoming PSTN calls will be directed to both Phone Ports. Once a PSTN call is answered on one Phone Port, the other Port is available for incoming or outgoing SIP calls.

Outgoing calls will be made in accordance with the VoIP and PSTN Dial Plans, either to the account registered on the Phone Port (default), to a User Defined Profile account, or to the PSTN as required.

Items within the **VoIP** section include: [Wizard](#), [General Settings](#), [Phone Port](#), [PSTN Dial Plan](#), [VoIP Dial Plan](#), [Call Features](#) and [Ring &Tone](#).

Wizard

This section provides an easy setup for your VoIP service.

Phone Port 1 and 2 can be registered to the same or different SIP Service Providers.

VoIP Wizard	
Voice QoS	
DSCP Marking	Best Effort <input type="button" value="v"/>
Setting for Phone Port 1 Select Profile <input type="button" value="▶"/>	
SIP Service Provider	FWD <input type="button" value="v"/>
Phone Number	<input type="text"/>
Authentication Username	<input type="text"/> (If empty, same as Phone Number.)
Authentication Password	<input type="text"/>
Setting for Phone Port 2 Select Profile <input type="button" value="▶"/> <input type="checkbox"/> Same as Phone Port 1	
SIP Service Provider	FWD <input type="button" value="v"/>
Phone Number	<input type="text"/>
Authentication Username	<input type="text"/> (If empty, same as Phone Number.)
Authentication Password	<input type="text"/>
 Caution! The VoIP configuration will take effect only when you apply the changes, save configuration and restart the device.	
<input type="button" value="Apply"/> <input type="button" value="Cancel"/> VoIP User-defined Profiles <input type="button" value="▶"/>	

Voice QoS

DSCP Marking: Differentiated Services Code Point (DSCP), it is the first 6 bits in the ToS byte. DSCP Marking allows users to assign specific application traffic to be executed in priority by the next Router based on the DSCP value.

Note: To be effective, the router(s) in the backbone network must have the capability of executing and checking the DSCP through out the network.

Setting for Phone Port 1

Select Profile: Allows you to select a desired VoIP provider from a list of **User Defined Profiles**. You may setup these SIP accounts by entering VoIP SIP information to *User-defined Profile*. See below for details.

SIP Service Provider: This section allows you to select the service provider from the predefined list in the Router firmware. When the selection is done, respective parameters below are automatically set up and will be displayed in the General Settings screen.

Note: Use [either](#) the **Select Profile** or the **SIP Service Provider** to set up the basic provider details.

Phone Number: This parameter holds the registration ID of the user within the VoIP SIP registrar. (Note that it is the SIP number given by your VoIP provider, not the (optional) associated DID number)

Authentication Username: If the username is same as the Phone Number above, you may leave it blank. Otherwise, fill in the space with the username given by your VoIP provider.

Authentication Password: This parameter holds the password used for authentication within VoIP SIP registrar. It will be given to you by your VoIP provider

Setting for Phone Port 2

Click the checkbox for **Same as Phone Port 1** to set Phone Port 2 be identical to Phone Port 1.

Please refer to descriptions in “Setting for Phone Port 1” above.

Click on **Apply** and you will be taken to the **General Settings** screen (see below).

User-defined Profiles

This function may be used to set up the details for your VoIP services as a named profile, including the provider details and the individual account details. It provides a convenient way to manage the account details in setting up the Phone Ports and the VoIP Dial Plans.

Note: User defined profiles are limited to 8 only.

VoIP User-defined Profiles				
Profile List				
Name	Registrar Address	Phone Number		
Create  Return 				

Create VoIP User-defined Profile		
SIP Setting		
Profile Name	<input type="text"/>	
Registrar Address(or Hostname)	<input type="text"/>	
Registrar Port	<input type="text" value="5060"/>	
Expire	<input type="text" value="3600"/>	seconds
User Domain/Realm	<input type="text"/>	(If empty, it is the same as Registrar Address.)
Outbound Proxy Address	<input type="text"/>	(If empty, it is the same as Registrar Address.)
Outbound Proxy Port	<input type="text" value="5060"/>	
Phone Number	<input type="text"/>	
Authentication Username	<input type="text"/>	
Authentication Password	<input type="text"/>	
Display Name	<input type="text"/>	
Direct in Dial	<input checked="" type="radio"/> None <input type="radio"/> FXS 1 <input type="radio"/> FXS 2	
<input type="button" value="Apply"/> <input type="button" value="Cancel"/> Return 		

Profile Name: User-defined name is for identifying the Profile eg in VoIP Dial Plan.

Registrar Address (or Hostname): Indicate the VoIP SIP registrar IP address.

Registrar Port: Specify the port of the VoIP SIP registrar on which it will listen for register requests from VoIP device. Default is 5060.

Expire: Expire time for the registration message sending. Default is 3600 seconds. Your VoIP provider may advise an alternate time period.

User Domain/Realm: Set the domain name for the VoIP SIP proxy server if required by your provider. This is often the same as the registrar address, and may be left blank if this is the case.

Outbound Proxy Address: Indicate the VoIP SIP outbound proxy server IP address. This parameter may useful when VoIP device is behind a NAT firewall. The field may be left blank if same as Registrar address.

Outbound Proxy Port: Specify the port of the VoIP SIP outbound proxy on which it will listen for messages. Default is 5060.

Note: Registrar Address, User Domain/Realm and Outbound Proxy Address are a single address for many providers. In this case the latter two may be left blank.

Phone Number: This parameter holds the registration ID (SIP number) of the user within the VoIP SIP registrar.

Authentication Username: Usually the same as the Phone Number above.

Authentication Password: This parameter holds the password used for authentication within VoIP SIP registrar.

Confirm Password: Re-enter the password for confirmation.

Display Name: Displayed name of the Profile eg in Phone Port screen.

Direct In Dial: Specify the FXS Port to which incoming calls to this profile will be directed. Default is None, and calls may be directed to either FXS1 (Phone Port 1) or FXS2 (Phone Port 2).

Notes:

1. The VSP accounts defined for each Phone Port (FXS port) in the VoIP General Settings screen will be registered with the VSP in order to allow incoming calls to be directed to the correct FXS port and thus ring the attached phone.
2. In Firmware 5.52G and later, User Defined Profiles that have a FXS port selected will also be registered with the VSP to allow incoming calls to be directed to the relevant Phone Port.
3. Thus, incoming calls may be directed to a particular Phone Port from several VSPs, including the one registered directly to the port, and also any User Defined Profiles that have also assigned the DID setting to that port.
4. Avoid duplicate definitions of VSP accounts in User Defined Profiles and directly in the General Settings screen as this may cause improper operation.
5. Registrations for VSP accounts will be recorded in the Event Log.

General Settings

This section contains the basic settings for the VoIP service from the provider selected in the Wizard section. Settings may be altered here if required. Failure to provide correct information will halt making calls out to the Internet.

General Settings	
SIP Device Parameters Advanced ▶	
SIP	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Silence Suppression (VAD)	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Echo Cancellation	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
RTP Port	<input type="text" value="5100"/>
Region	<input type="text" value="Australia"/> ▼
Voice QoS, DSCP Marking	<input type="text" value="Premium"/> ▼
Setting for Phone Port 1 Sync Now	
Registrar Address(or Hostname)	<input type="text"/>
Registrar Port	<input type="text" value="5060"/>
Expire	<input type="text" value="3600"/> seconds
User Domain/Realm	<input type="text"/> (If empty, it is the same as Registrar Address.)
Outbound Proxy Address	<input type="text"/> (If empty, it is the same as Registrar Address.)
Outbound Proxy Port	<input type="text" value="5060"/>
Setting for Phone Port 2 Sync Now	
Registrar Address(or Hostname)	<input type="text"/>
Registrar Port	<input type="text" value="5060"/>
Expire	<input type="text" value="3500"/> seconds
User Domain/Realm	<input type="text"/> (If empty, it is the same as Registrar Address.)
Outbound Proxy Address	<input type="text"/> (If empty, it is the same as Registrar Address.)
Outbound Proxy Port	<input type="text" value="5060"/>

SIP Device Parameters

SIP: To use SIP as VoIP call signalling protocol.

Silence Suppression (VAD): Voice Activation Detection (VAD) / Silence Suppression prevents transmission during periods of silence to reduce bandwidth consumption. Default is set to **Enable**. May be disabled to improve speech quality if 'chopping' of leading syllables occurs.

Echo Cancellation: G.168 echo canceller is an ITU-T standard. It is used for isolating the echo while you are on the phone. Default is set to **Enable**.

RTP Port: Provides the base value from the media (RTP) ports that are assigned for various endpoints and the different call sessions that may exist within an end-point. (Range from 5100 to 65535, default value is 5100)

Region: This selection is a drop-down box, which allows user to select the country for which the VoIP device must work. When a country is selected, the country parameters are automatically loaded.

Voice QoS: Differentiated Services Code Point (DSCP) is the first 6 bits in the ToS byte. DSCP Marking allows users to assign specific application traffic to be executed in priority by the next Router based on the DSCP value. See Table 4. The DSCP Mapping Table.

Note: To be effective, the router(s) in the backbones network have the capability in executing and checking the DSCP through out the QoS network.

Setting for Phone Port 1

Registrar Address (or Hostname): Indicate the VoIP SIP registrar IP address.

Registrar Port: Specify the port of the VoIP SIP registrar on which it will listen for register requests from VoIP device. Default 5060.

Expire: Expire time for the registration message sending. Default 3600 seconds.

User Domain/Realm: Set domain name for the VoIP SIP proxy server if required by your VSP.

Outbound Proxy Address: Indicate the VoIP SIP outbound proxy server IP address. This parameter is useful when VoIP device is behind a NAT.

Outbound Proxy Port: Specify the port of the VoIP SIP outbound proxy on which it will listen for messages. Default is 5060.

Anonymous Call: Hide own phone number for all outgoing calls. This feature is Disabled by default.

Setting for Phone Port 2

Please refer to descriptions in “Setting for Phone Port 1”.

How to register to SIP Server

- 1) In Wizard Section, select your VoIP Service Provider and type the information in the fields for *Phone Number, Authentication Username* and *Authentication Password*.
- 2) In Wizard Section, click Apply button to apply the settings.
- 3) In General Settings, make sure general VoIP SIP information is shown correctly entered.
- 4) In General Settings, click Apply button to apply the settings.
- 5) In General Settings, click Sync Now button to register the account(s) with your VoIP server.
- 6) Check in the Phone Ports screen to see that the port has registered. It may take a few minutes for the registration to take effect. You should also see a port registration entry in the Event Log.

Advanced – Parameters

VoIP Advanced Settings	
Parameters	
VoIP through IP Interface	ipwan ▼
Voice Frame Size	20 ms ▼
PSTN Auto-fallback	<input type="checkbox"/> Enable, when receive the specified SIP codes Edit ▶
T.38 Fax Relay	<input type="checkbox"/> Enable, Max Bit Rate: 14400 bps ▼

VoIP through IP Interface: Select where to send/receive the voip traffic, either ipwan or iplan.

If the location of the SIP server is in the Internet then select **ipwan**. (Default)

If the VoIP SIP server is on the local Network then select **iplan**.

Voice Frame Size: Frame size is available from 10mSec to 60mSec. Frame size means how many milliseconds the Voice packets will be queued and sent out. It is ideal to have the same frame size in both Caller and Receiver. Default is 20mSec

PSTN Auto-fallback: Whenever a VoIP SIP response error code is received matching the codes in the **Edit** section, the VoIP calls will automatically fallback to PSTN. The call will be sent via the PSTN when VoIP SIP returns a specified error code.

Click the **Edit** to add or remove the response code. Ensure the codes are separated by a comma (,).

For more information about SIP response codes, please check [Here ▶](#) to link to:

<http://voip-info.org/wiki/view/sip+response+codes>

NOTE: PSTN Auto-fallback is not applicable in Australia and should not be enabled.

T.38 Fax Relay: Allows the transfer of facsimile documents in real-time between two standard Group 3 facsimile terminals over the Internet or other networks using IP protocols. It will only function when both sites are enabled to support this feature.

Advanced – PSTN Environment Adjustment

PSTN Environment Adjustment options will help you to adjust the onhook and offhook voltage detection values for your environment. You should use these if the default values are incorrect and result in PSTN calls not being detected properly, e.g. calls being terminated within 5 seconds of being answered. The actual levels are determined by your environment including the number and type of telephones used.

PSTN Environment Adjustment			
PSTN Voltage Configuration	ONHOOK Voltage: <input type="text" value="18"/>	OFFHOOK Voltage: <input type="text" value="4"/>	Hint ▶
Check your PSTN Voltage Levels	<input type="radio"/> Ensure your phone is ONHOOK, click <input type="button" value="Check Level"/>	, value is .	
	<input type="radio"/> Ensure your phone is OFFHOOK, click <input type="button" value="Check Level"/>	, value is .	
<input type="button" value="Apply"/> <input type="button" value="Cancel"/> <input type="button" value="Return"/> ▶			

The PSTN line voltage checks should be made using the phones connected to the Phone Ports of the Router.

OFFHOOK Setting

The purpose of this setting is to ensure that the Router can accurately detect when a phone is in use.

The OFFHOOK line voltage will vary between different phones due to differences in their internal circuitry. The voltage may also vary over time from its initial value when the phone is first connected to the line.

To take your phone OFFHOOK, lift the receiver then press Hook/Flash until you hear your normal PSTN dialtone, not your VoIP dialtone.

Wait several seconds and then press OFFHOOK Check Level.

Note: ONHOOK means hung up, OFFHOOK means in use.

You should check the OFFHOOK value for each telephone you have connected to this device. Set the OFFHOOK voltage to the lowest setting registered for all your telephones, e.g. if your telephones return values of 4, 5 and 7 then you should set your OFFHOOK voltage to 4.

Default value is 4 volts.

Note: The detected values will not automatically be set by the Check Level function; you must enter the lowest level detected after testing all your telephones.

ONHOOK Setting

The purpose of this setting is to ensure that the Router can accurately detect when the phones are not in use.

Some phone equipment uses the line voltage to charge internal batteries and similar functions by taking a small current from the line when the phone is not in use. This will result in the line voltage being reduced from the normal value. Note there is often a delay between hanging up the phone and the charge circuit operating.

To check the ONHOOK voltage setting, ensure that all phones are hung up. Click on the ONHOOK Check Level button and note the reading. Normally this reading will be around 50 volts.

Ensure that the phones have all been hung up for several minutes before checking the level.

Line fault conditions can have a similar effect in reducing the ONHOOK voltage.

The ONHOOK voltage should be set to a value lower than the test level. The default value is 18 volts and will not normally need to be altered.

Phone Port

This section displays status and allows you to edit the account information of your Phones. Click **Edit** to update your phone information.

Phone Configuration

Phone Port

Index	Phone Number	Display Name	Registered	
1			unknown	Edit ▶
2			unknown	Edit ▶

 **Caution!** The VoIP configuration will take effect only when you apply the changes, save configuration and restart the device.

Phone Port 1

Login Account Configuration

Phone Number	<input type="text"/>
Authentication Username	<input type="text"/>
Authentication Password	<input type="password"/>
Confirm Password	<input type="password"/>
Display Name	<input type="text"/>

Codec Preference

Priority 1	PCMU (G.711 u-Law) ▼
Priority 2	G.723 ▼
Priority 3	G726-32 ▼
Priority 4	G.729 ▼
DTMF Method	Inband ▼

Speed Dial

2#	<input type="text"/>
3#	<input type="text"/>
4#	<input type="text"/>
5#	<input type="text"/>
6#	<input type="text"/>
7#	<input type="text"/>
8#	<input type="text"/>
9#	<input type="text"/>

[Volume Control](#) ▶

Login Account Configuration

This information will be the same as that entered in the VoIP Wizard, User Defined Profiles and General Settings pages. See these sections for more detail of the various fields.

Phone Number: This parameter holds the registration ID of the user within the VoIP SIP registrar.

Authentication Username: Usually the same as Phone Number.

Authentication Password: This parameter holds the password used for authentication within VoIP SIP registrar.

Confirm Password: Re-enter the password for confirmation.

Display Name: Name to be displayed.

Codec Preference

Codec is short for Coder-Decoder used for data signal conversion. The order of preference for Codec usage is set here Note that some VSPs require that certain Codecs are available for use eg G.729

G.729: Used to encode and decode voice information into a single packet which reduces the bandwidth consumption.

G.711 μ -LAW: A basic non-compressed encoder and decoder technique. μ -LAW uses pulse code modulation (PCM) encoder and decoder to convert 14-bit linear sample.

G.711A-LAW: A basic non-compressed encoder and decoder technique. A-LAW uses pulse code modulation (PCM) encoder and decoder to convert 13-bit linear sample.

G.723: Used to encode and decode voice information into a single packet which reduces the bandwidth consumption.

G.726-32: Used to encode and decode voice information into a single packet which reduces the bandwidth consumption. Currently only supports bit rate of 32Kbps.

Non-used: Only available in Priority fields 2, 3 and 4. It is selected if codec is not to be used.

DTMF Method: The Inband, RFC 2833 and SIP INFO (RFC 2976) standards are supported.

Speed Dial

Speed Dial may be used to store frequently used telephone numbers which you can access by pressing a single phone button from 0 to 9, followed by the pound sign (#).

For example, to speed dial to a phone number stored on 9, just press keypad **9** then **#**. Your router will automatically call out to the number listed on entry 9.

You can also use this function to store SIP URLs to make SIP to SIP calls.

Examples:


If your friend Tim gives you a SIP URL as sip: 89755@192.246.69.223 then you can fill in the Speed Dial as [89755@192.246.69.223](tel:89755@192.246.69.223).

If your friend Felix gives you a SIP URL as sip: felix@iptel.org then you can fill in as [felix@iptel.org](tel:felix@iptel.org).

If your friend Greg gives you an IP address "192.246.56.56" only, then you can fill in as "192.246.56.56".

If the destination Router is set up for DDNS, you can use the domain name in the Speed Dial field.

Volume Control

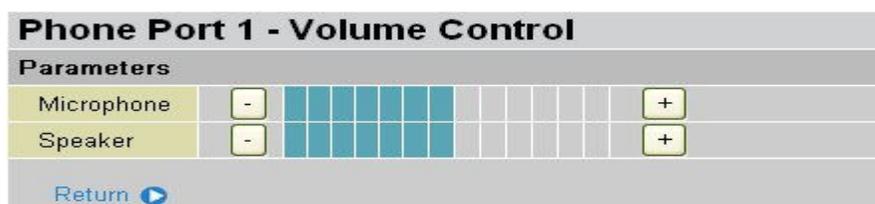

Volume control helps you to adjust the sound level of the telephone to the best comfortable listening level. Echo problems can be caused by having the levels set too high.

Press “-”, the minus sign, to reduce either microphone or/both speaker’s level of your telephone.

Press “+”, the plus sign, to increase either microphone or/both speaker’s level of your telephone.

PSTN Dial Plan (Router with LINE port only)

This section enables you to configure “VoIP with PSTN switching” on your system. You can define a range of dial plans to make regular calls from the phone attached to the Router to be switched to the PSTN line. Emergency Service numbers such as 000 should be dialed via the PSTN to provide location information. Other location sensitive numbers include 13 and 18 numbers.

The first few digits dialed (the ‘Prefix’) are used to distinguish between calls to be routed via VoIP and PSTN. If the actual numbers dialed match with the Prefix number defined in the dial plan, the dialed number will be routed to the PSTN to make a regular call. Otherwise, the number will be routed to the VoIP networks.

The PSTN Dial plan applies to both Phone Ports.

Reminder! In order to utilize this feature, you must have registered and connected to your SIP Server first.

PSTN Dial Plan

[Add Entry](#)

PSTN Dial Plan								
Prefix	Number of Digits	Action						
<div style="border: 1px solid #ccc; padding: 5px; margin: 5px auto; width: 80%;"> <h4 style="margin: 0;">Add PSTN Dial Plan Entry</h4> <p>Parameters</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%; border: 1px solid #ccc;">Prefix</td> <td style="border: 1px solid #ccc;"><input type="text"/></td> </tr> <tr> <td style="border: 1px solid #ccc;">Number of Digits</td> <td style="border: 1px solid #ccc;"><input type="text" value="15"/> (0..15)</td> </tr> <tr> <td style="border: 1px solid #ccc;">Action</td> <td style="border: 1px solid #ccc;">Dial with Prefix <input type="button" value="v"/></td> </tr> </table> <div style="margin-top: 5px;"> <input type="button" value="Apply"/> <input type="button" value="Cancel"/> <input type="button" value="Return"/> </div> </div>			Prefix	<input type="text"/>	Number of Digits	<input type="text" value="15"/> (0..15)	Action	Dial with Prefix <input type="button" value="v"/>
Prefix	<input type="text"/>							
Number of Digits	<input type="text" value="15"/> (0..15)							
Action	Dial with Prefix <input type="button" value="v"/>							

Prefix: Specify number(s) for switching to a PSTN call.

Number of Digits: Specify the total number of digits to dial out (excluding the Prefix). Maximum is 15.

Action: Specify a dialing method you wish to make PSTN call(s).

⊙ **Dial with Prefix:** The dialed number **including** the prefix will be sent through the PSTN, when the specified Number of Digits has been dialed.

Note: The number of digits dialed must match the value in the Number of Digits field.

⊙ **Dial without Prefix:** The dialed number will be sent call through the PSTN **without** the prefix, when the specified Number of Digits has been dialed.

Note: The number of digits dialed must match the value in the Number of Digits field.

⊙ **Dial at Timeout:** The dialed number will be sent through the PSTN **with** the prefix after a timeout. This timeout activates when no more digits are dialed in a specific duration (4 Secs).

Note: The value in the Number of Digits field specifies the maximum length of the dialed number.

⊙ **Dial at Timeout no Prefix:** The dialed number will be sent through the PSTN **without** the prefix after a timeout. This timeout activates when no more digits are dialed in a specific duration (4 secs).

Note: The value in the Number of Digits field specifies the maximum length of the dialed number.

**Attention**

Phone Port 1 and 2 will automatically switch to the PSTN line when:

- **The Router is Powered Down**
- **The Internet Service Fails**, i.e., lost of WAN IP Address
- **SIP option is disabled**. See *VoIP General Setting* section.
- **Calls match with rule(s) defined in the *PSTN or VoIP Dial Plan***.
- **SIP service is not accessible:**
 - User manually disables Registration.
 - User inserts a wrong authentication Username or Password.
 - User dials a wrong SIP number, if the *PSTN Auto-Fallback* function is not enabled. See *VoIP General Setting / Advanced* for information.

PSTN Dial Plan Examples:**1) Dial with Prefix**

Add Dial Plan Entry	
Parameters	
Prefix	<input type="text" value="01223"/>
Number of Digits	<input type="text" value="6"/> (0..15)
Action	Dial with Prefix <input type="button" value="v"/>
<input type="button" value="Apply"/> <input type="button" value="Cancel"/> <input type="button" value="Return"/>	

If you dial 01223 707070, number 01223707070 will be dialed out via the FXO (PSTN) port to make a regular phone call.

2) Dial without Prefix

Add Dial Plan Entry	
Parameters	
Prefix	<input type="text" value="9"/>
Number of Digits	<input type="text" value="3"/> (0..15)
Action	Dial without Prefix <input type="button" value="v"/>
<input type="button" value="Apply"/> <input type="button" value="Cancel"/> <input type="button" value="Return"/>	

If you dial 9102, the number 102 will only be dialed out via FXO (PSTN) port to make a regular phone call.

3) Dial at Timeout

Add Dial Plan Entry	
Parameters	
Prefix	<input type="text" value="01223"/>
Number of Digits	<input type="text" value="6"/> (0..15)
Action	Dial at Timeout <input type="button" value="v"/>
<input type="button" value="Apply"/> <input type="button" value="Cancel"/> <input type="button" value="Return"/>	

If you only dial 01223 7070 and no more numbers, after the timeout activates, 012237070 will be dialed to make a regular call via FXO (PSTN) port.

Even though 7070 (only 4 digits) does not match with number of digits 6 defined in the field, 7070 is still a valid phone number since it does not exceed 6 digits.

4) Dial at Timeout no Prefix

Add PSTN Dial Plan Entry	
Parameters	
Prefix	<input type="text" value="9"/>
Number of Digits	<input type="text" value="6"/> (0..15)
Action	Dial at Timeout no Prefix <input type="button" value="v"/>
<input type="button" value="Apply"/> <input type="button" value="Cancel"/> <input type="button" value="Return"/>	

If you dial 97070 and no more numbers, after the timeout activates, 7070 will be dialed without prefix to make a regular call via FXO (PSTN) port.

Even though 7070 (only 4 digits) does not match with number of digits 6 defined in the field, 7070 is still a valid phone number since it does not exceed 6 digits.

VoIP Dial Plan

This section describes how to set up dialling rules for each Phone Port. Dialling rules may be used for a range of range of functions including:

- to route calls to specific VSP accounts depending on the type of call (local, interstate, overseas, mobile)
- to automatically add Area Codes for local calls

VoIP Dial Plan 1	
Parameters	
Special Digit Sequences	<input checked="" type="checkbox"/> *69 Return Call
	<input checked="" type="checkbox"/> *20 enable 'Don't Disturb' / *80 disable 'Don't Disturb'
	<input checked="" type="checkbox"/> *90x. Blind Call Transfer
	<input checked="" type="checkbox"/> x# Speed Dial (x: 2..9)
	<input checked="" type="checkbox"/> ## Redial
	<input checked="" type="checkbox"/> *74<x><number># Set the number of Speed Dial Code <x> (x: 2..9)
	<input type="checkbox"/> *67 Anonymous Call
	<input type="checkbox"/> Phone number +#(pound key). Immediate Call Out Service
<input type="button" value="Apply"/> <input type="button" value="Test"/>	
Dial Plan Rules List	
Rule Name	
x.T	<input type="button" value="Delete"/>
<input type="button" value="Add"/>	

Parameters - Special Digit Sequences

A list of special dialling features are predefined and may be enabled by selecting the checkboxes. A number of these are enabled by default but may be disabled if not required.

***69 (Return Call):** Dial *69 to return the last missed call. It is only available for VoIP call(s).

***20 (Do not Disturb ON):** Dial *20 to set the No Disturb on. Your phone will not ring if someone calls.

***80 (Do not Disturb OFF):** Dial *80 to set the No Disturb off. Your will ring when someone calls.

***90x (Blind Call Transfer):** Dial *90 + phone-number to transfer a call to a third party.

x# Speed Dial (x:2..9): Refer to **Phone Port** section in the Web GUI. Set up your Speed Dial phone book first before accessing the Speed Dial feature.

Redial: Press ## to redial the latest number you dialed.

***74<x><number>#:** Use your phone key pad to insert a phone number to the Speed Dial phone book. Refer to the **Phone Port** section in the Web GUI for details.

***67 Anonymous Call:** Hide your own phone number for each call. It is only applied to the next call when you enter this control character. The detailed operation procedure is:

“Off Hook -> *67 -> On Hook -> Off Hook -> Dial”. This feature is disabled by default.

Phone Number + # Immediate Call Out: If enabled, you can dial out a phone number without waiting for the post dialing timeout by dialing # after the required number. The default VSP account for the Phone Port will be used ie other Dial Plan rules will not apply. This feature is disabled by default.

Test: Launches a screen which may be used to test the dial plan rules.

Click **Apply** to apply the settings.

Dial Plan Rules List

Click **Add** to create and define VoIP dial-plan rule(s).

Create Rule

Parameters

Prefix Processing	<input type="radio"/> Prepend <input style="width: 100px;" type="text"/> unconditionally
	<input type="radio"/> If prefix is <input style="width: 100px;" type="text"/> , delete it
	<input type="radio"/> If prefix is <input style="width: 100px;" type="text"/> , replace with <input style="width: 100px;" type="text"/>
	<input checked="" type="radio"/> No prefix
Main Digit Sequence	<input style="width: 150px;" type="text"/> @ <input type="text" value="Current Profile"/>

Digit Sequence Example:

x.	Any digit number between 0 and 9 in variable length. Maximum length is 16.
xxx	Any 3 digit number only between 0 and 9. Total length is 3. No period needed (.)
xxxx.	Any number between 0 and 9 with variable length but no shorter than 3 digits. Maximum Length is 16.
123x.	Any number (0-9) starting with 123. Maximum length is 16.
[124]x.	Any number (0-9) starting with 1 or 2 or 4. Maximum length is 16.
[1-3]x.	Any number(0-9) starting with number 1 to 3. Maximum length is 16.
9[4-6]8x.	Any number (0-9) starting with 9, the second number between 4-6, and third number 8. Maximum length is 16.

Prefix Processing:

Prepend xxx unconditionally: xxx number is appended unconditionally to the front of the dialled number when making a call. Prefix can include numbers and/or character such as +, *, #. Commonly used for prepending Area Code for local numbers.

Note: For special service with +, *, #, you may need to check with your VoIP or Local Telephone Service Provider for information on how these will be handled.

If Prefix is xxx, delete it: Prefix xxx is removed from the dialled numbers before making a call.

If Prefix is xxx, replace with yyy: Prefix xxx is removed and replaced with yyy at the front of the dialed numbers when making a call.

No prefix: No prefix is appended to the front of the dialing numbers. This is the default.

Main Digit Sequence

This field specifies the main number pattern to be matched after the Prefix operations.

Characters which may be used are:

x: Any numeric number between 0 and 9.

. (period): Repeat numeric number(s) between 0 and 9.

*** (asterisk sign):** The character '*' on phone key pad. Please check if it is supported by your VoIP Service Provider or Local Telephone Service Provider for special service(s).

(pound sign): The character '#' on phone key pad. Please check if it is supported by your VoIP Service Provider or Local Telephone Service Provider for special service(s).

Provider field specifies how the dialed number is to be routed to place the call. The list will include User defined Profiles as set up in the VoIP Wizard section.

<@ Current Profile>: Refers to the VoIP account registered on the Phone Port.

<@ PSTN>: The call will be routed via the PSTN line.

<@ENUM>: Used to make a VoIP SIP direct call via E.164 number ("ENUM") to an ENUM callee. Electronic Number (ENUM) uses DNS (Domain Network System) technology to map between a traditional phone number (PSTN) to an Internet address / SIP URL. The ENUM number must be registered via a public ENUM site or your VoIP Service Provider.

<@ SIPgateway>: Used for the *Intelligent Call Routing* feature. The call will be routed via the selected VSP as specified in the **VoIP User-Defined Profiles** link on the VoIP Wizard page. Go to the *VoIP Wizard* in this manual for more information.

Dial-Plan Examples:	Description
x.	Any number of digits up to a maximum of 16. Note the period required. Dialed after timeout.
xxx	Any three digit number. Note: No period is needed (.) Dialed after third digit.
xxxx.	Any number with variable length, but no shorter than four digits. Maximum length is 16. Note the period required. Dialed after timeout.
123x.	Any number starting with the digit sequence 123. Maximum length is 16. Note the period required. Dialed after timeout.
[x...x]x. For example: [124]x.	Any number (0-9) starting with 1 or 2 or 4. Maximum length is 16. Note the period required. Dialed after timeout.
[x-x]x. For example: [1-3]x.	Any number starting with a digit in the range 1 - 3. Maximum length is 16. Note the period required. Dialed after timeout.
x[x-x]x. For example: 9[4-6]8x.	Any number starting with 9, the second number between 4-6, and third number 8. Maximum length is 16. Note the period required. Dialed after timeout.

Special Dial Plan Examples:	Description
*xx*x.	Starting with '*' sign' + any two digit numbers + any number (0-9) in variable length. Maximum length is 16. Note the period required. Dialed after timeout.
xx	Starting with '' sign' + any 2 digit numbers between 0 and 9. Total length including the * is 3. Note: No period is needed (.) Dialed after second digit.
xx*x.	Starting with ' sign' + any two digit numbers between 0 + any number (0-9) in variable length. Maximum length is 16. Note the period required. Dialed after timeout.
#xx.	Starting with '# sign' + any digit number in variable length but no shorter than 2 digits. Maximum length is 16. Note the period required. Dialed after timeout.
##xx*x.	Starting with '## sign' + any two digit numbers + '*' sign' + any number (0-9) in variable length. Maximum length is 16. Note the period required. Dialed after timeout.

Intelligent Call Routing Example:

VoIP Profiles are set up for three VoIP/SIP providers - *localcheap.com*, *longdischeap.com* and *mobilecheap.com*.

Each provider has a price for different type of calls and I can set up rules for each provider to handle the appropriate type of calls.

- For Local calls I want to use *localcheap.com* that charges \$0.01 per minute for all local calls. I set up a dial rule <:03>[123]x.T

Create Rule

Parameters

Prefix Processing	<input checked="" type="radio"/> Prepend <input type="text" value="03"/> unconditionally <input type="radio"/> If prefix is <input type="text"/> , delete it <input type="radio"/> If prefix is <input type="text"/> , replace with <input type="text"/> <input type="radio"/> No prefix
Main Digit Sequence	<input type="text" value="[123]x."/> @ <input type="text" value="Current Profile"/>

Localcheap.com is the default VoIP provider I set up on the Phone Port.

When I dial any number starting with 1 or 2 or 3, plus rest of the phone number for the local call, 03 is always prepended in front of these numbers.

If the digits 2329 5101 are dialed, 03-2-3295101 is the actual phone number called out via the *localcheap.com* provider.

- 2) For International calls I want to use *longdischeap.com* that charges \$0.05 per minute for all long distance calls.

I set up a dial rule **0[2456]x.T<@LongdisCheap>**

Create Rule	
Parameters	
Prefix Processing	<input type="radio"/> Prepend <input type="text"/> unconditionally
	<input type="radio"/> If prefix is <input type="text"/> , delete it
	<input type="radio"/> If prefix is <input type="text"/> , replace with <input type="text"/>
	<input checked="" type="radio"/> No prefix
Main Digit Sequence	<input type="text" value="0[2456]x."/> @ <input type="text" value="LongdisCheap"/>
<input type="button" value="Apply"/> <input type="button" value="Return"/>	

Longischeap.com is one of the VoIP providers I have set up in the User-Defined Profile.

No prefix is attached to the dialed number when I dial the digit 0 plus any following number 2 or 4 or 5 or 6, plus the rest of the phone number for a long distance call.

If 02 8923 4567 is dialed, then 0-2-89234567 is the actual phone number called out via *longdischeap.com* provider.

- 3) For Mobile calls on Phone Port 2, I want to use *mobilecheap.com* that charges \$0.25 per minute to all local calls.

I set up a dial rule **<123:09>39x.T** on Phone Port 2.

Create Rule	
Parameters	
Prefix Processing	<input type="radio"/> Prepend <input type="text"/> unconditionally
	<input type="radio"/> If prefix is <input type="text"/> , delete it
	<input checked="" type="radio"/> If prefix is <input type="text" value="123"/> , replace with <input type="text" value="09"/>
	<input type="radio"/> No prefix
Main Digit Sequence	<input type="text" value="39x."/> @ <input type="text" value="Current Profile"/>
<input type="button" value="Apply"/> <input type="button" value="Return"/>	

Mobilecheap.com is the default VoIP provider I set on Phone Port 2.

When I call out 123-39-45678 for a mobile call, 123 is replaced with 09.

Therefore, 09-39-45678 is the actual phone number called out via *Mobilecheap.com* provider.

The Intelligent Call Gateway facility can be used to automatically route calls to different providers to take advantage of different call rates.

Call Features

This section allows users to set up call handling features including Call Forwarding, Call Waiting and Anonymous Call. These settings are applied independently to each Phone Port.

Call Features Setting	
Setting for Phone Port 1	
Call Forwarding	<input type="checkbox"/> All calls forward to <input type="text"/>
	<input type="checkbox"/> Busy calls forward to <input type="text"/>
	<input type="checkbox"/> No Answer calls forward to <input type="text"/>
Incoming No Answer Timer	32 <input type="text"/> seconds
Call Waiting	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Anonymous Call	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Setting for Phone Port 2	
Call Forwarding	<input type="checkbox"/> All calls forward to <input type="text"/>
	<input type="checkbox"/> Busy calls forward to <input type="text"/>
	<input type="checkbox"/> No Answer calls forward to <input type="text"/>
Incoming No Answer Timer	32 <input type="text"/> seconds
Call Waiting	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Anonymous Call	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
<input type="button" value="Apply"/> <input type="button" value="Cancel"/>	

Call Forwarding

All Calls: If selected by clicking on the checkbox, all calls will be forwarded to the specified number.

Busy Calls: If selected by clicking on the checkbox, calls will be forwarded to the specified number if the Phone Port is in use.

No Answer: If selected by clicking on the checkbox, calls will be forwarded to the specified number if the call is not answered within the specified time.

Call Waiting

The Call Waiting facility may be Enabled or Disabled by selecting the respective radio button.

If Enabled, Call Waiting tone will be heard on a SIP/VoIP call in progress on the Phone Port when an incoming call occurs.

NOTE: This facility only applies to SIP/VoIP calls.

Anonymous Call

The Anonymous Call facility may be Enabled or Disabled by selecting the respective radio button.

If Enabled, outgoing calls will not display the CLI information.

NOTE: This facility is not applicable in Australia and should be set to Disable.

Ring & Tone

This section allows advanced users to change the existing parameters for the various ring tones (dial tone, busy tone, answer tone etc.)

Ring & Tone Configuration							
Country Specific Ring & Tone							
Region	UK						
Ring Parameters							
	On 1	Off 1	On 2	Off 2	On 3	Off 3	
Ring Cadence (in ms)	400	200	400	2000	0	0	
Tone Parameters							

Country Specific Ring & Tone

Region: Select a country ring-tone, from the drop-down list, to suit where you are located. This VoIP router provides default parameter of ring tones according to different countries. The ring-tone parameters are automatically displayed after entering a specific country. If your country is not in the list, you may manually create ring-tone parameters.

Ring Parameters

Ring Cadence (in ms): Ring cadence is defined by three field sets containing the required Frequency:

- On Time1, Off Time1
- On Time2, Off Time2
- On Time3, Off Time3

Frequency is specified in Hertz. Time is given in milliseconds.

Tone Parameters

You may need to check with your local telephone service provider or regulator for information about how these tones are used in your area.

Also, it is recommended that this option be configured by an advanced user, unless you are instructed to do so.

Click **Apply** to apply the settings.

Special Dial Codes

The following table lists the special dial codes that are built-in to the system:

Option	Description
Flash-hook (Router with LINE port only)	Switch to PSTN line Note: A quick press of the hook. On some phones a button is provided which provides Flash-hook functionality. The button is marked "FLASH" or "RECALL".
*69	Return the last missed call for SIP service only Note: Entering this on a phone will call the last number which made a call to the phone. For example A makes a call to B, but hangs up before B answers. If B enters *69, A will be called.
##	Last number redial
*20	Set do not disturb on Note: It is possible to set a Do-Not-Disturb feature on a phone such that any phone which calls the phone will receive an engaged tone and the phone called will not ring. For example, B enters *20 and hangs up. A makes a call to B, and receives the engaged tone and phone B does not ring.
*80	Set do not disturb off
*74<x><number>#	Set the number for Speed dial code 'x', where 'x' is a number between 2 and 9. Note: Where <x> is a number between 2 and 9, and <number> is the number to dial. The code needed to dial a speed dial from a phone connected to a VoIP Router is: <x>#, where <x> is a number between 2 and 9. The settings will infect to your setting in Speed Dial on WEB GUI.
*90<phone-number>	Set the number for performing Blind Call Transfer , where <phone-number> is the number that you wish to transfer the call to. It's for SIP service only. Note: In Blind Call Transfer , you have a call in progress (incoming or outgoing) and decide you wish to transfer the call to another phone. To transfer the call, perform the following steps: 1. Hook-flash to get a dial tone. 2. Dial *90<phone-number> (e.g. *907401), there will be a confirmation tone then hang up. The other end will hear ring back and the called third-party phone will ring. When the third-party phone is picked up the two calls will be connected. If the third-party phone does not answer then the caller being transferred can hang up to cancel the connect attempt.

QoS - Quality of Service

QoS function helps you to control your network traffic for each application from LAN (Ethernet and/or Wireless) to WAN (Internet). It facilitates you to control the different quality and speed of through put for each application when the system is running with full loading of upstream.

Here are the items within the **QoS** section: **Prioritization** and **Outbound / Inbound IP Throttling** (bandwidth management).

Prioritization

There are three priority settings to be provided in the Router:

- ⦿ **High**
- ⦿ **Normal** (The default is normal priority for all of traffic without setting)
- ⦿ **Low**

The balance of utilization for each priority are High (60%), Normal (30%) and Low (10%).

Prioritization							
Configuration (from LAN to WAN packet)							
Application	Time Schedule	Priority	Protocol	Source Port	Source IP Address Range ('0.0.0.0' means Any)		DSCP Marking
				Destination Port	Destination IP Address Range ('0.0.0.0' means Any)		
PPTP	Disabled	High	GRE	none	0.0.0.0	~0.0.0.0	Disabled
	Always On	High	any	0 ~ 0	0.0.0.0	~0.0.0.0	Disabled
	Always On	High	any	0 ~ 0	0.0.0.0	~0.0.0.0	Disabled
	Always On	High	any	0 ~ 0	0.0.0.0	~0.0.0.0	Disabled
	Always On	High	any	0 ~ 0	0.0.0.0	~0.0.0.0	Disabled
	Always On	High	any	0 ~ 0	0.0.0.0	~0.0.0.0	Disabled
	Always On	High	any	0 ~ 0	0.0.0.0	~0.0.0.0	Disabled
	Always On	High	any	0 ~ 0	0.0.0.0	~0.0.0.0	Disabled
	Always On	High	any	0 ~ 0	0.0.0.0	~0.0.0.0	Disabled

Click Clear

You can click **Clear** to delete the existing Application.

Application: User-define description to identify this new policy/application.

Time Schedule: Scheduling your prioritization policy. The 'VoIP In Use' setting may be used to apply the rule only when a VoIP call is in progress.

Priority: The priority given to each policy/application. Its default setting is set to High; you may adjust this setting to fit your policy/application.

Protocol: The name of supported protocol.

Source Port: The source port of packets to be monitored.

Destination Port: The destination port of packets to be monitored.

Source IP Address Range: The source IP address or range of packets to be monitored.

Destination IP address Range: The destination IP address or range of packets to be monitored.

DSCP Marking: Differentiated Services Code Point (DSCP), is the first 6 bits in the ToS byte. DSCP Marking allows users to assign specific application traffic to be executed in priority by the next Router based on the DSCP value. See Table 4. The DSCP Mapping Table:

Note: To be effective, the router(s) in the backbone network must have the capability for checking and executing the DSCP throughout the QoS network.

Table 4: DSCP Mapping Table

DSCP Mapping Table	
ADSL Router	Standard DSCP
Disabled	None
Best Effort	Best Effort (000000)
Premium	Express Forwarding (101110)
Gold service (L)	Class 1, Gold (001010)
Gold service (M)	Class 1, Silver (001100)
Gold service (H)	Class 1, Bronze (001110)
Silver service (L)	Class 2, Gold (010010)
Silver service (M)	Class 2, Silver (010100)
Silver service (H)	Class 2, Bronze (010110)
Bronze service (L)	Class 3, Gold (011010)
Bronze service (M)	Class 3, Silver (011100)
Bronze service (H)	Class 3, Bronze (011110)

Outbound IP Throttling (LAN to WAN)

IP Throttling allows you to limit the speed of IP traffic. The value entered will limit the speed of the application that you set to the specified value's multiple of 32kbps.

Outbound IP Throttling						
Configuration (from LAN to WAN packet)						
Application	Time Schedule	Protocol	Source Port	Source IP Address Range (0.0.0.0' means Any)		Rate Limit
			Destination Port	Destination IP Address Range (0.0.0.0' means Any)		
<input type="text"/>	Always On	any	0 ~ 0	0.0.0.0	~ 0.0.0.0	1 *32 (kbps)
<input type="text"/>	Always On	any	0 ~ 0	0.0.0.0	~ 0.0.0.0	1 *32 (kbps)
<input type="text"/>	Always On	any	0 ~ 0	0.0.0.0	~ 0.0.0.0	1 *32 (kbps)
<input type="text"/>	Always On	any	0 ~ 0	0.0.0.0	~ 0.0.0.0	1 *32 (kbps)
<input type="text"/>	Always On	any	0 ~ 0	0.0.0.0	~ 0.0.0.0	1 *32 (kbps)
<input type="text"/>	Always On	any	0 ~ 0	0.0.0.0	~ 0.0.0.0	1 *32 (kbps)
<input type="text"/>	Always On	any	0 ~ 0	0.0.0.0	~ 0.0.0.0	1 *32 (kbps)
<input type="text"/>	Always On	any	0 ~ 0	0.0.0.0	~ 0.0.0.0	1 *32 (kbps)

Click Clear You can click **Clear** to delete the existing Application.

Application: User-define description to identify this new policy/application.

Time Schedule: Scheduling your prioritization policy. Refer to **Time Schedule** for more information. The 'VoIP In Use' setting may be used to apply the rule only when a VoIP call is in progress.

Protocol: The name of supported protocol.

Source Port: The source port of packets to be monitored.

Destination Port: The destination port of packets to be monitored.

Source IP Address Range: The source IP address or range of packets to be monitored.

Destination IP Address Range: The destination IP address or range of packets to be monitored.

Outbound Rate Limit: To limit the speed of outbound traffic

Inbound IP Throttling (WAN to LAN)

IP Throttling allows you to limit the speed of IP traffic. The value entered will limit the speed of the application that you set to the specified value's multiple of 32kbps.

Inbound IP Throttling					
Configuration (from WAN to LAN packet)					
Application	Time Schedule	Protocol	Source Port	Source IP Address Range (0.0.0.0' means Any)	Rate Limit
			Destination Port	Destination IP Address Range (0.0.0.0' means Any)	
<input type="text"/>	Always On	any	0 ~ 0	0.0.0.0 ~ 0.0.0.0	1 *32 (kbps)
<input type="text"/>	Always On	any	0 ~ 0	0.0.0.0 ~ 0.0.0.0	1 *32 (kbps)
<input type="text"/>	Always On	any	0 ~ 0	0.0.0.0 ~ 0.0.0.0	1 *32 (kbps)
<input type="text"/>	Always On	any	0 ~ 0	0.0.0.0 ~ 0.0.0.0	1 *32 (kbps)
<input type="text"/>	Always On	any	0 ~ 0	0.0.0.0 ~ 0.0.0.0	1 *32 (kbps)
<input type="text"/>	Always On	any	0 ~ 0	0.0.0.0 ~ 0.0.0.0	1 *32 (kbps)
<input type="text"/>	Always On	any	0 ~ 0	0.0.0.0 ~ 0.0.0.0	1 *32 (kbps)
<input type="text"/>	Always On	any	0 ~ 0	0.0.0.0 ~ 0.0.0.0	1 *32 (kbps)

Click Clear

You can click **Clear** to delete the existing Application.

Application: User-define description to identify this new policy/application.

Time Schedule: Scheduling your prioritization policy. Refer to **Time Schedule** for more information. The 'VoIP In Use' setting may be used to apply the rule only when a VoIP call is in progress.

Protocol: The name of supported protocol.

Source Port: The source port of packets to be monitored.

Destination Port: The destination port of packets to be monitored.


Source IP Address Range: The source IP address or range of packets to be monitored.

Destination IP Address Range: The destination IP address or range of packets to be monitored.

Inbound Rate Limit: To limit the speed of for inbound traffic.

Example: QoS for your Network

Connection Diagram

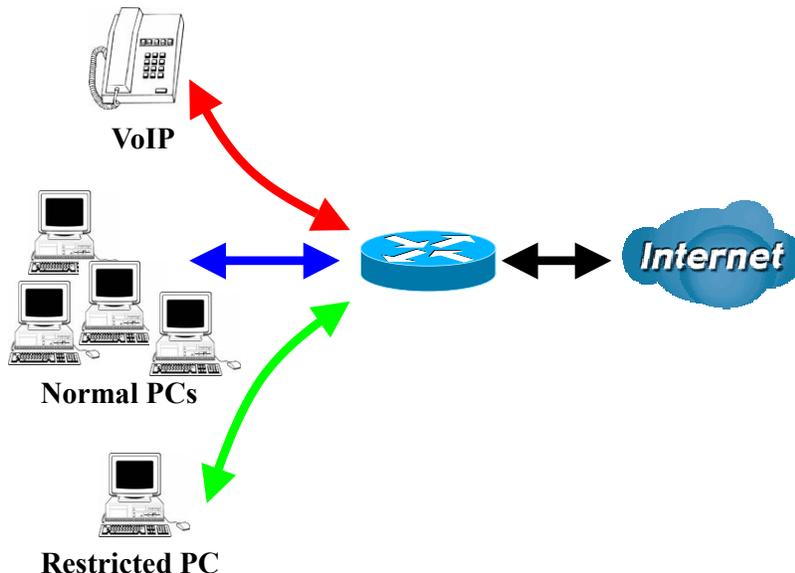

Information and Settings


Upstream: 928 kbps
Downstream: 8 Mbps

VoIP User : 192.168.1.1 (Note: This is a VoIP device external to the Router)
Normal Users : 192.168.1.2 ~ 192.168.1.5
Restricted User : 192.168.1.100

Prioritization

Configuration (from LAN to WAN packet)

Application	Time Schedule	Priority	Protocol	Source Port	Source IP Address Range ('0.0.0.0' means Any)	DSCP Marking
				Destination Port	Destination IP Address Range ('0.0.0.0' means Any)	
PPTP	Always On	High	GRE	none	0.0.0.0 ~ 0.0.0.0	Gold service (L)
				none	0.0.0.0 ~ 0.0.0.0	
VoIP	Always On	High	any	0 ~ 0	192.168.1.1 ~ 192.168.1.1	Gold service (L)
				0 ~ 0	0.0.0.0 ~ 0.0.0.0	
Restricted	TimeSlot1	Low	any	0 ~ 0	192.168.1.100 ~ 192.168.1.100	Gold service (L)
				0 ~ 0	0.0.0.0 ~ 0.0.0.0	

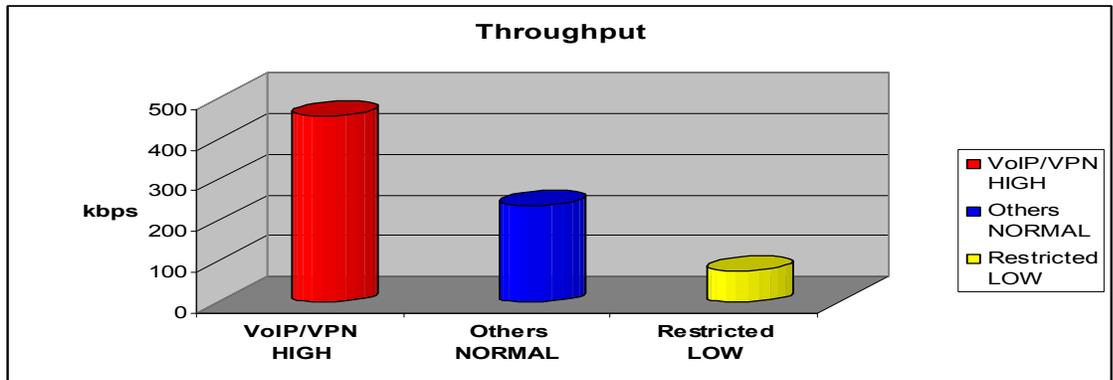

Mission-critical application

Mostly the VPN connection is mission-critical application for doing data exchange between head and branch office.

PPTP	Always On	High	GRE	none	0.0.0.0	~	0.0.0.0	Gold service (L)
				none	0.0.0.0	~	0.0.0.0	

The mission-critical application must be sent out smoothly without any dropping. Set priority as high level for preventing any other applications to saturate the bandwidth.

Voice application

Voice is latency-sensitive application. Most VoIP devices use SIP protocol and the port number will be assigned by SIP module automatically. It is best to assign a fixed IP to the VoIP device, and use this fixed IP address for handling the VoIP packets as high priority.

VoIP	Always On	High	any	0	~	0	192.168.1.1	~	192.168.1.1	Gold service (L)
				0	~	0	0.0.0.0	~	0.0.0.0	

Above settings will help to improve quality of your VoIP service when traffic is full loading.

Restricted Application

Some companies setup FTP servers for customer downloading, or home users sharing their files by using FTP.

Restricted	TimeSlot1	Low	any	0	~	0	192.168.1.100	~	192.168.1.100	Gold service (L)
				0	~	0	0.0.0.0	~	0.0.0.0	

The above settings help to limit utilization of upstream FTP. Time schedule may also help you to limit utilization at particular times, or when VoIP is in use within the Router.

Advanced setting by using IP throttling

With IP throttling you can specify more detail for allocating bandwidth; even when the applications are located in the same priority level.

Example

- Upstream: 928kbps (29*32kbps)
- Mission-critical Application: 192kbps (6*32kbps)
- Voice Application: 128kbps (4*32kbps)
- Restricted Application: 160kbps (5*32kbps)
- Other Applications: 448kbps (14*32kbps)

$6+4+14+5=29, 29*32\text{kbps}=928\text{kbps}$

Outbound IP Throttling						
Configuration (from LAN to WAN packet)						
Application	Time Schedule	Protocol	Source Port	Source IP Address Range	Destination IP Address Range	Rate Limit
			Destination Port	Destination IP Address Range		
PPTP	Always On	gre	0 ~ 0	0.0.0.0 ~ 0.0.0.0	0.0.0.0 ~ 0.0.0.0	6 *32 (kbps)
			0 ~ 0	0.0.0.0 ~ 0.0.0.0		
VolIP	Always On	any	0 ~ 0	0.0.0.0 ~ 0.0.0.0	0.0.0.0 ~ 0.0.0.0	4 *32 (kbps)
			0 ~ 0	0.0.0.0 ~ 0.0.0.0		
Restricted	TimeSlot1	any	0 ~ 0	192.168.1.100 ~ 192.168.1.100	0.0.0.0 ~ 0.0.0.0	5 *32 (kbps)
			0 ~ 0	0.0.0.0 ~ 0.0.0.0		
Others	TimeSlot1	any	0 ~ 0	192.168.1.2 ~ 192.168.1.5	0.0.0.0 ~ 0.0.0.0	14 *32 (kbps)
			0 ~ 0	0.0.0.0 ~ 0.0.0.0		

Sometimes your customers or friends may upload their files to your FTP server and that will saturate your downstream bandwidth. The settings below can help you to limit bandwidth for the restricted application.

Inbound IP Throttling						
Configuration (from WAN to LAN packet)						
Application	Time Schedule	Protocol	Source Port	Source IP Address Range	Destination IP Address Range	Rate Limit
			Destination Port	Destination IP Address Range		
Restricted	TimeSlot1	any	0 ~ 0	0.0.0.0 ~ 0.0.0.0	192.168.1.100 ~ 192.168.1.100	64 *32 (kbps)
			0 ~ 0	192.168.1.100 ~ 192.168.1.100		

Virtual Server (also known as Port Forwarding)

In TCP/IP and UDP networks a port is a 16-bit number used to identify which application program (usually a server) incoming connections should be delivered to. Some ports have numbers that are pre-assigned to them by the IANA (the Internet Assigned Numbers Authority), and these are referred to as “well-known ports”. Servers follow the well-known port assignments so clients can locate them.

If you wish to run a server on your network that can be accessed from the WAN (i.e. from other machines on the Internet that are outside your local network), or any application that can accept incoming connections (e.g. Peer-to-peer/P2P software such as instant messaging applications and P2P file-sharing applications) and are using NAT (Network Address Translation), then you will usually need to configure your router to forward these incoming connection attempts using specific ports to the PC on your network running the application. You will also need to use port forwarding if you want to host an online game server.

The reason for this is that when using NAT, your publicly accessible IP address will be used by, and point to, your Router, which then needs to deliver all traffic to the private IP addresses used by your PCs. Please see the **WAN** configuration section of this manual for more information on NAT.

The Router can be configured as a virtual server so that remote users accessing services such as Web or FTP services via the public (WAN) IP address can be automatically redirected to local servers in the LAN network. Depending on the requested service (TCP/UDP port number), the device redirects the external service request to the appropriate server within the LAN network

Virtual Server (Port Forwarding)

[Add Virtual Server ▶](#)
[Edit DMZ Host ▶](#)
[Edit One-to-one NAT ▶](#)

Virtual Server Table

Application	Time Schedule	Protocol	External Port	Redirect Port	IP Address		

Add Virtual Server

Because NAT can act as a “natural” Internet firewall, your router protects your network from being accessed by outside users when using NAT, as all incoming connection attempts will point to your router unless you specifically create Virtual Server entries to forward those ports to a PC on your network.

When your router needs to allow outside users to access internal servers, e.g. a web server, FTP server, Email server or game server, the router can act as a “virtual server”. You can set up a local server with a specific port number for the service to use, e.g. web/HTTP (port 80), FTP (port 21), Telnet (port 23), SMTP (port 25), or POP3 (port 110), When an incoming access request to the router for a specified port is received, it will be forwarded to the corresponding internal server.

Virtual Server (Port Forwarding)

[Add Virtual Server](#)
[Edit DMZ Host](#)
[Edit One-to-one NAT](#)

Virtual Server Table

Application	Time Schedule	Protocol	External Port	Redirect Port	IP Address
-------------	---------------	----------	---------------	---------------	------------

Add Virtual Server in 'ipwan' IP Interface

Virtual Server Entry

Time Schedule

Application [Helper](#)

Protocol

External Port from to

Redirect Port from to

Internal IP Address [Candidates](#)

[Apply](#) [Return](#)

Time Schedule: User-defined time period to enable your virtual server. You may specify a time schedule or Always On for the usage of this Virtual Server Entry. For setup and detail, refer to **Time Schedule** section

Application: Users-define description to identify this entry or click [Helper](#) to select existing predefined rules.

[Helper](#): Some 20 predefined rules are available. Click the Radio button to select the rule; Application, Protocol and External/Redirect Ports will be filled after the selection.

Protocol: The supported protocol for the virtual server. In addition to specifying the port number to be used, you will also need to specify the protocol used. The protocol used is determined by the particular application. Most applications will use TCP or UDP.

External Port: The Port number on the Remote/WAN side used when accessing the virtual server.

Redirect Port: The Port number used by the Local server in the LAN network.

Internal IP Address: The private IP in the LAN network, which will be providing the virtual server application. [Candidates](#) Lists all existing PCs connecting to the network. You may assign a PC with IP address and MAC from this list.

Example: Remotely Access Router GUI

If you wish to remotely access your Router through the Web/HTTP at all times, you would need to enable port number 80 (Web/HTTP) and map to Router's IP Address (192.168.1.254).

Then all incoming HTTP requests from you (WAN side) will be forwarded to the Router IP address of 192.168.1.254.

Port number 80 has already been predefined, so you can set this up simply by clicking on **Helper**. A list of predefined rules window will pop up and you may and select **HTTP_Server**.

Application: *HTTP_Server*
 Time Schedule: *Always On*
 Protocol: *tcp*
 External Port: *80-80*
 Redirect Port: *80-80*
 IP Address: *192.168.1.254*

Virtual Server (Port Forwarding)
[Add Virtual Server ▶](#)
[Edit DMZ Host ▶](#)
[Edit One-to-one NAT ▶](#)
Virtual Server Table

Application	Time Schedule	Protocol	External Port	Redirect Port	IP Address		
HTTP_Server	Always On	tcp	80 - 80	80 - 80	192.168.1.254	Edit ▶	Delete ▶

Edit: Click it to edit this virtual server application.

Delete: Click it to delete this virtual server application.



Using Port Forwarding does have security implications, as outside users will be able to connect to PCs on your network. For this reason you are advised to use specific Virtual Server entries just for the ports your application requires, instead of using DMZ, as doing so will result in all connections from the WAN attempting to access your public IP of the DMZ PC specified.

**Attention**

If you have disabled the NAT option in the WAN-ISP section, the Virtual Server function will hence be invalid.

If the DHCP server option is enabled, you have to be very careful in assigning the IP addresses of the virtual servers in order to avoid conflicts. The easiest way of configuring Virtual Servers is to manually assign static IP address to each virtual server PC, with an address that does not fall into the range of IP addresses that are to be issued by the DHCP server. You can configure the virtual server IP address manually, but it must still be in the same subnet as the router.

Edit DMZ Host

The DMZ Host is a local computer exposed to the Internet. When setting a particular internal IP address as the DMZ Host, all incoming packets will be checked by the Firewall and NAT algorithms then passed to the DMZ host, when a packet received does not use a port number used by any other Virtual Server entries.

Caution: This Local computer exposed to the Internet may face a variety of security risks.

Virtual Server (Port Forwarding)

Add Virtual Server ▶
Edit DMZ Host ▶
Edit One-to-one NAT ▶

Application	Time Schedule	Protocol	External Port	Redirect Port	IP Address

Edit DMZ Host

DMZ Host for 'ipwan' IP Interface

Enabled Disabled

Internal IP Address Candidates ▶

Return ▶

Disabled: Disables the DMZ function. Default.

Enabled: Activates the DMZ function.

Internal IP Address: Give a static IP address to the DMZ Host when the **Enabled** radio button is checked. Be aware that this IP will be exposed to the WAN/Internet.

Candidates ▶ List all existing PCs connecting to the network. You may assign a PC with IP address and MAC from this list.

Select the **Apply** button to apply your changes.

Edit One-to-One NAT (Network Address Translation)

One-to-One NAT maps a specific private/local IP address to a global/public IP address.

If you have multiple public/WAN IP addresses from your ISP, you are able to use the One-to-One NAT facility to utilize these IP addresses.

Virtual Server (Port Forwarding)

[Add Virtual Server ▶](#)
[Edit DMZ Host ▶](#)
[Edit One-to-one NAT ▶](#)

Virtual Server Table

Application	Time Schedule	Protocol	External Port	Redirect Port	IP Address
-------------	---------------	----------	---------------	---------------	------------

Global IP Pool in 'ipwan' IP interface

Global Address Pool

NAT Type: Disable Public to Private Subnet Public to DMZ Zone

Global IP Addresses: Subnet IP Range

IP Address	<input type="text"/>	Netmask	<input type="text"/>
IP Address	<input type="text"/>	End IP	<input type="text"/>

One-to-one NAT Table [Add Entry ▶](#)

Application	Time Schedule	Protocol	External Port	Redirect Port	IP Address
-------------	---------------	----------	---------------	---------------	------------

NAT Type: Select desired NAT type. By default, the One-to-One NAT function is disabled.

Global IP Address:

- Subnet:** The subnet of the public/WAN IP address given by your ISP. If your ISP has provided this information, you may insert it here. Otherwise, use IP Range method.
- IP Range:** The IP address range of your public/WAN IP addresses. For example, IP: 192.168.1.1, end IP: 192.168.1.10

Select the **Apply** button to apply your changes.

Check [Add Entry ▶](#) to create a new One-to-One NAT rule:

Add Virtual Server in 'ipwan' IP interface

Virtual Server Entry

Time Schedule	Always On ▾
Application Helper ▶	<input type="text"/>
Protocol	tcp ▾
Global IP	<input type="text"/>
External Port	from <input type="text" value="0"/> to <input type="text" value="0"/>
Redirect Port	from <input type="text" value="0"/> to <input type="text" value="0"/>
Internal IP Address Candidates ▶	<input type="text"/>

Time Schedule: User-defined time period to enable your virtual server. You may specify a time schedule or Always on for the usage of this Virtual Server Entry. For setup and detail, refer to **Time Schedule** section

Application: Users-defined description to identify this entry or click [Helper ▶](#) to select existing predefined rules.

[Helper ▶](#): Some 20 predefined rules are available. Click the Radio button to select the rule; Application, Protocol and External/Redirect Ports will be filled after the selection.

Protocol: The supported protocol for the virtual server. In addition to specifying the port number to be used, you will also need to specify the protocol used. The protocol used is determined by the particular application. Most applications will use TCP or UDP;

Global IP: Define a public/ WAN IP address for this Application to use. This Global IP address must be defined in the **Global IP Address**.

External Port: The Port number on the Remote/WAN side used when accessing the virtual server.

Redirect Port: The Port number used by the Local server in the LAN network.

Internal IP Address: The private IP in the LAN network, which will be providing the virtual server application. [Candidates ▶](#) List all existing PCs connecting to the network. You may assign a PC with IP address and MAC from this list.

Select the **Apply** button to apply your changes.

Example: List of some well-known and registered port numbers.

The Internet Assigned Numbers Authority (IANA) is the central coordinator for the assignment of unique parameter values for Internet protocols. Port numbers range from 0 to 65535, but ports numbers 0 to 1023 are reserved for privileged services and are designated as “well-known ports” (Please refer to Table 5). The registered ports are numbered from 1024 through 49151. The remaining ports, referred to as dynamic or private ports, are numbered from 49152 through 65535.

For further information, please see IANA's website at: <http://www.iana.org/assignments/port-numbers>

For help on determining which private port numbers are used by common applications on this list, please see the FAQs (Frequently Asked Questions) at: <http://www.billion.com>

Table 5: Well-known and registered Ports

Port Number	Protocol	Description
20	TCP	FTP Data
21	TCP	FTP Control
22	TCP & UDP	SSH Remote Login Protocol
23	TCP	Telnet
25	TCP	SMTP (Simple Mail Transfer Protocol)
53	TCP & UDP	DNS (Domain Name Server)
69	UDP	TFTP (Trivial File Transfer Protocol)
80	TCP	World Wide Web HTTP
110	TCP	POP3 (Post Office Protocol Version 3)
119	TCP	NEWS (Network News Transfer Protocol)
123	UDP	NTP (Network Time Protocol) / SNTP (Simple Network Time Protocol)
161	TCP	SNMP
443	TCP & UDP	HTTPS
1503	TCP	T.120
1720	TCP	H.323
4000	TCP	ICQ
7070	UDP	RealAudio

Time Schedule

The Time Schedule supports up to 16 time slots which helps you to manage your Internet connection. In each time profile, you may schedule specific day(s) i.e. Monday through Sunday to restrict or allowing the usage of the Internet by users or applications.

This Time Schedule correlates closely with router's time, since router does not have a real time clock on board; it uses the Simple Network Time Protocol (SNTP) to get the current time from an SNTP server from the Internet. Refer to **Time Zone** for details. Your router time should correspond with your local time. If the time is not set correctly, your Time Schedule will not function properly.

Time Schedule						
Time Slot						
ID	Name	Day in a week	Start Time	End Time		
1	TimeSlot1	sMTWTFs	08 : 00	18 : 00	Edit	Clear
2	TimeSlot2	sMTWTFs	08 : 00	18 : 00	Edit	Clear
3	TimeSlot3	sMTWTFs	08 : 00	18 : 00	Edit	Clear
4	TimeSlot4	sMTWTFs	08 : 00	18 : 00	Edit	Clear
5	TimeSlot5	sMTWTFs	08 : 00	18 : 00	Edit	Clear
6	TimeSlot6	sMTWTFs	08 : 00	18 : 00	Edit	Clear
7	TimeSlot7	sMTWTFs	08 : 00	18 : 00	Edit	Clear
8	TimeSlot8	sMTWTFs	08 : 00	18 : 00	Edit	Clear
9	TimeSlot9	sMTWTFs	08 : 00	18 : 00	Edit	Clear
10	TimeSlot10	sMTWTFs	08 : 00	18 : 00	Edit	Clear
11	TimeSlot11	sMTWTFs	08 : 00	18 : 00	Edit	Clear
12	TimeSlot12	sMTWTFs	08 : 00	18 : 00	Edit	Clear
13	TimeSlot13	sMTWTFs	08 : 00	18 : 00	Edit	Clear
14	TimeSlot14	sMTWTFs	08 : 00	18 : 00	Edit	Clear
15	TimeSlot15	sMTWTFs	08 : 00	18 : 00	Edit	Clear
16	TimeSlot16	sMTWTFs	08 : 00	18 : 00	Edit	Clear

Configuration of Time Schedule

Edit a Time Slot

1. Choose any Time Slot (ID 1 to ID 16) to edit, click **Edit**.

Time Schedule						
Time Slot						
ID	Name	Day in a week	Start Time	End Time		
1	TimeSlot1	sMTWTFs	08 : 00	18 : 00	Edit	Clear
2	TimeSlot2	sMTWTFs	08 : 00	18 : 00	Edit	Clear

Click Edit

Note: The days you have selected will be presented as a capital letter. Lower case letters show the days that are not selected, and no rule will apply on these days.

2. A detailed setting of this Time Slot will be shown.

Time Schedule	
Edit Time Slot	
ID	1
Name	<input type="text" value="TimeSlot1"/>
Day	<input type="checkbox"/> Sun. <input checked="" type="checkbox"/> Mon. <input checked="" type="checkbox"/> Tue <input checked="" type="checkbox"/> Wed <input checked="" type="checkbox"/> Thu <input checked="" type="checkbox"/> Fri. <input type="checkbox"/> Sat.
Start Time	08 : 00
End Time	18 : 00
<input type="button" value="Apply"/>	

ID: This is the index of the time slot.

Name: A user-define description to identify this time portfolio.

Day: The default is set from Monday through Friday. You may specify the days for the schedule to be applied.

Start Time: The default is set at 8:00 AM. You may specify the start time of the schedule.

End Time: The default is set at 18:00 (6:00PM). You may specify the end time of the schedule.

Select the **Apply** button to apply your changes.

Delete a Time Slot

Click **Clear** to delete the existing Time profile, i.e. erase the Day and back to default setting of Start Time / End Time.

Advanced

Configuration options within the **Advanced** section are for users who wish to take advantage of the more advanced features of the router. Users who do not understand the features should not attempt to reconfigure their router, unless advised to do so by support staff.

Items within the **Advanced** section include: [Static Route](#), [Dynamic DNS](#), [Check Email](#), [Device Management](#), [IGMP](#) and [VLAN Bridge](#).

Static Route

Click on **Routing Table** and then choose **Create Route** to add a routing table.

Static Route			
Create			
Destination	<input type="text"/>		
Netmask	<input type="text"/>		
via Gateway	<input type="text"/>	or Interface	<input type="text" value=""/>
Cost	<input type="text" value="1"/>		
<input type="button" value="Apply"/> <input type="button" value="Cancel"/>			

Destination: This is the destination subnet IP address.

Netmask: Subnet mask of the destination IP addresses based on the above destination subnet IP.

Gateway: The gateway IP address to which packets are to be forwarded.

Interface: Select the interface through which packets are to be forwarded.

Cost: Route cost (aka Hop). This should usually be left at 1.

Dynamic DNS

The Dynamic DNS function allows you to alias a dynamic IP address to a static hostname, allowing users whose ISP does not assign them a static IP address to use a domain name. This is especially useful for hosting servers via your Internet connection, so that anyone wishing to connect to you may use your domain name, rather than having to use your dynamic IP address, which changes from time to time. This dynamic IP address is the WAN IP address of the router, which is assigned to you by your ISP.

Dynamic DNS	
Parameters	
Dynamic DNS	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Dynamic DNS Server	www.dyndns.org (dynamic) ▾
Wildcard	<input type="checkbox"/> Enable
Domain Name	<input type="text"/>
Username	<input type="text"/>
Password	<input type="text"/>
Period	25 <input type="text"/> Day(s) ▾
<input type="button" value="Apply"/> <input type="button" value="Cancel"/>	

You will first need to register and establish an account with the Dynamic DNS provider using their website, for example <http://www.dyndns.org/>

There are a number of DDNS services supported by the Router.

- Disable:** Check to disable the Dynamic DNS function.
- Enable:** Check to enable the Dynamic DNS function. The following fields will be activated and are required to be filled:

Dynamic DNS Server: Select the DDNS service you have established an account with.

Domain Name, Username and Password: Enter your registered domain name and your username and password for this service.

Period: Set the time period between updates, for the Router to exchange information with the DDNS server. In addition to updating periodically as per your settings, the router will perform an update when your dynamic IP address changes. Default is 25 days.

Check Email

This function allows you to have the router check your POP3 mailbox for new Email messages. The Mail LED on your router will light when it detects new messages waiting for download. You may also view the status of this function using the Status – Email Checking section of the web interface, which also provides details on the number of new messages waiting. See the Status section of this manual for more information.

Check Email	
Parameters	
Check Email	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Account Name	<input type="text"/>
Password	<input type="text"/>
POP3 Mail Server	<input type="text"/>
Period	<input type="text" value="60"/> minutes
Dial-out for Checking Emails	<input type="checkbox"/> Automatic
<input type="button" value="Apply"/>	

Check Email:

Disable: Check to disable the router's Email checking function.

Enable: Check to enable the routers Email checking function. The following fields will be activated and are required to be filled:

Account Name: Enter the name (login) of the POP3 account you wish to check. Normally, it is the text in your email address before the "@" symbol. For some providers, it is the complete string. If you have trouble with it, please contact your ISP.

Password: Enter the account's password.

POP3 Mail Server: Enter your (POP) mail server name. Your Internet Service Provider (ISP) or network administrator will be able to supply you with this.

Period: Enter the value in minutes between periodic mail checks.

Automatically dial-out for checking emails: When the function is enabled, your ADSL router will connect to your ISP automatically to check emails if your Internet connection is dropped. Please be careful when using this feature if your Internet service is charged by time online.

Device Management

The Device Management advanced configuration settings allow you to control your router's security options and device monitoring features.

Device Management			
Device Host Name			
Host Name	<input type="text" value="home.gateway"/>		
Embedded Web Server			
* HTTP Port	<input type="text" value="80"/>	(80 is default HTTP port)	
Management IP Address	<input type="text" value="0.0.0.0"/>	(0.0.0.0 means Any)	
Management IP Netmask	<input type="text" value="255.255.255.255"/>		
Management IP Address(2)	<input type="text" value="0.0.0.0"/>		
Management IP Netmask(2)	<input type="text" value="255.255.255.255"/>		
Expire to auto-logout	<input type="text" value="180"/>	seconds	
Universal Plug and Play (UPnP)			
UPnP	<input type="radio"/> Enable <input checked="" type="radio"/> Disable		
* UPnP Port	<input type="text" value="2800"/>		
SNMP Access Control			
SNMP V1 and V2			
Read Community	<input type="text" value="public"/>	IP Address	<input type="text" value="0.0.0.0"/>
Write Community	<input type="text" value="password"/>	IP Address	<input type="text" value="0.0.0.0"/>
Trap Community	<input type="text"/>	IP Address	<input type="text"/>
SNMP V3			
Username	<input type="text"/>	Password	<input type="text"/>
Access Right	<input checked="" type="radio"/> Read <input type="radio"/> Read/Write		IP Address <input type="text"/>
*: This setting will become effective after you save to flash and restart the router.			
<input type="button" value="Apply"/>			

Embedded Web Server (2 Management IP Accounts)

HTTP Port: This is the port number the router's embedded web server (for web-based configuration) will use. The default value is the standard HTTP port, 80. Users may specify an alternative if, for example, they are running a web server on a PC within their LAN using the standard port.

Management IP Address: You may specify an IP address allowed to logon and access the router's web server. Setting the IP address to 0.0.0.0 will disable IP address restrictions, allowing users to login from any IP address.

Expire to auto-logout: Specify a time frame for the system to auto-logout the user's configuration session.

Example: User A changes HTTP port number to **100**, specifies their own IP address of **192.168.1.55**, and sets the logout time to be **100** seconds. The router will only allow User A access from the IP address

192.168.1.55 to logon to the Web GUI by typing: <http://192.168.1.254:100> in their web browser. After 100 seconds, the device will automatically logout User A.

Universal Plug and Play (UPnP)

UPnP offers peer-to-peer network connectivity for PCs and other network devices, along with control and data transfer between devices. UPnP offers advantages for users running NAT routers through UPnP NAT Traversal, and on supported systems makes tasks such as port forwarding much easier by letting the application control the required settings, removing the need for the user to control advanced configuration of their device.

Both the user's Operating System and the relevant application must support UPnP in addition to the router. Windows XP (and later) and Windows ME natively support UPnP (when the component is installed), and Windows 98 users may install the Internet Connection Sharing client from Windows XP in order to support UPnP. Windows 2000 does not support UPnP.

- Disable:** Check to disable the router's UPnP functionality.
- Enable:** Check to enable the router's UPnP functionality.

UPnP Port: The default setting is 2800. It is recommended for users to use this port value. If this value conflicts with other ports already being used you may wish to change the port.

SNMP Access Control

Simple Network Management Protocol. Software on a PC within the LAN is required in order to utilize this function.

SNMP V1 and V2:

Read Community: Specify a name to be identified as the Read Community, and an IP address. This community string will be checked against the string entered in the configuration file. Once the string name is matched, user obtains this IP address will be able to view the data.

Write Community: Specify a name to be identified as the Write Community, and an IP address. This community string will be checked against the string entered in the configuration file. Once the string name is matched, users from this IP address will be able to view and modify the data.

Trap Community: Specify a name to be identified as the Trap Community, and an IP address. This community string will be checked against the string entered in the configuration file. Once the string name is matched, users from this IP address will be sent SNMP Traps.

SNMP V3:

Specify a name and password for authentication and define the access right from identified IP address. Once the authentication has succeeded, users from this IP address will be able to view and modify the data.

SNMP Version: SNMPv2c and SNMPv3

SNMPv2c is the combination of the enhanced protocol features of SNMPv2 without the SNMPv2 security. The "c" comes from the fact that SNMPv2c uses the SNMPv1 community string paradigm for "security", but is widely accepted as the SNMPv2 standard.

SNMPv3 is a strong authentication mechanism, authorization with fine granularity for remote monitoring.

Traps supported: Cold Start, Authentication Failure.

The following MIBs are supported:

From RFC 1213 (MIB-II):

- System group

- Interfaces group
- Address Translation group
- IP group
- ICMP group
- TCP group
- UDP group
- EGP (not applicable)
- Transmission
- SNMP group

From RFC1650 (EtherLike-MIB):

- dot3Stats

From RFC 1493 (Bridge MIB):

- dot1dBase group
- dot1dTp group
- dot1dStp group (if configured as spanning tree)

From RFC 1471 (PPP/LCP MIB):

- pppLink group
- pppLqr group (not applicable)

From RFC 1472 (PPP/Security MIB):

- PPP Security Group)

From RFC 1473 (PPP/IP MIB):

- PPP IP Group

From RFC 1474 (PPP/Bridge MIB):

- PPP Bridge Group

From RFC1573 (IfMIB):

- ifMIBObjects Group

From RFC1695 (atmMIB):

- atmMIBObjects

From RFC 1907 (SNMPv2):

- only snmpSetSerialNo OID

IGMP

IGMP, known as *Internet Group Management Protocol*, is used to management hosts from multicast group.

IGMP	
Parameters	
IGMP Forwarding	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
IGMP Snooping	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
<input type="button" value="Apply"/>	

IGMP Forwarding: Accepting multicast packet. Default is set to **Enable**.

IGMP Snooping: Allowing switched Ethernet to check and make correct forwarding decisions. Default is set to **Disable**.

VLAN Bridge

This section allows you to create a VLAN group and specify the members.

VLAN Bridge					
Parameters					
Name	VLAN ID	Tagged Ports	UnTagged Ports	Edit	Delete
DefaultVlan	1	None	ethernet,wireless,wireless_wds,wireless_wds2,wireless_wds3,wireless_wds4,	Edit ▶	
Create VLAN ▶					

Edit: Edit your member ports in selected VLAN group.

Create VLAN: To create another VLAN group.

Advanced VLAN Setup Example (Triply Play)

VLAN_data:

Ethernet Port 1, Wireless and Wireless WDS are reserved for Internet
 - On Ethernet port 1 also needs VC 0/40 bridged.

VLAN_Vedio

Ethernet ports: 2, 3 and 4:

- 0/33 Bi-directional IP
- 0/34 Video
- 0/35 Video
- 0/36 Video Subscriber Services (EPG, EAS, etc.)
- 0/37 Video
- 0/38 Video
- 0/39 Spare

Step 1: Setup Member Ports

Go to **Configuration** → **LAN** → **Bridge Interface**.

You can setup member ports for each VLAN group under Bridge Interface section. From the example, two VLAN groups need to be created.

Ethernet: P1 (Port 1)

Ethernet1: P2, P3 and P4 (Port 2, 3, 4) Please uncheck P2, P3, P4 from Ethernet VLAN Port first.

Note: You should setup each VLAN group with caution. Each Bridge Interface is arranged in this order.

Bridge Interface	VLAN Port (Always starts with)
ethernet	P1 / P2 / P3 / P4
ethernet1	P2 / P3 / P4
ethernet2	P3 / P4
ethernet3	P4

Bridge Interface

Parameters

Bridge Interface	VLAN Port
ethernet	<input checked="" type="checkbox"/> P1 <input type="checkbox"/> P2 <input type="checkbox"/> P3 <input type="checkbox"/> P4
ethernet1	<input type="checkbox"/> P1 <input checked="" type="checkbox"/> P2 <input checked="" type="checkbox"/> P3 <input checked="" type="checkbox"/> P4
ethernet2	<input type="checkbox"/> P1 <input type="checkbox"/> P2 <input type="checkbox"/> P3 <input type="checkbox"/> P4
ethernet3	<input type="checkbox"/> P1 <input type="checkbox"/> P2 <input type="checkbox"/> P3 <input type="checkbox"/> P4

Device Management

Management Interface	ethernet
----------------------	----------

Step 2: Create WAN Interface

Go to **Configuration** → **WAN** → **ISP**

wanlink is the factory default WAN interface used for data/internet access. If your ISP uses this access protocol, click **Edit** to input other parameters if needed. If your ISP does not use PPPoE, you can change the default WAN connection entry by clicking **Change**.

From the example, 0/40 is used for data/internet and assumes PPPoE is used; click **Edit** to change the VPI/VCI to 0/40.

Click **Create** to setup up an additional WAN interface for video applications. A total of eight VLANs are supported ie only eight WAN interfaces can be created in the table.

WAN Connection

WAN Services Table

Name	Description	Creator	VPI	VCI		
wanlink	PPPoE WAN Link	QuickStart	0	40	Edit	Change

[Create](#)

From the example, PVC 0/33 to 0/39 is assigned for video using 1483 Bridged mode. Check **RFC 1483 Bridged** and click **Next** to continue the setup.

ISP

Please select the type of service you wish to create

ATM	<input type="radio"/> RFC 1483 Routed	<input checked="" type="radio"/> RFC 1483 Bridged
	<input type="radio"/> PPPoA Routed	<input type="radio"/> IPoA Routed
	<input type="radio"/> PPPoE Routed	Quick Start ▶

[Next](#)

Spaces next to VPI and VCI, enter 0 and 33 respectively. Select appropriate ATM Class, Encapsulation Method, Acceptable Frame Type, Filter Type and PVID for Untagged Frames.

WAN Connection**RFC 1483 Bridged**

Description	RFC 1483 bridged mode
VPI	0
VCI	33
ATM Class	UBR ▼
Encapsulation Method	LLC Bridged ▼
Acceptable Frame Type	acceptall ▼
Filter Type	All ▼
PVID for Untagged Frames	1

[Apply](#)

VPI and VCI: Enter the information provided by your ISP.

ATM Class: The Quality of Service for ATM layer.

Encapsulation method: Select the encapsulation format, this is provided by your ISP.

Acceptable Frame Type: Specify what type of traffic can pass through this connection, all traffic or only VLAN tagged.

Filter Type: Specify the type of ethernet filtering performed by the named bridge interface.

All	Allows all types of ethernet packets through the port.
Ip	Allows only IP/ARP types of ethernet packets through the port.
Pppoe	Allows only PPPoE types of ethernet packets through the port.

PVID for Untagged Frames: PVID stands for Port VLAN Identifier. When an untagged packet is received by input port(s), this packet will be tagged with the specified PVID.

From the example, VPI and VCI is the only section that needs to be modified.

Repeat the same procedure by clicking **Create** → select **RFC1483 Bridged** → fill-in the rest of PVC 0/34 to 0/39.

WAN Connection

WAN Services Table

Name	Description	Creator	VPI	VCI		
wanlink	PPPoE WAN Link	QuickStart	0	40	Edit ▶	Change ▶
rfc1483-0	RFC 1483 bridged mode	WebAdmin	0	33	Edit ▶	Delete ▶
rfc1483-1	RFC 1483 bridged mode	WebAdmin	0	34	Edit ▶	Delete ▶
rfc1483-2	RFC 1483 bridged mode	WebAdmin	0	35	Edit ▶	Delete ▶
rfc1483-3	RFC 1483 bridged mode	WebAdmin	0	36	Edit ▶	Delete ▶
rfc1483-4	RFC 1483 bridged mode	WebAdmin	0	37	Edit ▶	Delete ▶
rfc1483-5	RFC 1483 bridged mode	WebAdmin	0	38	Edit ▶	Delete ▶
rfc1483-6	RFC 1483 bridged mode	WebAdmin	0	39	Edit ▶	Delete ▶

Step 3: Setup VLAN Service

Go to **Configuration** → **Advanced** → **VLAN Bridge**

DefaultVlan lists all member ports. It is necessary to group specific member ports for each VLAN.

From the example, two VLAN groups are requested: Data and Video.

To create another VLAN group for Video by clicking **Create VLAN**.

VLAN Bridge					
Parameters					
Name	VLAN ID	Tagged Ports	UnTagged Ports	Edit	Delete
DefaultVlan	1	None	ethernet,wireless,wireless_wds,wireless_wds2,wireless_wds3,wireless_wds4,rfc1483-0,rfc1483-1,rfc1483-2,rfc1483-3,rfc1483-4,rfc1483-5,rfc1483-6,	Edit ▶	
Create VLAN ▶					

Given a name and ID (PVID) to identify the Video group and the valid value range for PVID is 1 ~ 4094.

Example:

VLAN untagged ports for Data/Internet: ethernet, wireless and wireless_wds.

VLAN untagged ports for Video: ethernet1, rfc-1483-0 ~ rfc-1483-6.

Click **Apply** to made change effective immediately.

Create VLAN			
Parameters			
VLAN Name	<input type="text" value="Video_VLAN"/>	VLAN ID	<input type="text" value="2"/> (2~4094)
Tagged Member Port(s)	<input type="checkbox"/> ethernet <input type="checkbox"/> wireless <input type="checkbox"/> wireless_wds <input type="checkbox"/> wireless_wds2 <input type="checkbox"/> wireless_wds3 <input type="checkbox"/> wireless_wds4 <input type="checkbox"/> rfc1483-0 <input type="checkbox"/> rfc1483-1 <input type="checkbox"/> rfc1483-2 <input type="checkbox"/> rfc1483-3 <input type="checkbox"/> rfc1483-4 <input type="checkbox"/> rfc1483-5 <input type="checkbox"/> rfc1483-6		
Untagged Member Port(s)	<input type="checkbox"/> ethernet <input type="checkbox"/> wireless <input type="checkbox"/> wireless_wds <input type="checkbox"/> wireless_wds2 <input type="checkbox"/> wireless_wds3 <input type="checkbox"/> wireless_wds4 <input checked="" type="checkbox"/> rfc1483-0 <input checked="" type="checkbox"/> rfc1483-1 <input checked="" type="checkbox"/> rfc1483-2 <input checked="" type="checkbox"/> rfc1483-3 <input checked="" type="checkbox"/> rfc1483-4 <input checked="" type="checkbox"/> rfc1483-5 <input checked="" type="checkbox"/> rfc1483-6		
<input type="button" value="Apply"/> <input type="button" value="Cancel"/> <input type="button" value="Return"/> ▶			

VLAN Bridge					
Parameters					
Name	VLAN ID	Tagged Ports	UnTagged Ports	Edit	Delete
DefaultVlan	1	None	ethernet,wireless,wireless_wds,wireless_wds2,wireless_wds3,wireless_wds4,	Edit	
Video_VLAN	2	None	rfc1483-0,rfc1483-1,rfc1483-2,rfc1483-3,rfc1483-4,rfc1483-5,rfc1483-6,	Edit	Delete
Create VLAN					

Mapping the **VLAN Bridge** with **Bridge Interface** created in Step1, you will see the relationship between the two screenshots.

Step 4: IGMP Snooping Enable

Go to **Configuration → Advanced → IGMP**.

IGMP Snooping must be enabled in order to allow video stream forwarding correctly.

IGMP	
Parameters	
IGMP Forwarding	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
IGMP Snooping	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Apply	

Save Configuration to Flash

After changing the router's configuration settings, you must save all of the configuration parameters to FLASH to avoid them being lost after turning off or resetting your router. Click **Save** to write your new configuration to FLASH.

Save Config to FLASH
Please confirm that you wish to save the configuration.
<i>There will be a delay while saving as configuration information is written to FLASH chips.</i>
Apply

Logout

To exit the router's web interface, choose **Logout**. Please ensure that you have saved the configuration settings before you logout.

Be aware that the router is restricted to only one PC accessing the configuration web pages at a time. Once a PC has logged into the web interface, other PCs cannot get access until the current PC has logged out of the web interface. If the previous PC forgets to logout, the second PC can access the page after a user-defined period, by default three minutes. You can modify this value using the **Advanced – Device Management** section of the web interface. Please see the **Advanced** section of this manual for more information.

Chapter 5: Troubleshooting

If the router is not functioning properly, first check this chapter for simple troubleshooting before contacting your service provider or Billion support.

Problems starting up the router

<i>Problem</i>	<i>Corrective Action</i>
None of the LEDs are on when you turn on the router.	Check the connection between the power adapter and the router. If the error persists, you may have a hardware problem. In this case you should contact technical support.
You have forgotten your router login and/or password.	Try the default login and password, refer to Chapter 3. If this fails, you can restore your router to its factory settings by holding the Reset button on the back of your router more than six seconds. Caution: After pressing the RESET button for more than 6 seconds, to be sure you power cycle the device.

Problems with the WAN Interface

<i>Problem</i>	<i>Corrective Action</i>
Initialization of the PVC connection (“linesync”) failed.	Ensure that the telephone cable is connected properly from the ADSL port to the wall jack. The ADSL LED on the front panel of the router should be on. Check that your VPI, VCI, encapsulation type, and type of multiplexing settings are the same as those provided by your ISP. Reboot the router. If you still have problems, you may need to verify these settings with your ISP.
Frequent loss of ADSL linesync (disconnections).	Ensure that all other devices connected to the same telephone line as your router (e.g. telephones, fax machines, analogue modems) have a line filter connected between them and the wall socket (unless you are using a Central Splitter or Central Filter installed by a qualified and licensed electrician), and ensure that all line filters are correctly installed and the right way around. Missing line filters or line filters installed the wrong way around can cause problems with your ADSL connection, including causing frequent disconnections.

Problems with the LAN Interface

<i>Problem</i>	<i>Corrective Action</i>
Can't ping a PC on the LAN.	Check the Ethernet LEDs on the front panel. The LED should be ON for a LAN port that has a PC connected. If it is off, check the cables between your router and the PC. Make sure you have uninstalled any software firewall for troubleshooting.
	Verify that the IP address and the subnet mask are consistent between the router and the workstations.

APPENDIX A: Product Support and Contact Information

Most problems can be solved by referring to the **Troubleshooting** section in the User's Manual. If you cannot resolve the problem with the **Troubleshooting** chapter, please contact the dealer where you purchased this product.

You may also get assistance from Internet forums such as: <http://www.billion.com.au/forum>

Contact Billion

Worldwide

<http://www.billion.com/>

Australia

<http://www.billion.com.au/>

Mac OS is a registered Trademark of Apple Computer, Inc.
Windows 98, Windows NT, Windows 2000, Windows Me and Windows XP are registered Trademarks of Microsoft Corporation.